



DISPLAY REFERENCE

PowerGlove Vision Matrix Display Guide




Recognize animations, mode letters, pairing, and startup feedback.

2026 EDITION / IAIN BENNETT / MIT LICENSE

The blue LED matrix on the **PowerGlove Vision Controller (Arduino UNO Q)** is PowerGlove Vision's status display. It tells you which mode is active and helps distinguish startup, practice, tracking, and pairing. It does not show a game's score or confirm that a game accepted a button.

Use the photographs and descriptions below to recognize the display and decide what to do next.


Recognize the display

What you see	See it	What it means	What to do
Arduino boot logo		The PowerGlove Vision Controller's system software is starting, before PowerGlove Vision controls the display.	Wait for the app's hourglass or normal display.
System heart animation		The board is progressing through system startup.	Wait for the app display.
Pulsing hourglass		PowerGlove Vision is starting.	Allow startup to finish. If it persists, check Dashboard.
Lightning flash, moving cuff, curling glove, and a spark		Gestures are off; the app is in its idle mode.	Open Glove Academy to practice, or choose a game profile on Dashboard.
A large scanning L		Play or Glove Academy lessons are active. L stands for local play or lessons.	Follow the game or practice moves shown in your browser; controller output is paused.
A large scanning T		Gesture tuning is active, including hand setup.	Follow the recording, preview, and save instructions in Glove Academy. Controller output is paused.
A steady A-I , BS , or GB		A game profile is selected, but a calibrated hand is not currently being reported as tracked.	Show your hand and check tracking/calibration on Dashboard.
A-I , BS , or GB gently changing brightness		The app reports a detected, calibrated hand for that profile.	Check Dashboard's controller status before playing. This pulse alone does not mean controls are enabled.
ID , characters, PN , and digits repeating	-	Secure pairing is showing the device identity and temporary PIN.	Follow the Connection page; read each group in order.
A flashing X		The app has requested an error display.	Read Dashboard's error message before deciding whether to reconnect the camera or restart.
A blank matrix		The display has been turned off, the app is stopping, or the board is still starting. It may also have lost power.	Use the browser and board power indicators to distinguish these cases. Blank does not prove shutdown is complete.

Startup: logo, hourglass, then your mode

A typical startup with **Gestures off** selected is:

1. The board shows its Arduino boot logo and system heart animation.
2. The hourglass appears while PowerGlove Vision starts.
3. Once startup finishes, gestures-off mode shows the selected attract animation or connection pixels.

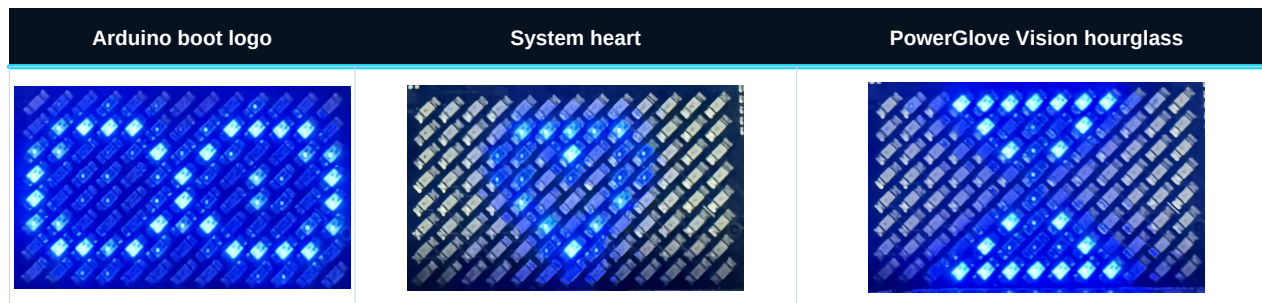


With an active startup profile, the later display can instead be its profile letters. Opening Play or Glove Academy selects **L**; enabling tuning selects **T**. Wait for the camera view and startup message in your browser before practicing or playing.

The hourglass means startup is in progress. If it stays on the display, open Dashboard and check the startup or error message.

Attract brightness and connection pixels

In **Setup -> Matrix attract mode**, select **On**, **Dim**, or **Off** and choose **Save attract mode**. The preference survives upgrades and restarts. On is the default and preserves all eight brightness levels; Dim retains the animation with lit pixels mapped to levels 1-2. Off suppresses the animation.

Off keeps four faint pixels along the bottom-left edge, with a dark pixel between each indicator. From left to right: the app is running; a TCP connection to the configured RetroPie Games service succeeds; and that service answers an authenticated request using the paired token; and the Controller's own Wi-Fi link is connected. The fourth pixel is independent of RetroPie and requires the updated matrix firmware and host sampler. A dark Wi-Fi pixel means disconnected or unavailable; Setup distinguishes these states. These are reachability and pairing indicators, not proof that a running game consumed controller input. An unlit network pixel can also mean the console or Games service is off; it does not independently diagnose Wi-Fi; use the fourth pixel and Setup's Wi-Fi status. Without a configured console, only the app and independently connected Wi-Fi pixels can light.

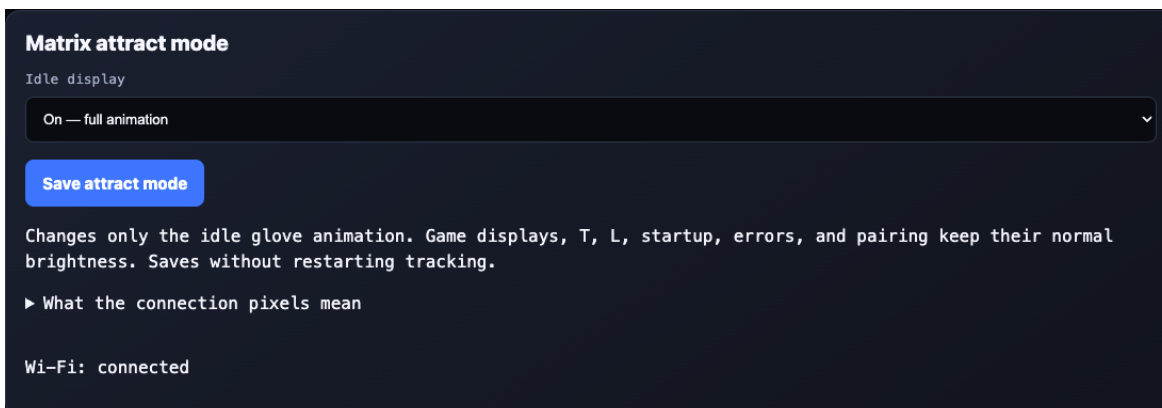


Attract-mode controls in Setup

Connection checks run in the background while Off is selected and the display is idle, approximately every ten seconds. Results expire after thirty seconds. They never send gameplay input. This uses the existing RetroPie Games service on TCP port [55358](#); no RetroPie update is required.

The setting affects only the gestures-off attract display. Game/profile artwork, T, L, startup, errors, pairing, and application shutdown retain their normal brightness and behavior. Saving does not restart the tracker. Install updated matrix firmware before using these controls; the footer identifies older firmware.

The idle glove show

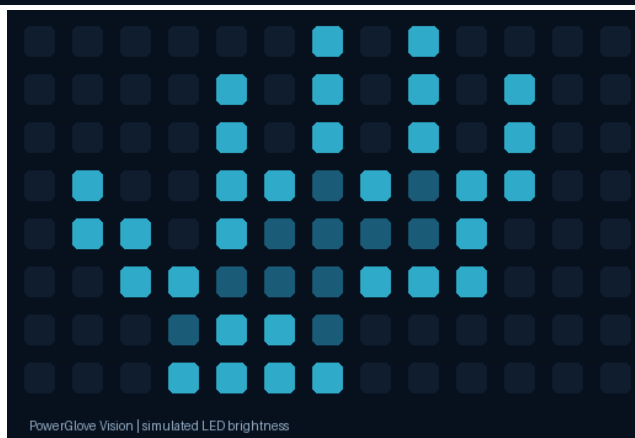

Simulated idle glove: separated fingers, thumb, and wrist cuff.


The roughly four-second loop opens with a lightning bolt flashing twice. The cuff slides in from the right and the hand rises above it, curls into a fist, and reopens. A small spark climbs toward the fingertips, then the glove gently brightens and settles. Separated fingers and a distinct thumb keep the silhouette readable; a dim palm, highlighted edges, and a wrist buckle use the matrix's eight brightness levels (0 is off, 1-7 are lit).

The illustration above simulates the LED levels; actual brightness and glow depend on the physical display. Open [Glove Academy](#) to practice, or choose a game profile on Dashboard when ready to play. Existing installations need a [matrix firmware update](#) to show the revised animation; copying website files alone does not update it.


A flashing spark here does **not** mean you performed Glove Zap. This animation means gestures are off. It is different from selecting a game profile and merely pressing **Stop controller**: that keeps the camera/profile active and can leave profile letters visible.

Local play and Glove Academy: L and T

L: Local play or Glove Academy lessons

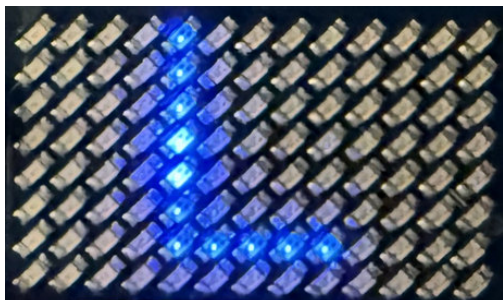

T: Gesture tuning

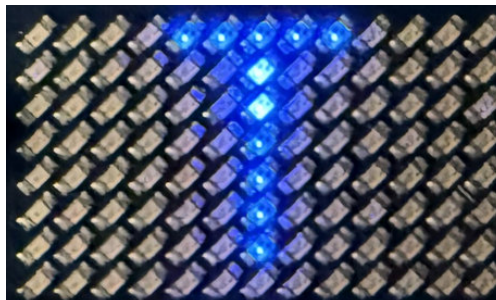

L means local Play or Glove Academy lessons are active. **T** means gesture tuning is active, including **Set up my hand**, individual adjustments, and previews. Follow the browser's instructions to practice or complete your recordings.

Both modes pause controller output. After practice, use Dashboard to check the selected profile and controller state; after tuning, explicitly start controller delivery when ready to play. A pairing display can temporarily cover either letter. Tracking details and pose failures remain in the browser rather than being spelled out on the matrix.

Game profile letters

Letters	See it	Selected profile
A through I		The corresponding reusable Program A-I profile; A is shown
BS		Bad Street Brawler
GB		Super Glove Ball

For example, **GB** is what you should expect with Super Glove Ball selected. It stays steady until a calibrated hand is being tracked, then gently pulses. The characters remain the same: the animation does not identify individual finger curls, movements, or button presses.

The important distinction is **tracking versus delivery**. A pulsing **GB** can appear while controller output is stopped. Confirm **Start controller** has been used and Dashboard shows output enabled, then confirm the action in the game. The matrix does not acknowledge RetroPie receipt or the game's response.

A generic **PG** ready symbol or a small pulsing tracking symbol can appear when no recognized profile identifier is available. These are fallback displays; normal named game profiles use their letters. They do not represent extra games or new gesture commands. If you expected **GB** or **BS**, check the selected profile on Dashboard.

Pairing: ID and PN

During secure pairing, the small display presents the information in pieces:

1. **ID** announces the device certificate identity.
2. Seven hexadecimal characters follow in groups of two, with the last character shown alone.
3. **PN** announces the temporary six-digit PIN.
4. Three pairs of digits follow, preserving leading zeroes.
5. The sequence repeats so you can read it again.

Read each pair from left to right and join the groups in the order shown. Do not mistake **PN** for a game program or use the certificate identity as the PIN.

Follow the Connection page to compare the identifier and enter the PIN. Pairing information temporarily replaces the usual display. If it expires before you finish, prepare a new pairing attempt. Check the page for confirmation that pairing

succeeded.

For public photographs, use a clearly marked demonstration sequence or obscure live pairing digits. Never publish an active PIN or connection credentials. See [secure pairing](#) for the full procedure.

Errors, pauses, and a blank display



A blinking **X** means the app needs attention. Read Dashboard's error message for the cause and the next step. Check Dashboard whenever something is not working, even if the matrix still shows a normal mode.

A blank display alone does not prove the board is safe to unplug. Use the normal Shutdown procedure and its completion guidance. If the board should be running, check its power, wait for boot to finish, and try Dashboard. If the web app works but the display stays blank, record what appeared immediately before it went blank and whether restarting the app changes it.