



PROJECT OVERVIEW

# Power Glove Vision Project Overview

Architecture, controls, security, deployment, and project status.

2026 EDITION / IAIN BENNETT / MIT LICENSE

Camera-only hand tracking for an Arduino UNO Q and a RetroPie arcade cabinet. The hand may be bare or covered by a plain white or black glove; the glove is only a visual tracking aid and contains no electronics.

The project has two processes:

- [powerglove-vision](#) runs on the UNO Q. It observes one hand, calibrates a comfortable neutral pose, converts motion and finger flex into controller state, and sends that state over UDP.
- [powerglove-receiver](#) runs on the Raspberry Pi. It exposes the received state as a Linux virtual gamepad that RetroArch can bind like any other controller.

The current milestone supplies a complete standard-gamepad path, all nine cartridge-free Programs A-I, automatic RetroPie game selection, and preserves four analogue channels plus individual finger values in the network protocol. Native Power Glove packets for Super Glove Ball will be added later through an [lr-nestopia](#) integration; no ROM modification is required.

The standard gamepad path has been verified on the arcade cabinet with [lr-nestopia](#), including automatic selection of the Super Glove Ball profile, directional movement, finger-curl actions, and the held V-sign Start gesture.

Bad Street Brawler's unusual cartridge-resident Programs A-I and their direct camera equivalents are documented in [bad-street-brawler-programs.md](#).

## Pick up the right guide


| Guide                                                         | Best for                                                                                             |
|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| <a href="#">PowerGlove Vision Installation Guide</a>          | First build, secure pairing, RetroArch setup, the Play Checklist, updates, and troubleshooting       |
| <a href="#">Illustrated game and gesture guide</a>            | One-page instructions, gesture drawings, and play tips for every automatically configured game       |
| <a href="#">Programs A-I: The Cartridge-Free Field Manual</a> | Choosing and understanding the nine classic configuration profiles                                   |
| <a href="#">Configuration reference</a>                       | Every repository, installed, private, and generated configuration file and field                     |
| <a href="#">Security policy</a>                               | Private reporting, pairing boundaries, network exposure, shutdown permissions, and release integrity |
| <a href="#">Contributing guide</a>                            | Source style, tests, documentation, changelog, packaging, commits, and pull requests                 |
| <a href="#">Third-party runtime components</a>                | MediaPipe repackaging, model provenance, checksums, licenses, and update procedure                   |
| <a href="#">Changelog</a>                                     | Versioned features, fixes, security changes, and documentation updates                               |
| <a href="#">docs/cheatsheet.md</a>                            | Machine-specific URLs and maintenance notes; contains no private pairing token                       |

The Installation Guide is organized as a six-stage build. New makers can follow it in order; returning builders can jump directly to the Play Checklist, workshop, or symptom-based troubleshooting sections. Print-ready editions live in [output/pdf/](#).

## Current web interface


The UNO Q hosts four pages. They remain available even when RetroPie is off, and the status pages remain available while the camera is disconnected.

Dashboard

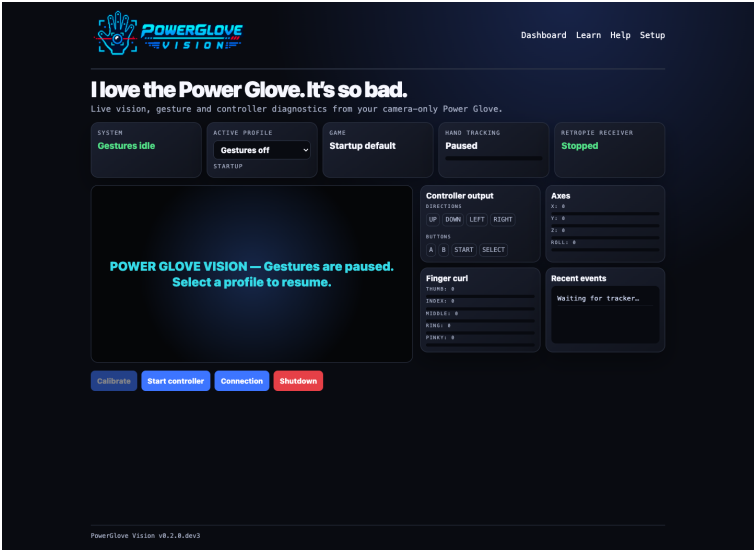


PowerGlove Vision dashboard

Learn

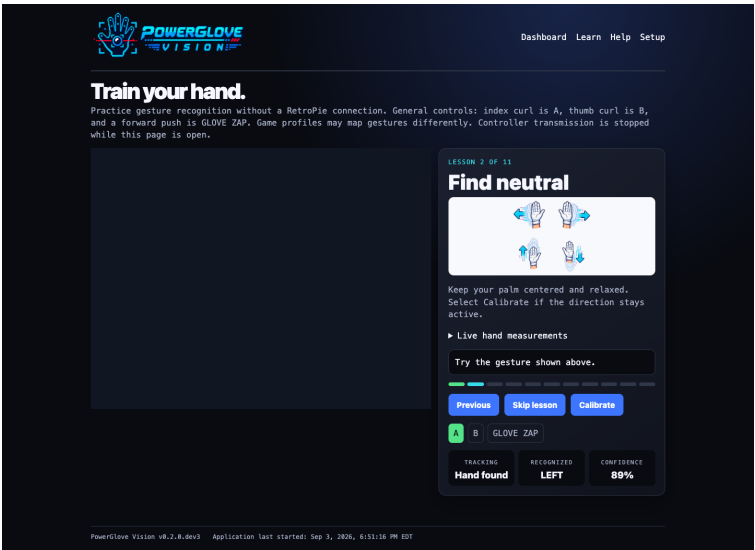


PowerGlove Vision Learn page - camera preview masked for privacy

Help

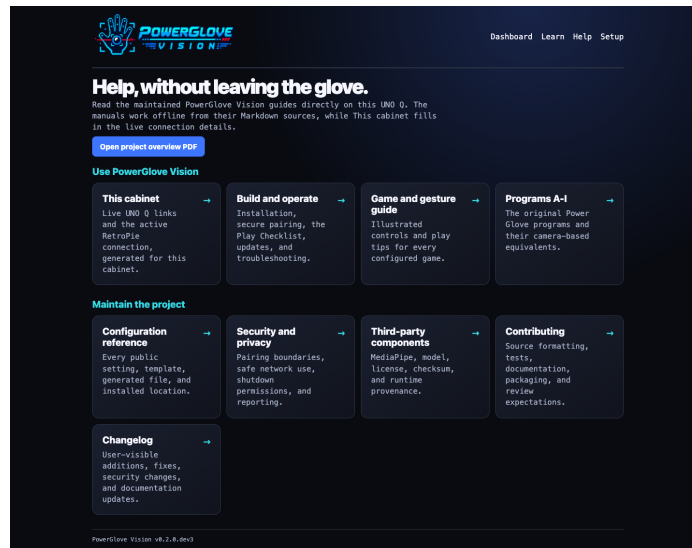

PowerGlove Vision Help library

## Setup

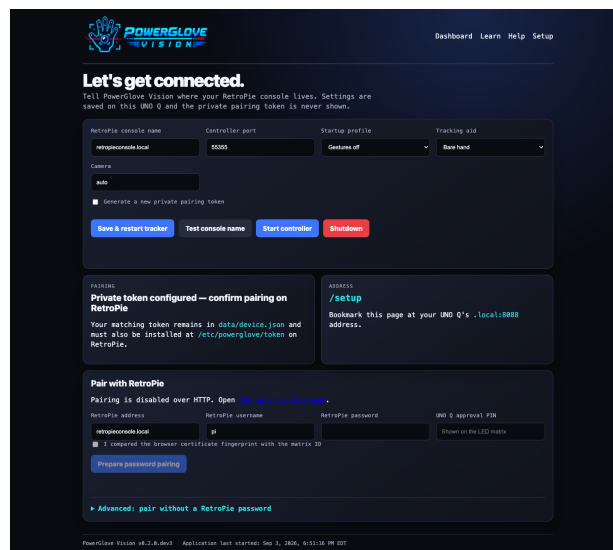

PowerGlove Vision connection setup

- `/debug` shows the camera, selected profile, recognition state and generated controller output.
- `/learn` provides eleven guided exercises and automatically stops controller transmission so it is safe to practise without RetroPie.
- `/help` renders the maintained Markdown manuals as an offline Help library, with guide navigation, contents links, illustrations, tables, code samples, access to the original Markdown, and downloadable PDF editions of every public guide.
- `/help/cabinet` generates a live, non-secret quick reference. UNO Q links use the hostname or IP that opened the page, and RetroPie details come from the active public configuration.
- `/setup` configures the receiver, profile, camera and controller state. Pairing credentials are accepted only by the HTTPS version on port 8443.

- **Shutdown** on Dashboard or Setup safely halts Linux after a confirmation. The tested board may restart automatically; a disconnected website is not confirmation that it is safe to remove power.

Screenshots were refreshed from the running UNO Q on September 3, 2026 (v0.2.0.dev3). Dashboard shows Gestures off; the Learn camera preview is masked for privacy while the real lesson controls remain visible. Setup shows the HTTP page, where pairing is disabled until you open secure Setup.

## Saved calibration and reliable local names

The neutral hand reference is saved in [data/calibration.json](#) and reused across Learn, gameplay, profile changes and restarts. Use **Calibrate** when your camera or playing position changes, or neutral is incorrect. Learning does not train a personal hand model. The camera overlay's Right/Left score identifies handedness, not movement direction.

Both machine installers install [avahi-daemon](#) and [libnss-mdns](#) and enable Avahi at boot. The UNO Q also uses an app-owned resolver service for container lookups. If discovery fails, use **Test console name** in Connection and follow the [hostname troubleshooting FAQ](#). A router-reserved IPv4 address is an alternative. Name resolution and saved calibration have been verified after reboot; a fresh installation remains untested.

## Quick start

- 1 Provision the UNO Q over USB in Arduino App Lab, join the same trusted Wi-Fi network as RetroPie, import the App Lab installation ZIP, and enable **Run at startup**.
- 2 Connect a UVC-compatible USB camera to the UNO Q through a powered USB hub.
- 3 Complete host setup from the project directory on each machine: run `sudo python3 scripts/setup-machine.py retropie --peer UNO-Q-NAME.local` on RetroPie (substitute your board name), and `sudo python3 scripts/setup-machine.py uno-q` in the imported UNO Q app directory. Review the PASS/FAIL/ACTION results, then run `sudo /opt/powerglove/bin/powerglove-pair` on RetroPie.
- 4 Open <https://<uno-q-name>.local:8443/setup>, compare the browser certificate fingerprint with the **ID** on the matrix, enter the matrix **PN** digits and the RetroPie one-time code, then complete pairing.
- 5 Start the controller from Setup or Debug, configure the [PowerGlove Vision](#) virtual gamepad in RetroArch, and use [/learn](#) before playing.

Detailed installation, both pairing methods, automatic game profiles, and recovery procedures are in the [Installation Guide](#).

## Controls

Eleven profiles are included: Programs A-I plus dedicated mappings for Bad Street Brawler and Super Glove Ball.

### Programs A-I

These profiles reproduce the useful controller output of the original glove programs directly. Bad Street Brawler never needs to be started. The included game registry selects B for Joust, C for Gyruss, E for Defender II, F for Sesame Street 1-2-3, G for Gun Smoke, and I for Knight Rider. Programs A, D, and H are fully implemented but intentionally have no default ROM assignment: A is the pinball profile, D is the reversed-direction challenge profile, and H is the general-play and training profile. Assign them to an exact ROM basename in [config/games.json](#) when wanted.

## Bad Street Brawler

| Motion                                     | Output                    |
|--------------------------------------------|---------------------------|
| Move hand left or right                    | D-pad left or right       |
| Raise or lower hand                        | D-pad up or down          |
| Curl thumb                                 | Pulsed NES B              |
| Curl middle finger                         | NES A+B                   |
| Roll hand clockwise/counter-clockwise      | A+right / A+left          |
| Push hand toward the camera                | Glove Zap auxiliary event |
| Hold a V sign                              | Start                     |
| Hold a thumbs-up with other fingers closed | Select                    |

The auxiliary event is exposed as [BTN\\_TR2](#). Standard [lr-fceumm](#) cannot unlock the game's glove-only zap from an ordinary controller; the event is retained so the future native-glove core can consume it.

## Super Glove Ball

X, Y, estimated depth, wrist roll, and all five finger curl values are sent continuously. The standard-gamepad fallback maps hand position to the D-pad, index curl to A, and thumb curl to B. Hold a V sign for about 0.7 seconds to press Start. Hold a thumbs-up with the other four fingers closed for Select. Menu poses suppress directional and attack output while they form.

## UNO Q setup

Use the 4 GB UNO Q when possible. Connect a UVC-compatible USB camera through an externally powered USB-C hub, then connect to the board over the network. Power Glove Vision has been tested with a Razer Kiyo, but the Kiyo is not required.

The repository root is also an Arduino App Lab app. Build and import its App Lab installation ZIP to install the Linux vision process and matrix sketch as one unit. Because the UNO Q's system Python is newer than the compatible hand-tracking build, the App Lab supervisor maintains an isolated Python 3.12 worker with MediaPipe 0.10.18 and headless OpenCV. On first launch it creates [data/device.json](#) with no RetroPie destination and generates a private random pairing token. Configure your RetroPie hostname and pairing in Connection before starting controller output. The website, Learn mode, and matrix animations work without a paired console. Existing saved destinations are preserved. Keep [data/device.json](#) out of Git; use the secure Connection pairing workflow to configure the console token. Manual token transfer is an advanced alternative described in the configuration guide.

The camera setting defaults to [auto](#). If an active profile cannot use the camera, the app stays alive, shows the matrix error state, and retries quietly. Connecting a UVC-compatible USB camera starts the tracker without a reboot. The **Gestures off** profile is a healthy idle state: camera capture and MediaPipe stop while the website and profile-command listener remain online.

## Wi-Fi and pairing

Controller packets and profile changes travel over the local Wi-Fi network. The camera remains connected directly to the UNO Q. Hostnames are preferred to fixed addresses: use your console hostname ([RETROPIE-NAME.local](#) in these examples). The console can address the board by its [.local](#) name even if the router later assigns a different IP address.

Open <http://<uno-q-name>.local:8088/setup> for the friendly setup page. It edits the persistent [data/device.json](#) and can change the console hostname, controller port, startup profile, camera, and white/black/no-glove tracking hint. **Test console name** verifies local DNS/mDNS resolution. **Save & restart tracker** applies the new settings without rebooting the UNO Q.

PowerGlove Vision always boots with controller transmission stopped. Use **Start controller** or **Stop controller** on either the setup page or debug dashboard. Vision remains active while stopped, and stopping releases every virtual input without restarting the camera.

The Dashboard also changes the active profile without visiting Setup. This is a live, session-level choice and does not replace the startup profile saved on the Setup page. Selecting **Gestures off** releases all controls and closes the camera until the Dashboard or RetroPie launch hook activates another profile. Opening **Learn** temporarily starts the camera and gesture recognition even when **Gestures off** is selected, while keeping controller output suppressed. Leaving Learn restores the selected profile, camera state, and controller state. Loading or refreshing the Dashboard also clears any abandoned Learn session and reapplies the selected mode. The matrix shows a softly scanning **L** throughout the Learn session.

**Shutdown** appears on both pages after the fixed-purpose host helper is installed. It stops controller output and asks Linux to halt cleanly. The tested UNO Q restarts after halt. Do not rely on the restart warning or website disconnection as confirmation that the board will remain stopped. The helper watches one fixed trigger file and cannot run commands provided by the browser.

The cabinet installation was validated on September 3, 2026: the host watcher reported **enabled** and **active**, its readiness marker was present, both live pages displayed **Shutdown**, and rejected test requests created no shutdown trigger. Subsequent user-triggered tests reached the halt target but restarted on both hub power and direct Mac USB power.

Secure pairing is available at <https://<uno-q-name>.local:8443/setup>. The UNO Q creates a local certificate on first boot. Preparing either pairing method makes the physical LED matrix scroll an **ID** (the first seven characters of the certificate's SHA-256 fingerprint) followed by a six-digit **PIN**. Compare the **ID** with the certificate details shown by the browser, then enter the **PIN**. This provides physical confirmation before the controller secret can leave the UNO Q. Username/password pairing uses the credentials for one SSH operation and never stores them. The password field remains disabled until confirmation begins. Alternatively, run `sudo /opt/powerglove/bin/powerglove-pair` on RetroPie and enter its 20-character, two-minute code on the secure setup page. That code authenticates an ephemeral RetroPie certificate, carries the token through pinned TLS, expires after one use, and stops accepting attempts after five failures.

The pairing token is deliberately write-only in the browser. The page reports whether a token exists but never sends its value to the browser or includes it in dashboard status. Advanced users can still copy it from [data/device.json](#) to the protected [/etc/powerglove/token](#) file on RetroPie. Selecting **Generate a new private pairing token** invalidates the old pairing, so update RetroPie immediately afterward.

For a complete first-install sequence, including the two secure pairing methods and USB-to-Wi-Fi bootstrap, follow [docs/INSTALL\\_README.md](#). The recommended pairing method uses the temporary code printed by `powerglove-pair`; username/password pairing is also supported and those credentials are never stored.

## Advanced standalone tracker

The following commands run the Python tracker directly, not the complete App Lab supervisor and website. Its diagnostic server is not the full Dashboard, Learn, Help, and secure Setup interface described above. For normal UNO Q use, follow the App Lab installation path instead.

```
SH
scripts/fetch-runtime-assets.sh
python3 -m venv .venv
. .venv/bin/activate
python -m pip install -U pip
python -m pip install -e '.[vision]'
```

Run the tracker, replacing the receiver address and token. Controller transmission defaults to stopped; add `--controller-enabled` only when you intend to send inputs. The placeholder below is not a real secret: avoid putting an actual token into shared terminal history or logs.

```
SH
powerglove-vision \
  --receiver 192.168.1.50 \
  --token 'replace-with-a-long-random-value' \
  --profile bad_street_brawler \
  --glove-color white
```

The vision service also listens for authenticated profile changes from RetroPie on UDP port 55356. A change first releases every virtual control, starts a new packet session, changes the mapping, reuses the saved neutral reference, and acknowledges the selected profile. If no valid saved reference exists, the tracker collects an initial calibration.

## App Lab dashboard and learning

In the full App Lab application, open <http://<uno-q-name>.local:8088/debug> from another machine. The live dashboard shows the camera overlay, an active-profile selector, active game, tracking confidence, D-pad and button output, axes, finger curl, recent gesture events, and a **Calibrate** button. The Dashboard remains available even when the camera is unplugged; centering is disabled until vision is active. The saved calibration is restored at tracker startup; automatic calibration is only needed when no valid saved reference exists. The shorter root URL redirects to this dashboard in the App Lab application.

Dashboard and Learn show **Starting camera and gesture tracking** with elapsed seconds while vision initializes. First activation can take longer than later profile switches because the camera and tracker must be initialized. This is a startup state, not an error. Gestures off does not pre-warm the camera.

Open <http://<uno-q-name>.local:8088/learn> for offline practice. The page automatically stops controller transmission, keeps vision active without a RetroPie connection, and guides you through hand detection, neutral position, directions, finger curl, A, B, Start, Select, and GLOVE ZAP (the forward-push gesture). Completing all eleven lessons earns the **Glove Master** achievement; skipped lessons must be completed, and **Start again** resets lesson progress.

Each page displays the running application version in its footer. Learn and Setup also show when the application last started. The footer reflects the deployed build, not whichever branch was most recently merged on GitHub.

Start and Select use poses held for about 0.7 seconds, then emit a short button pulse. While either menu pose is forming, ordinary attack controls are suppressed so curled fingers cannot fire an unwanted move.

For a black glove, use a light, uncluttered background. For a white glove, use a dark background. Landmark detection remains the primary tracker in both cases; contrast is more useful than a specific colour.

## UNO Q blue matrix

The optional App Lab sketch in [sketch/](#) drives the built-in 8x13 blue matrix. It deliberately does not replace the UNO Q's protected early system boot display. Once the PowerGlove Vision app starts, it shows:

- an animated, scanning 8-bit hand while camera and model components load;
- a pinball-display-style glove attract animation while gestures are paused;



- a blocky [PG](#) emblem before a game profile is selected;
- a large [A-I](#), [BS](#), or [GB](#) acknowledgement for the active profile;
- a gently pulsing version of that acknowledgement while tracking is active;
- a blinking X if camera or runtime initialization fails.

During normal operation, the glove attract animation represents Gestures off. However, the Linux shutdown request does not guarantee that the MCU matrix turns off. An animation alone is not proof that Linux or the website is healthy, or that shutdown has completed.

Copy [sketch/](#) into the sketch portion of the PowerGlove Vision App Lab app. The Python process detects App Lab's Bridge automatically and calls the sketch; on a development computer it quietly runs without matrix support. Use `--no-matrix` to disable the integration explicitly.

In App Lab, enable **Run at startup** for the completed custom app. The Arduino system boot logo remains visible during Linux startup, after which the custom loading and ready states take over.

## Deploy application updates over Wi-Fi

After installing an SSH public key for the UNO Q's [arduino](#) account, update a running App Lab installation without reconnecting USB:

```
SH
scripts/deploy-uno-q-wifi.sh arduino@UNO-Q-NAME.local
```

The target can be any UNO Q [.local](#) hostname. Device settings and private pairing material in [data/](#) are preserved. The script restarts the container keeps PowerGlove Vision as the default startup app, and checks the Learn, Debug, and secure Setup pages before reporting success. Microcontroller sketch updates remain available through App Lab's private credential prompt; USB remains the passwordless recovery path.

The initial SSH key installation is performed once while USB is connected. Afterward, application source, container restarts and page verification use Wi-Fi only. The deployment deliberately excludes [data/](#), so the device token, certificate and cached vision runtime are preserved.

Install the host shutdown helper once from a terminal on the development Mac:

```
SH
scripts/install-uno-q-shutdown-helper.sh arduino@UNO-Q-NAME.local
```

The one-command UNO Q installer already installs this helper. Use the separate script above only to install or repair that component independently. The remote [sudo](#) prompt is handled by the terminal and is never stored. The script installs and enables [powerglove-system-shutdown.path](#) plus a boot-time rule that recreates the web application's readiness marker. Later application deployments do not need to reinstall it.

## Raspberry Pi receiver

The receiver requires Python [evdev](#) and access to [/dev/uinput](#):

```
SH
python3 -m venv .venv
. .venv/bin/activate
python -m pip install -e '[receiver]'
powerglove-receiver \
  --listen 0.0.0.0 \
  --token 'replace-with-the-same-long-random-value'
```

Use `--dry-run` first to inspect incoming state without creating a device. The receiver releases every control if packets stop for 250 ms, so a lost camera, network interruption, or stopped UNO Q cannot leave a direction held.

After the virtual device named **PowerGlove Vision** appears, bind it in RetroArch as Player 1 or add it as another input source to the cabinet's existing gamepad merger.

The receiver creates the uinput device only after the first authenticated controller packet arrives. On the validated cabinet, start it with `powerglove-receiver.timer` 45 seconds after boot instead of enabling the service directly. This lets EmulationStation initialize before the virtual controller appears and helps prevent frontend pauses and conflicts with other USB devices, such as a BitPixel display.

## Automatic RetroPie profiles

Install this package in `/opt/powerglove`, then copy:

- `config/games.json` to `/etc/powerglove/games.json`;
- `config/launcher.example.json` to `/etc/powerglove/launcher.json` and set the UNO Q address;
- the same long random token used by the UNO Q to `/etc/powerglove/token`.

The project provides `powerglove-retropie-hook`. Call the supplied `retropie/runcommand-onstart-powerglove.sh` from the cabinet's existing `runcommand-onstart.sh`, forwarding its four arguments. Call the supplied end script from `runcommand-onend.sh`. Do not replace the existing cabinet hooks; they also manage controller order, RGB processes, and trackballs.

The start hook uses the exact ROM basename. Known NES games receive their configured profile; other games and systems explicitly turn gestures off. The end hook also turns gestures off. Communication failure is logged but never prevents a game from launching or interferes with conventional controls.

To add a game, add its exact ROM filename and one of `program_a` through `program_i`, `bad_street_brawler`, or `super_glove_ball` to the `games` object. The supplied registry recognizes `.nes`, `.zip`, and `.7z` copies of the two provided glove games. A temporary manual override is also available:

```
SH
powerglove-profile --uno-q 192.168.1.60 --token-file /etc/powerglove/token \
  --profile program_a
```

## Tuning

Start with the defaults in `config/profiles.json`. Important settings are:

- `move_on` and `move_off`: directional activation and release thresholds.
- `curl_on` and `curl_off`: finger hysteresis.
- `roll_on` and `roll_off`: wrist-roll thresholds in normalized quarter-turns.

- [push\\_on](#) and [push\\_off](#): apparent-hand-size change used for monocular depth.
- [pulse\\_hz](#): Bad Street Brawler's pulsed B rate.

Use the debug page while adjusting thresholds. Keep [\\*\\_off](#) lower than [\\*\\_on](#) to prevent controls chattering near a boundary.

## Development

Core tests do not require a camera or MediaPipe:

```
SH
python -m unittest discover -s tests -v
python3 scripts/check-source-docs.py
```

Rebuild the PDF guides after changing Markdown, then rebuild the importable App Lab installation ZIP. The installation package deliberately omits Google's Hand Landmarker model. The first time gestures are activated, the UNO Q downloads the model into its persistent private [data/](#) directory and verifies its pinned SHA-256 checksum before use:

```
SH
python3 scripts/build-docs-pdf.py
scripts/build-app-lab-package.sh
scripts/verify-app-lab-package.py
```

The packaging script excludes private [data/](#), the local cheat sheet, caches, tests and Git history while retaining the public instructions and screenshots. It writes the generated App Lab installation ZIP to [output/app-lab/PowerGlove-Vision-Uno-Q.zip](#). The ZIP is ignored by Git and is intended for a tagged GitHub Release rather than normal source commits. See the [configuration reference](#) for its exact contents and exclusions.

The ZIP is a ready-to-import source distribution, not a precompiled PowerGlove Vision application. It contains the runtime source, Arduino sketch, public configuration and documentation, plus the required prebuilt MediaPipe wheel. The Git repository remains the complete contributor checkout with tests and development tooling.

The code intentionally separates observations, gesture mapping, transport, and Linux input output. Recorded-camera replay and a native Nestopia adapter can be added without changing the gesture engine.

Every source, executable script, service unit, and commented application configuration starts with a standard project header. The header states the file's purpose, ownership, MIT SPDX identifier, and local maintenance history. Public interfaces and non-obvious safety or protocol functions carry focused docstrings or comments. Keep user-visible release history in [docs/CHANGELOG.md](#) and exact implementation history in Git instead of copying an ever-growing log into every source file. The source-documentation audit enforces that convention for new tracked files and is suitable for a future continuous-integration check.

## License

PowerGlove Vision is open source under the [MIT License](#). You may use, modify, and distribute it subject to the license terms. Nintendo, NES, Mattel, Power Glove, and other referenced product names and marks belong to their respective owners; this independent project is not affiliated with or endorsed by them. Bundled and downloaded runtime components retain their own terms; see [Third-party runtime components](#).

## Host setup commands

After downloading the project on RetroPie and importing/running the app once in App Lab on the UNO Q, run one command on each target machine:

```
SH
# On RetroPie, from the project checkout:
sudo python3 scripts/setup-machine.py retroPie --peer UNO-Q-NAME.local
# On UNO Q, from /home/arduino/ArduinoApps/powerglove-vision:
sudo python3 scripts/setup-machine.py uno-q
```

Replace the example UNO Q hostname for your installation. Setup preserves existing private settings and finishes with PASS/FAIL/ACTION checks. Pairing approval and gameplay confirmation remain user steps. See [installation instructions](#) for prerequisites and read-only checks.

## Known limitation: UNO Q restarts after Shutdown

On the tested UNO Q, a graceful `halt` still leads to an automatic restart, including when connected directly to a Mac without the powered hub. The helper requests halt correctly, but remaining stopped is not verified. Do not use loss of the website or a fixed delay as confirmation that power can safely be removed. See the installation guide for the investigation status and Arduino guidance.