



UNO Q CASE

ASSEMBLY QUICK REFERENCE

1 / 2

YOU NEED



UNO Q



PRINTED BASE



PRINTED LID



BEZEL + EMBLEM




4 INSERTS + 4 SCREWS




HEAT TOOL + M3 DRIVER

1 Fit the inserts

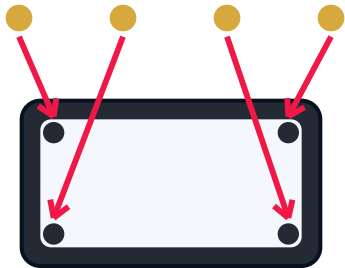


Heat each insert square and stop flush.

2 Mount the UNO Q

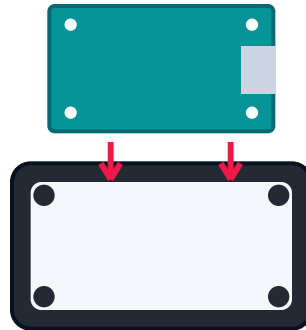


USB-C faces the broad side opening.

3 Close the case

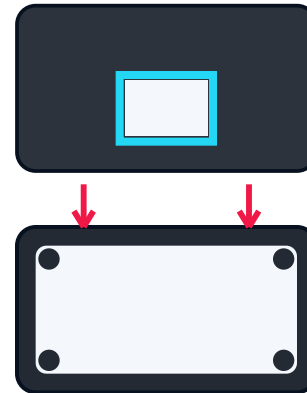

Lower the lid; install four M3 screws.

4 Finish and check

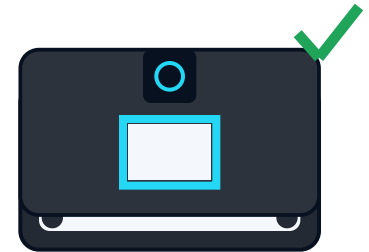

Fit bezel and emblem; verify Matrix and USB-C.



POWER OFF

Disconnect power before opening.



CHECK THE CABLE

Nothing pinched under the lid.



KEEP IT COOL

Vents and hub ports stay clear.



CONTROLLER DOCK

UNO Q + ARDUINO USB-C HUB

2 / 2

YOU NEED



UNO Q



USB-C HUB



DOCK BASE



DOCK LID



BEZEL + EMBLEM




4 INSERTS + 4 SCREWS




HEAT TOOL + M3 DRIVER

1 Mount the UNO Q

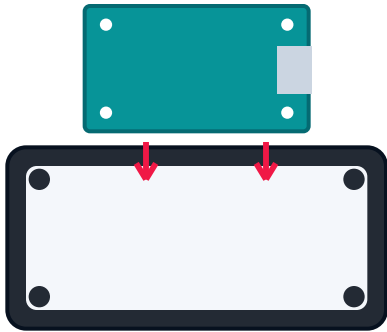


Fit inserts first; USB-C faces the opening.

2 Seat and connect

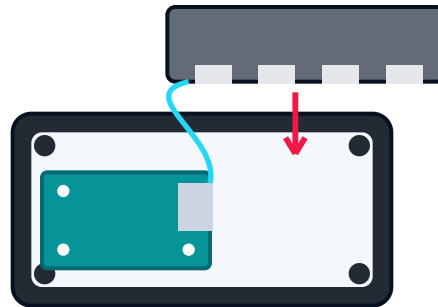


Ports face out; route the captive lead to UNO Q.

3 Close the Dock

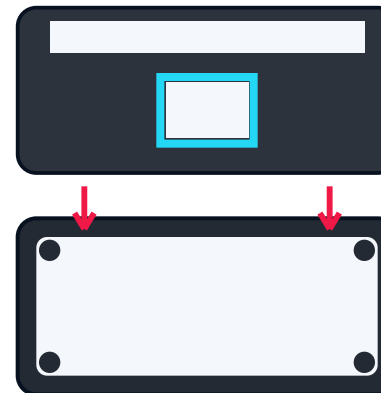

No pinched cable; install four M3 screws.

4 Finish and check

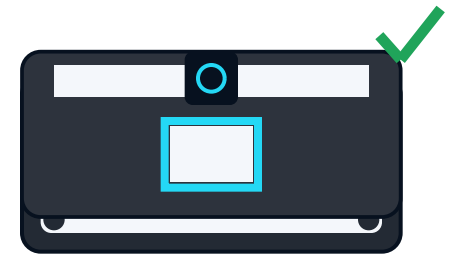

Matrix, USB-C, hub ports, and vents stay clear.



POWER OFF

Disconnect power before opening.



CHECK THE CABLE

Nothing pinched under the lid.



KEEP IT COOL

Vents and hub ports stay clear.