



ENCLOSURE ASSEMBLY

ONE WORKBENCH SHEET / TWO BUILD PATHS

PRINT THE FIT COUPONS FIRST

CHOOSE ONE

UNO Q CASE

Smallest build / hub remains outside

CONTROLLER DOCK

UNO Q + hub travel as one unit

LAY OUT THE PARTS



UNO Q



USB-C HUB



BASE



LID



INSERTS + SCREWS




HEAT TOOL + DRIVER



BEZEL + EMBLEM

UNO Q CASE

HUB OUTSIDE

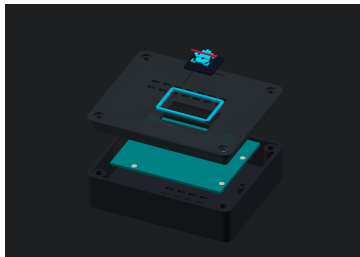

1

Fit four inserts

Heat squarely; stop flush; let them cool.

2

Mount the UNO Q

USB-C faces the broad side opening.

3

Test the hub plug

It enters straight without side pressure.


4

Close and finish

Lid, four screws, bezel, emblem, feet.

CONTROLLER DOCK

HUB IN OPEN BAY

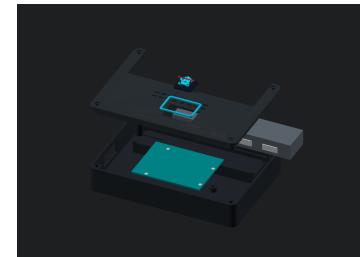

1

Mount the UNO Q

Fit inserts; USB-C faces the opening.

2

Seat the hub

Ports face outward in the open service bay.

3

Route the cable

Gentle bend; keep it below the lid line.

4

Close and finish

No pinch; add screws, bezel, emblem, feet.



POWER OFF

Disconnect before opening.



CABLE FREE

No pinch or sharp bend.



AIR + PORTS

Everything stays clear.



LID FLAT

Never pull it down by screws.