



## **PLUGIN 164**





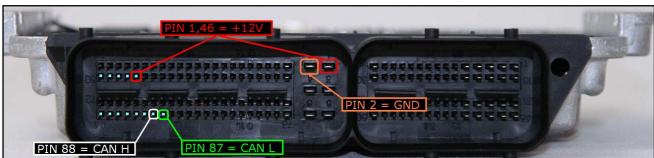

## **DIRECT CONNECTION**

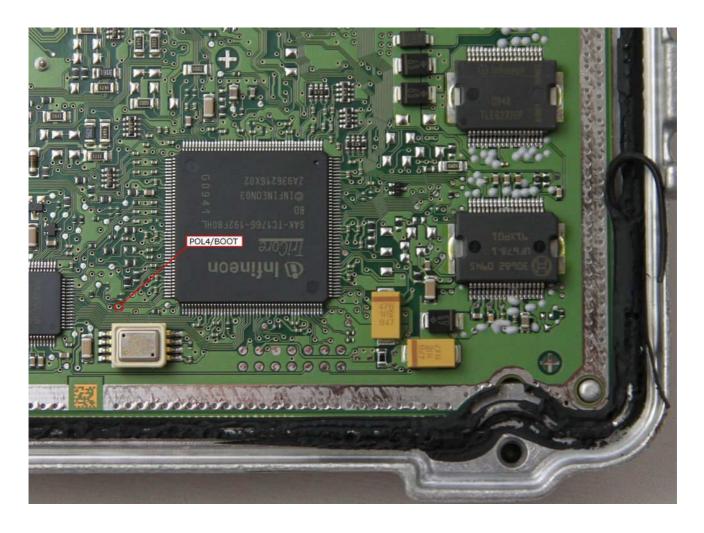



## **DIMA CONNECTION**

Connect the BOOT pin to the N 10 PAD of the lay-by pins.



