
zx64 keyboard

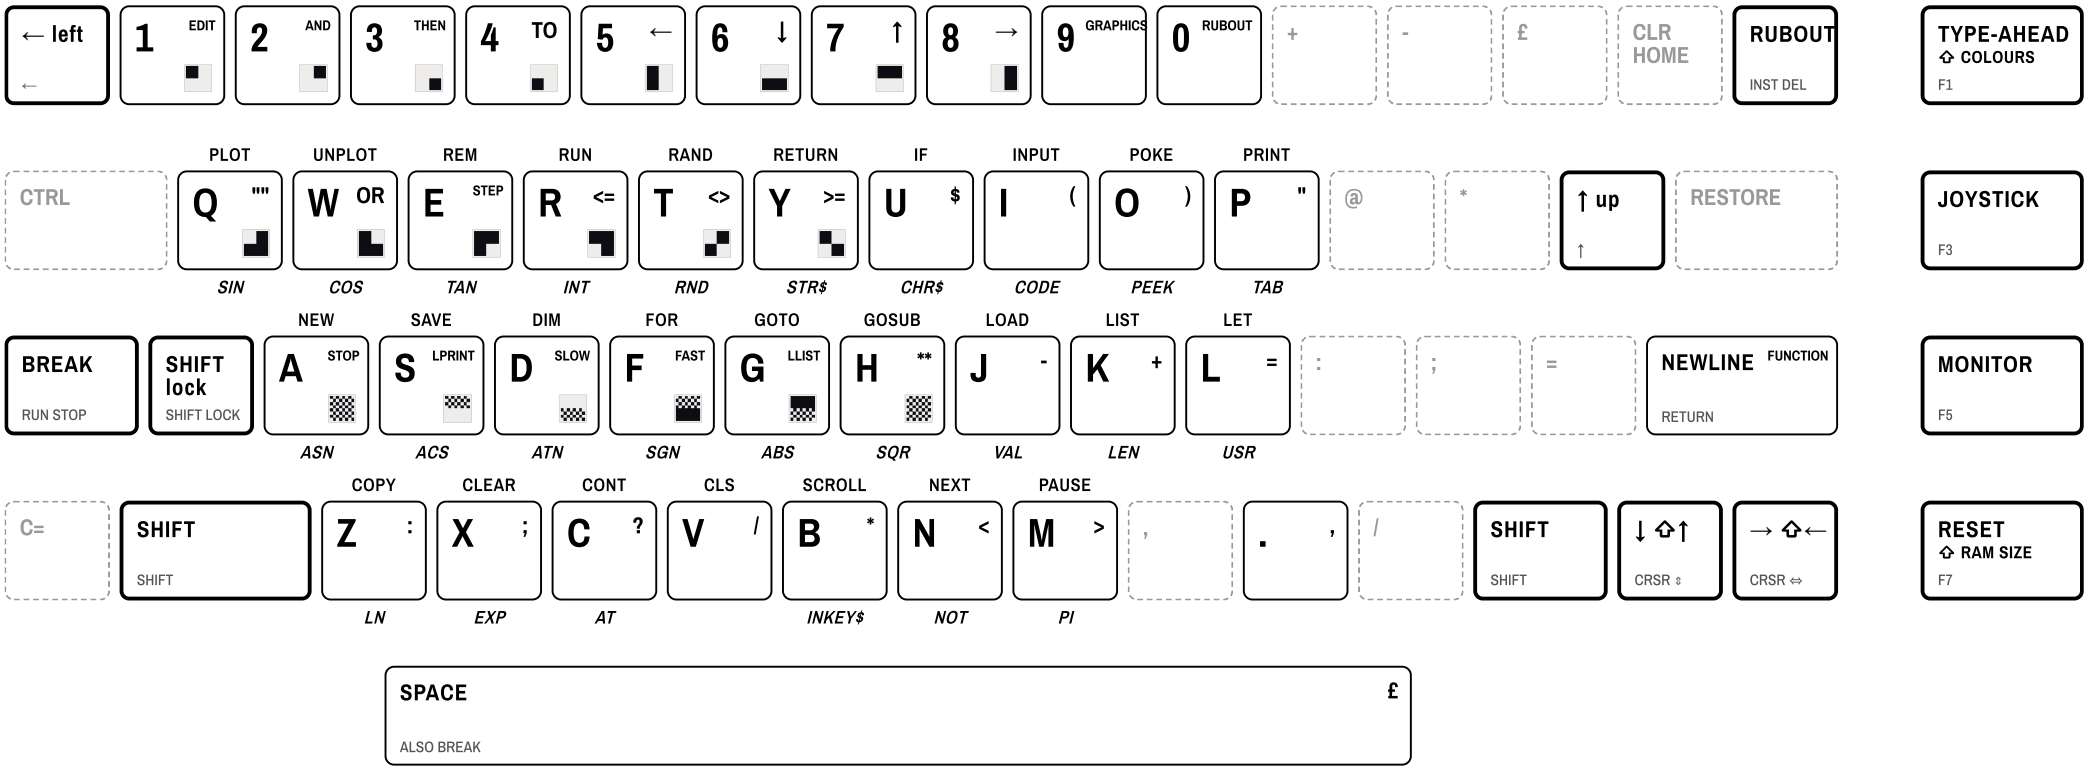

above the key: keyword, at the **K** cursor top right: with SHIFT below the key: function, after SHIFT RETURN bottom right: block graphic, SHIFT in graphics mode dashed: not used

K Keyword

Start of a line, or after THEN. A letter gives the keyword above it: `P` is PRINT, `K` is LIST. Digits give a line number.

L Letters

Everywhere else. Keys give their letter; SHIFT gives the red legend: `SHIFT` `P` is ", `SHIFT` `L` is =.

F Function

`SHIFT` `RETURN`, then one key: the function below it. `B` is INKEY$, `T` is RND, `M` is PI.

G Graphics

`SHIFT` `9` in, `SHIFT` `9` out. Plain keys give inverse characters; SHIFT gives the block graphic in the key's corner.

C64 KEY	ZX81
RETURN	NEWLINE. SHIFT RETURN is FUNCTION
INST/DEL	RUBOUT (the ZX81's SHIFT 0)
CRSR ↕ CRSR ↔	Down and right; with SHIFT, up and left (the ZX81's SHIFT 6, 8, 7, 5)
← ↑	Cursor left and up
SPACE RUN/STOP	BREAK while a program runs
SHIFT LOCK	Holds the left SHIFT down, as on the C64
SHIFT 1	EDIT: brings the current line down to be changed
F1	Type-ahead on or off
F2	The next colour scheme
F3	Joystick keys: 5678+0 or your own; hold it to teach your own
F5	The monitor; F5 or X goes back
F7	Reset
F8	Memory: 16K, 32K, 1K (resets)

INDEX

With SHIFT

-	J
,	.
;	X
:	Z
?	C
"	P
""	Q
(	I
)	O
*	B
**	H
/	V
←	5
→	8
↑	7
↓	6
+	K
<	N
⩽	R
<>	T

=	L
>	M
⩾	Y
$	U
£	SPACE
AND	2
EDIT	1
FAST	F
FUNCTION	RETURN
GRAPHICS	9
LLIST	G
LPRINT	S
OR	W
RUBOUT	0
SLOW	D
STEP	E
STOP	A
THEN	3
TO	4

At the K cursor

CLEAR	X
CLS	V
CONT	C
COPY	Z
DIM	D
FOR	F
GOSUB	H
GOTO	G
IF	U
INPUT	I
LET	L
LIST	K
LOAD	J

NEW	A
NEXT	N
PAUSE	M
PLOT	Q
POKE	O
PRINT	P
RAND	T
REM	E
RETURN	Y
RUN	R
SAVE	S
SCROLL	B
UNPLOT	W

After SHIFT RETURN

ABS	G
ACS	S
ASN	A
AT	C
ATN	D
CHR$	U
CODE	I
COS	W
EXP	X
INKEY$	B
INT	R
LEN	K
LN	Z

NOT	N
PEEK	O
PI	M
RND	T
SGN	F
SIN	Q
SQR	H
STR$	Y
TAB	P
TAN	E
USR	L
VAL	J