Why this app exists

One CAT owner. Deliberate source selection. Independent RX and TX.

My IC-9700 is already **TRX2 in RUMlogNG**. I wanted RUMlogNG to remain the sole application connected to its CAT/USB port while MacDoppler supplied satellite frequencies upstream.


QO-100 is the home operating environment

Named pairs cover digital operation, different SSB meeting frequencies and CW. One click applies a pair once; afterward, manual radio tuning remains possible. Pair editing belongs in Settings, keeping Operations compact.

Check a LEO without surrendering the home setup

MacDoppler can track and broadcast in the background while I operate on QO-100. Its packets are displayed but blocked until I select MacDoppler. Returning to a QO-100 row revokes that authority and applies the selected pair once.

The signal path

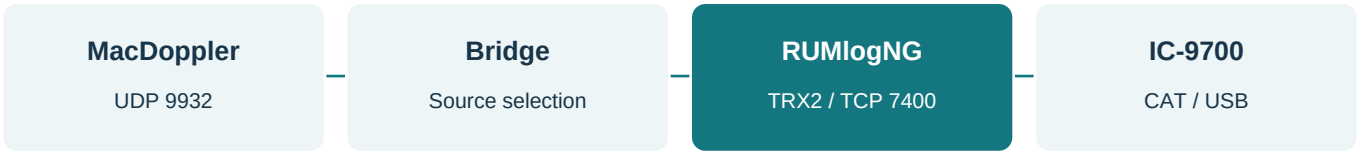


The bridge also uses RUMlogNG's panel through macOS Accessibility for VFO modes, tones, receiver settings, SAT, RF power, RX filters and feedback. It never opens the radio's serial device.

Independent frequencies and converter protection

Downlink controls RX; uplink controls TX. Neither is calculated from the other. The QO-100 TX output feeds a converter, so this mode requires a maximum RF power setting of **5%**. The guard is software with feedback latency, not a hardware RF limiter.

Operations at a glance

An actual screenshot of version 1.0.7 build 11 on the original station.

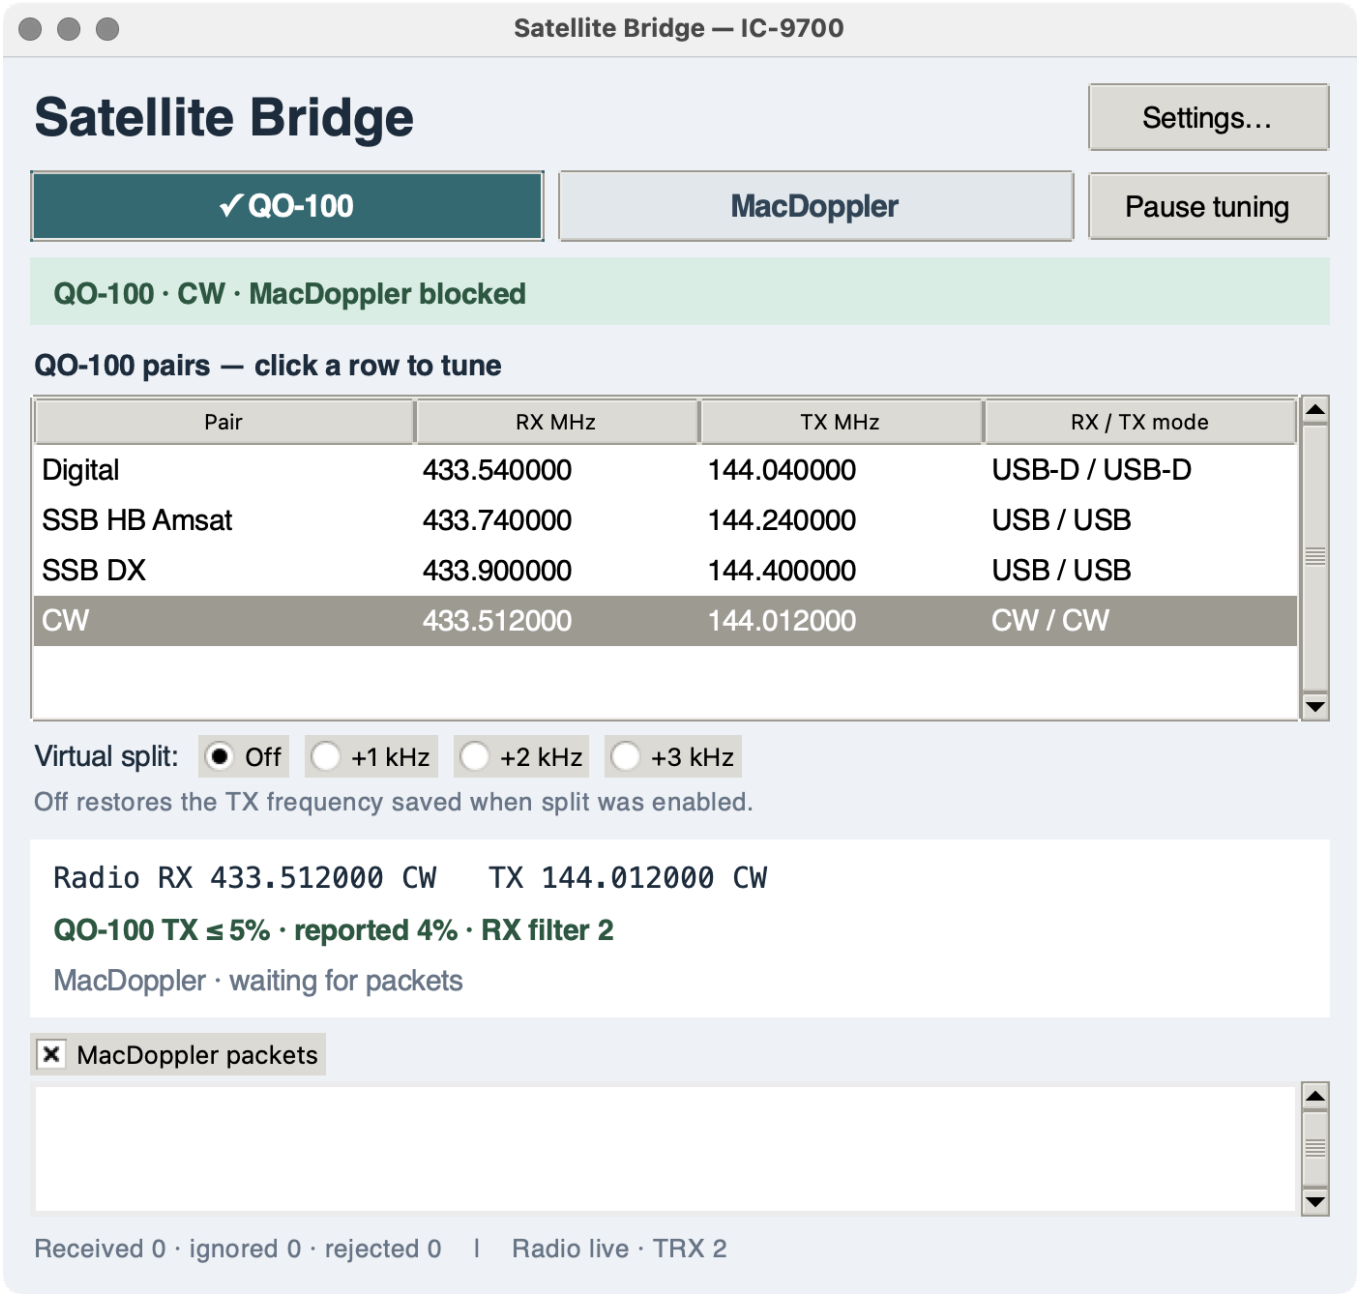

QO-100 CW is active at RX 433.512000 MHz and TX 144.012000 MHz, both CW. RX filter 2 and 4% reported power are visible. All four saved pairs and the CW virtual-split choices Off, +1, +2 and +3 kHz fit in the Operations window.

Split is Off. No MacDoppler packets had arrived in this launch at capture time. The frequency line shows readback from RUMlogNG.

Install and connect

Intel app with bundled Python/Tk; no Terminal needed for normal operation.

Download the Intel ZIP from the GitHub release, extract it, and copy **Satellite Bridge.app** into an Applications folder. Add it to the Dock if desired.

First launch on a different station
The example pairs are the original station's dial/transverter IF values. Keep RUMlogNG closed while first editing them in Settings. Retain exactly one pair named **Digital**. Every subsequent new launch applies Digital automatically once access and power verification are ready.

Connection	Setting
MacDoppler to bridge	UDP 127.0.0.1:9932
Bridge to RUMlogNG TRX2	TCP 127.0.0.1:7400
RUMlogNG to IC-9700	Existing CAT/USB connection; RUMlogNG owns it

RUMlogNG: configure the IC-9700 as TRX2, enable its DXLab Commander server on TCP 7400, and make the ICOM IC-9700 control window available.

MacDoppler: select the UDP Broadcast radio driver, set address 127.0.0.1 and port 9932, and enable Radio output. Do not add another direct CAT connection to this radio.

macOS: enable Satellite Bridge under System Settings > Privacy & Security > Accessibility. This release is ad-hoc signed, not Developer ID signed or notarized; a downloaded copy can be blocked. See Apple's guidance linked on the last page.

Supplied dial-frequency examples

Pair	RX MHz	TX MHz	Both modes
Digital	433.540000	144.040000	USB-D
SSB HB Amsat	433.740000	144.240000	USB
SSB DX	433.900000	144.400000	USB
CW	433.512000	144.012000	CW

These are IC-9700 IF/dial values, not 10 GHz / 2.4 GHz frequencies. No transverter offset is inferred.

Daily operation

QO-100 writes once. MacDoppler forwards its continuing Doppler corrections.

QO-100

Click a saved row. SAT stays enabled for native manual dial tracking. The bridge stops alternating polling, exchanges Main/Sub if RX needs the band occupied by TX, selects Main/RX and Sub/TX in turn, writes each frequency once and sets its mode/Data buttons. It verifies each side, restores the prior control view and polling, and never retries frequencies automatically.

Manual tuning is left alone and appears in RUMlogNG readback. USB/USB-D select **RX filter 1**; CW/CW-R select **RX filter 2**. The same RX rule applies to MacDoppler-imposed modes. The TX filter is not changed.

MacDoppler

Click MacDoppler to forward its live downlink and uplink independently. Only changed fields are sent during ongoing corrections. A cached report is accepted for up to eight seconds; otherwise the app waits. Invalid or same-band On Exit reports are rejected.

Frequency-only corrections may continue during operator-keyed TX. Source/mode changes wait for PTT release. The app has no PTT-on or PTT-off operation. Use MacDoppler's own tuning aids during passes; UDP does not supply radio-dial tracking.

Return, pause and observe

Select any QO-100 row to block MacDoppler again and apply that pair once. Pause tuning stops frequency/mode writes while feedback and packet display continue. Use the packet checkbox to show actual incoming messages with forwarded/blocked/rejected labels.

Power is separate from tuning

The 5% QO-100 ceiling is verified before tuning, checked afterward and monitored while QO-100 remains selected, including while paused. The tested radio commonly reports 4% after a 5% request.

Temporary power-read failures hold output and retry verification. A pending selection that has sent no tuning commands can then be sent once. A batch already sent is never replayed by power recovery. An explicit Pause or source change takes precedence.

Readback is not command history

The main line displays values read from RUMlogNG's panel, normally each second. Missing data says waiting; old data is marked stale. Missing TX modes are not invented. A QO-100 selection is checked for stable feedback, but a mismatch never triggers automatic retuning.

Split, tones and RX profiles

Explicit controls; the radio connection still belongs to RUMlogNG.

QO-100 virtual split

TX mode	Selectable positive offset
USB / USB-D	Off, +5, +10 or +15 kHz
CW / CW-R	Off, +1, +2 or +3 kHz

Enabling split saves the actual TX frequency, including manual tuning since the preset. Each choice uses that same base; offsets never stack. **Off restores the saved TX base exactly.** RX, modes and filters are preserved. A new preset or MacDoppler selection clears split state.

Example: a manually tuned base of 144.040220 MHz gives 144.045220 at +5 kHz and 144.050220 at +10 kHz. Off restores 144.040220. Release PTT before changing split. Normal app startup still selects Digital.

Receiver and power profiles

Source	RX front end	TX power
QO-100	ATT on; internal/external preamps off	Maximum 5%
MacDoppler	ATT off; internal preamp on; external preamp for a 70 cm downlink	Default 80%

MacDoppler's 80% default is applied after its TX frequency/mode verifies, on entry or a TX band/mode change. Frequency-only corrections preserve subsequent manual power adjustment. QO-100 continues monitoring its 5% ceiling.

Receiver setup uses three exact receiver-only macros in unused RUMlogNG manual slots. Existing manual and automatic macros are preserved. These commands currently use default IC-9700 CI-V address A2. External-preamp activation is commanded; the external amplifier is not independently measured.

TX CTCSS and RX tone squelch are separate

MacDoppler's Tone value controls the TX encoder through its panel popup/button. Its CTCSS/decode value controls RX TSQL separately. Zero disables the corresponding function; omission leaves it unchanged. SO-50's 74.4 and 67.0 Hz settings are passed as requested. The bridge never keys a transmission.

Evidence and limitations

A station-tested preview, with current behavior described explicitly.

Desktop access and polling
Panel controls require an unlocked macOS session and Accessibility access. MacDoppler holds alternating polling off across its stream; QO-100 return restores the earlier setting. QO-100 feedback still enables Toggle. The bridge retains SAT and explicit Main/RX and Sub/TX control.

Test environment	Observed configuration
Computer	Intel Mac; macOS 15.7.3
Applications	RUMlogNG 6.6.1; MacDoppler 2.48 reports; earlier checks also used 6.5.1
Radio connection	IC-9700 as RUMlogNG TRX2; USB at 19200 baud
Bundled runtime	Python 3.12.14; Tcl/Tk 9.0.4

What was checked

131 local tests cover parsing, selected VFOs, independent modes, tones, receiver macros, power, RX filters, virtual split and failure recovery. These tests use simulated endpoints. An earlier controlled UDP replay applied 13 updates to the real IC-9700 through RUMlogNG, including captured FO-29 reports and TX tone transitions.

Earlier checks verified tones, receiver profiles, RX filters and split/base restoration. The 1.0.7 repair verified automatic QO-100/AO-7 band reversal and 60 consecutive pairs, with 80% during tracking and 4% after QO-100 restoration. Installed build 11 also passed three control pairs and CW restoration after access renewal. No over-the-air QSO or external-amplifier measurement is claimed.

Why stable confirmation matters

An Amsat selection briefly showed requested TX 144.240000 MHz, then RUMlogNG reported the previous 144.198770 MHz. No later bridge frequency setter appeared, and MacDoppler packets were blocked. A separate diagnostic TX setter restored 144.240000. The exact cause was not established.

The app now reports unconfirmed feedback without automatically resending frequencies. Readback is still RUMlogNG's report, not an independent CAT connection or RF measurement.

Permissions and saved data

Ad-hoc-signed executable updates may require removing and re-adding the app's Accessibility entry. Settings and rotating logs live outside the bundle in ~/Library/Application Support/Satellite Bridge/. App updates preserve saved pairs.

Planned next steps

Terrestrial profiles remain planned; MacDoppler power defaults are implemented.

A third operating mode: Terrestrial

Add named repeater and simplex profiles with the same Settings editor / one-click Operations model as QO-100. Repeater entries hold RX (repeater output), TX (repeater input), duplex direction/offset including DUP-, mode, and a TX CTCSS opening tone or none.

Simplex entries use equal RX/TX frequencies and no duplex offset, with voice/data settings. One requested example is a **144.800 MHz packet-radio channel**. Selecting Terrestrial should disable SAT, block MacDoppler and apply the profile once, then allow manual tuning.

Current and planned power defaults

Mode	Planned behavior
QO-100	Maximum 5%; verify before tuning and monitor
MacDoppler	Implemented: 80% after target verification on entry / TX band or mode change
Terrestrial	Default 80%, applied once on mode entry

MacDoppler's 80% default is available since 1.0.6; terrestrial profiles and their default remain planned. Later manual MacDoppler power adjustment is preserved during frequency-only updates. QO-100 feedback still forces Toggle on; respecting its manual setting there remains pending.

Project, licensing and references

github.com/matpet/satellite-bridge
Source, setup guide, design rationale, validation summary, issues and releases.

Original bridge code and documentation: MIT, copyright 2026 Matthias Peter. Bundled Python, Tcl, Tk and the PyInstaller bootloader retain their own licenses; complete notices accompany the release.

RUMlogNG IC-9700 control documentation
Recommends 115200 baud for USB. Both ends must be configured together; the bridge does not change baud rates.

Apple: Safely open apps on your Mac
Explains macOS handling of downloaded, unidentified or unnotarized apps.

RUMlogNG, MacDoppler and Icom products are external interoperability targets and are not included in this release.