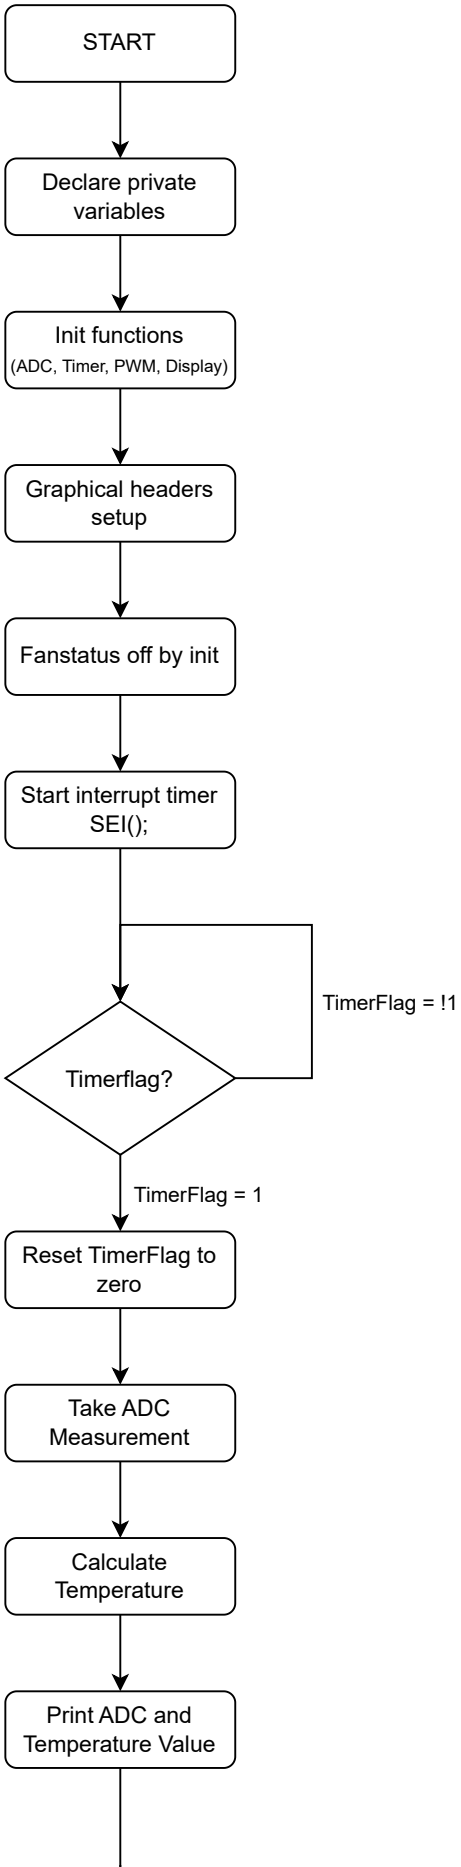
START
Declare private variables
Init functions
(ADC, Timer, PWM, Display)
Graphical headers setup
Fanstatus off by init
Start interrupt timer
SEI();
Timerflag?
TimerFlag = !1
TimerFlag = 1
Reset TimerFlag to zero
Take ADC Measurement
Calculate Temperature
Print ADC and Temperature Value

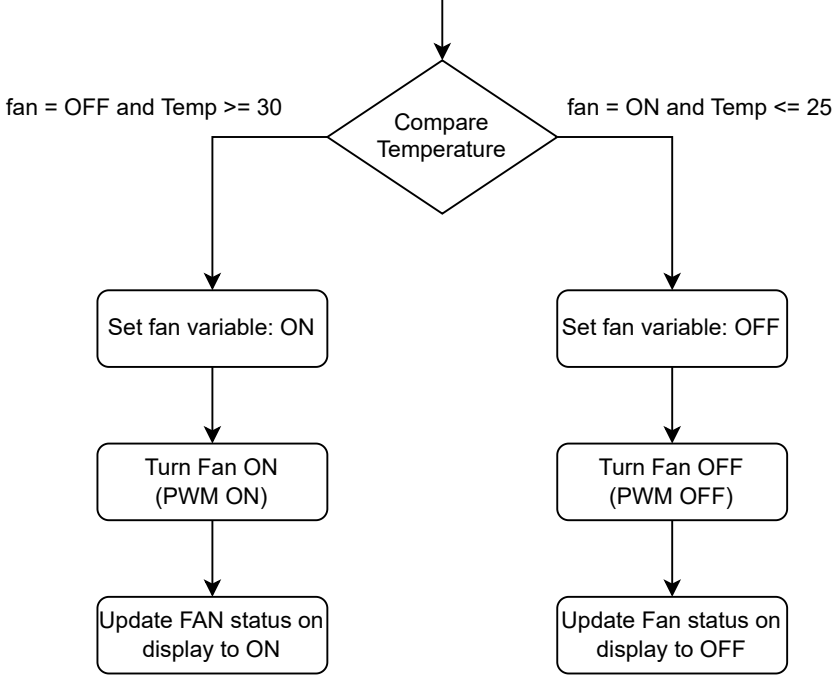
Compare Temperature
fan = OFF and Temp >= 30
fan = ON and Temp <= 25
Set fan variable: ON
Turn Fan ON (PWM ON)
Update FAN status on display to ON
Set fan variable: OFF
Turn Fan OFF (PWM OFF)
Update Fan status on display to OFF