



Using ChatterBox Location



Location Sharing

Private Cluster: Devices regularly share location and movement information (unless disabled).

Open Channels: you can decide whether to include location in any broadcast you send.

- Location information is always encrypted when transmitted or stored.

Touch any live or stale GPS on your device to view a map or QR code



Live GNSS
Fresh Location



Stale Location




No GNSS
No location



View Current Location



View Other Device Location

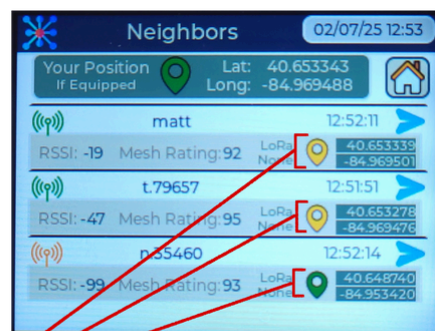


Map Orientation

- The top of the map view always faces North
- North is considered 0°
- You are always at the center of the map

Filtering the View

- Touch the GPS icon on the home screen
- Touch the filter button
- Add the devices you want to see, one at a time
- Touch the red icon to immediately show critical contacts

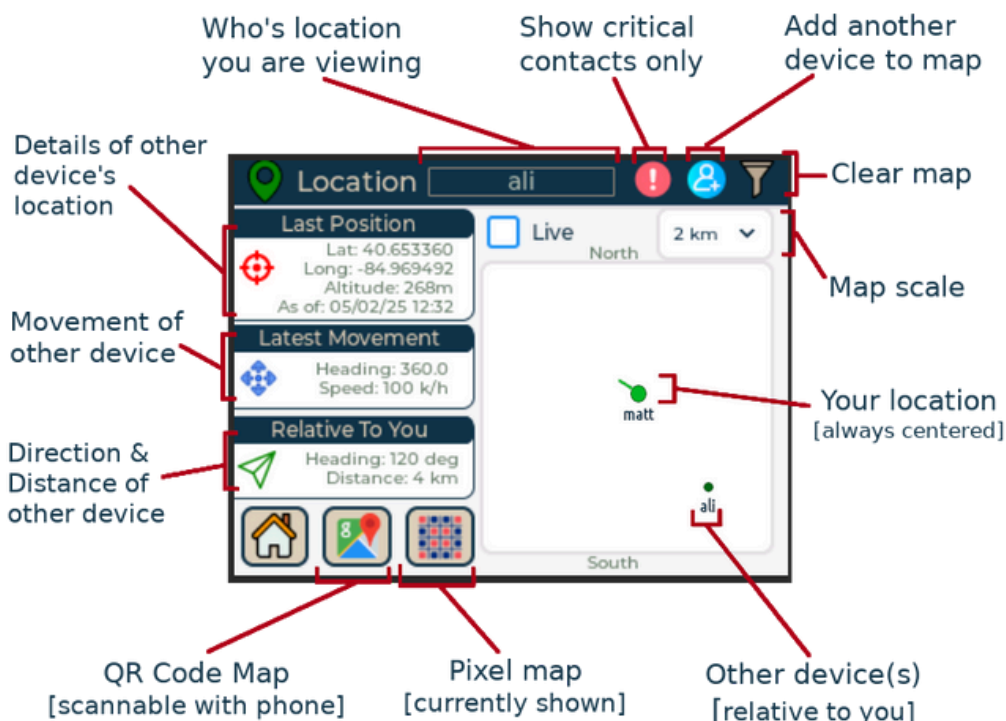



Tracking Capability

Tracking Mode and Location Logging are location-related features that can be enabled on any ChatterBox node or communicator. **You can enable and disable these features remotely**, provided the target device has remote commands enabled (all nodes do by default) and is within LoRa range.



Tracking Mode

When enabled, location-sharing pings (encrypted) are broadcast *at least* two times per minute. This can provide a more live view of a device's location. When disabled (default), location is shared roughly every 2 minutes.

Enabling tracking mode on a device does enable it to transmit more frequently, so you don't want to enable this on more than a few devices or it could negatively impact the cluster's performance.



Location Logging

This feature activates serial/USB logging, provided you have a PC or other device connected via cable and listening at 115200 baud.

When enabled on a device, the device will stream (to USB) locations of *all* devices in your cluster that have location sharing enabled.

This is intended for streaming to a file for later analysis. When you monitor the logs via USB, you will see location pings mixed with other types of logs. Example:

```
ctrl:Mesh activity occurred  
ctrl:Refreshing GPS  
LOC:250701154444|UVjiM004|40.721801|-85.098476|267.5|220.6|0.1[2.5 m @ 264.5 deg]  
LOC:250701154552|UVjiM012|40.721777|-85.098493|251.7|186.5|0.5
```

Time (YYMMDDhhmmss) | **Device ID** | **Lat** | **Long** | **Altitude** | **Heading** | **Speed** (km/h)

If location is enabled on the device you are logging from, you may also see (in brackets) more information on the log line as follows:

[**Distance from Self** @ **Relative Heading**]