



NOTES:

1. MOUNTING HEIGHTS SHOWN ARE FROM FINISHED FLOOR TO CENTERLINE OF OUTLET, UNLESS OTHERWISE NOTED.
2. LOCATIONS OF OUTLETS SHOWN ON ARCHITECTURAL ELEVATIONS SHALL TAKE PRECEDENCE OVER THESE MOUNTING HEIGHTS. FIELD LOCATE OUTLETS WITH ARCHITECT DURING ROUGH-IN.
3. INSTALL OUTLETS THAT ARE IN CLOSE PROXIMITY ON THE SAME CENTERLINE. OUTLETS THAT ARE WITHIN 2'-0" HORIZONTALLY AND WITHIN 1'-0" VERTICALLY SHALL BE INSTALLED ON THE SAME HORIZONTAL CENTERLINE LOCATED HALF WAY BETWEEN THE HEIGHTS SHOWN. OUTLETS THAT ARE MORE THAN 1'-0" APART VERTICALLY SHALL BE INSTALLED ON THE SAME VERTICAL CENTERLINE


## 6 E-500 STANDARD MOUNTING HEIGHT
N.T.S.

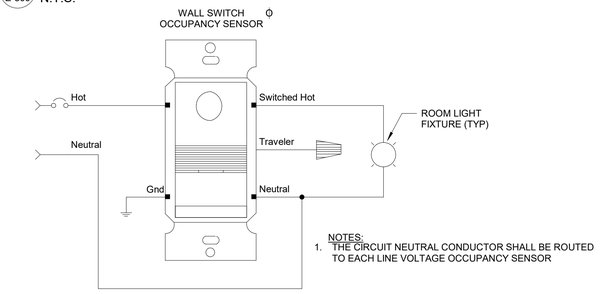


NOTES:

1. THE CIRCUIT NEUTRAL CONDUCTOR SHALL BE ROUTED TO EACH LINE VOLTAGE OCCUPANCY SENSOR


## 7 E-500 LINE VOLTAGE OCCUPANCY SENSOR WIRING DIAGRAM
N.T.S.

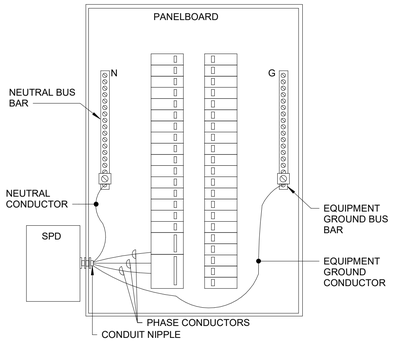



INSTALLATION NOTES:

1. REFER TO SURGE PROTECTION DEVICE (SPD) MANUFACTURER CUTSHEET FOR BREAKER AMPERE RATING. PROVIDE 2P BREAKER FOR 1 PHASE PANELBOARDS AND 3P BREAKER FOR 3 PHASE PANELBOARDS FOR CONNECTING SPD.
2. RELOCATE BREAKER IN PANEL AS NECESSARY TO PROVIDE THE SHORTEST WIRE LENGTH TO SPD.
3. DIRECT CONNECTION TO BUS IS NOT PERMITTED.
4. USE A NIPPLE CONNECTION VIA KNOCKOUT.
5. USE #10 AWG OR LARGER CONDUCTORS AS RECOMMENDED BY SPD MANUFACTURER.
6. LIMIT WIRE LENGTH TO BE AS SHORT AS POSSIBLE, 18" OR LESS.
7. KEEP WIRE FREE OF ANY SHARP BENDS.


## 8 E-500 SPD PANELBOARD INSTALLATION DETAIL
N.T.S.

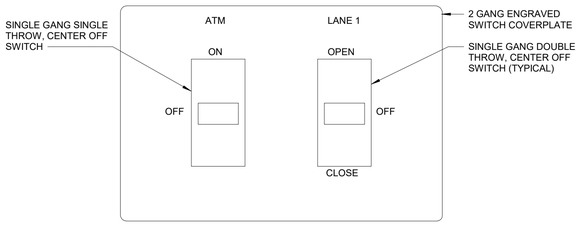



## 9 E-500 DRIVE THRU LIGHT SWITCH
N.T.S.

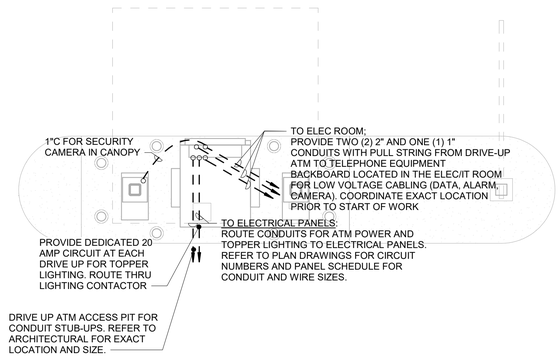


## 1 E-500 DRIVE-UP ATM DETAIL
N.T.S.

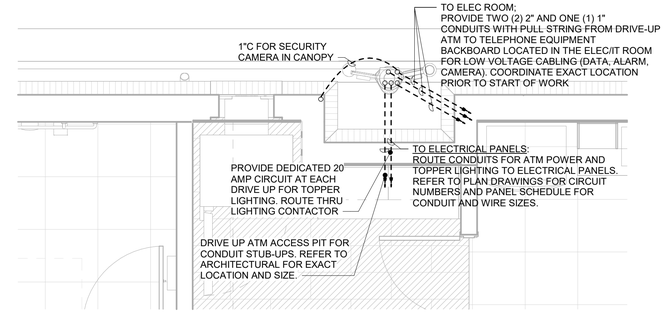


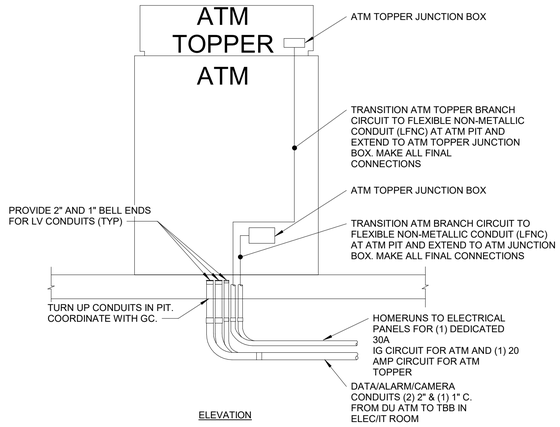
ELEVATION


NOTES:

1. REFER TO ARCHITECTURAL PLANS FOR ATM MODEL NUMBER AND INSTALLATION REQUIREMENTS RELATED TO VEHICULAR AND ANTI-THEFT BOLLARDS, CONDUIT PIT, AND MEDIAN.
2. REFER TO ATM VENDOR CUT SHEETS FOR SPECIFIC REQUIREMENTS PRIOR TO ROUGH-IN.
3. COORDINATE EXACT/FINAL STUB-UP LOCATIONS WITH GC AND ATM CUT SHEETS.
4. EC SHALL BE ON SITE DURING ATM DELIVERY TO MAKE ALL FINAL CONNECTIONS.
5. COORDINATE WITH THE OWNER AND GENERAL CONTRACTOR FOR SCHEDULING WORK.
6. REFER TO ELECTRICAL PANEL SCHEDULES FOR BRANCH CIRCUIT CONDUIT AND WIRE SIZES.
7. REFER TO ELECTRICAL FLOOR PLAN FOR CIRCUIT NUMBERS.
8. CONDUITS SHALL BE SEALED TO PREVENT RODENT INTRUSION.
9. ALL CONDUITS SHALL BE ROUTED CONCEALED.

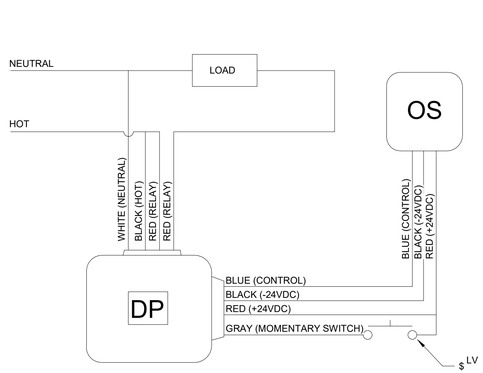



NOTE:
SEE GENERAL NOTES ON THE LIGHTING FLOOR PLANS. LIGHTING CONTROLS SHALL BE INSTALLED AND WIRED PER MANUFACTURER INSTALLATION INSTRUCTIONS. WIRING IN THE DETAIL SHOWN IS FOR REFERENCE AND SHALL BE CONFIRMED WITH THE MANUFACTURER INSTALLATION INSTRUCTIONS

## 3 E-500 CEILING OCCUPANCY SENSOR NO DIMMING
N.T.S.

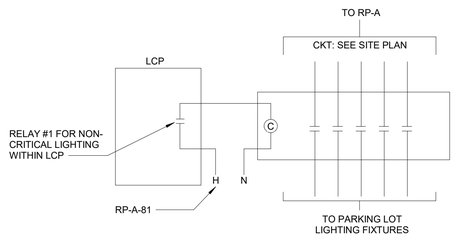



## 5 E-500 CRITICAL LIGHTING CONTACTOR
N.T.S.

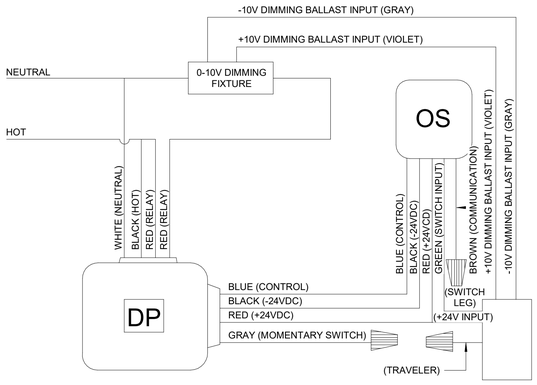


NOTE:
SEE GENERAL NOTES ON THE LIGHTING FLOOR PLANS. LIGHTING CONTROLS SHALL BE INSTALLED AND WIRED PER MANUFACTURER INSTALLATION INSTRUCTIONS. WIRING IN THE DETAIL SHOWN IS FOR REFERENCE AND SHALL BE CONFIRMED WITH THE MANUFACTURER INSTALLATION INSTRUCTIONS.

## 2 E-500 CEILING OCCUPANCY SENSOR WITH DIMMING
N.T.S.

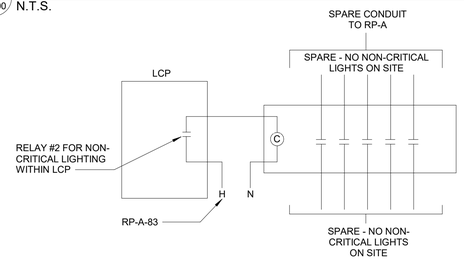


## 4 E-500 NON-CRITICAL LIGHTING CONTACTOR
N.T.S.

PRAXIS3
100 Peachtree St NW
Suite 1450
Atlanta, GA 30303
404-875-4500 tel
www.praxis3.com

GEORGIA REGISTERED No. 041508 PROFESSIONAL ENGINEER RAHN ONEAL WILLIAMS

Copyright (c) 2024 Praxis3, LLC

All reports, plans, specifications, computer files, field data, notes and other documents and instruments prepared by Praxis3 shall retain all common law, statutory and other reserved rights, including copyright thereto.

This drawing may not be reproduced in whole or in part without written permission of Praxis3. It is to be returned upon request. Scales as stated are valid on the original drawings.

| Rev | Date | Comments |
|---|---|---|
| | 07/02/2026 | PERMIT SET |

Client:
**FIFTH THIRD BANK**

Project Number: 26032
Project Name:
**FIFTH THIRD BANK WATSON 1,900 SF**

2711 WATSON BOULEVARD
WARNER ROBBINS, GA 31093

Key Plan:

Sheet Title:
**ELECTRICAL DETAILS**

Sheet Number:
**E-500**

6/30/2026 2:32:06 PM