
REMOVAL/INSTALLATION Page 1 of 2


REMOVAL/INSTALLATION

Remove the following:

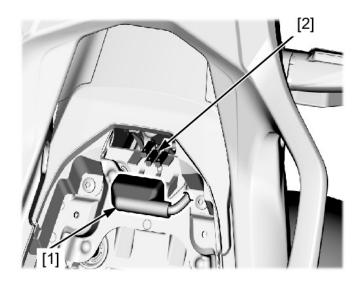

- Pillion seat
- Rear fender A

Release the connector cover [1] from the stay.
Disconnect the license light 2P (White) connector [2].

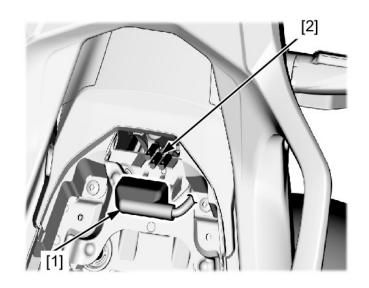

REMOVAL/INSTALLATION Page 2 of 2

Remove the following from the rear fender A stay [1]:

- Screws [2]
- Washers [3]
- Stay [4]
- Grommets [5]
- License light bolts [6]
- License light [7]

Installation is in the reverse order of removal.

TORQUE: License light bolt:			
Г	License	light	bolt:

2.0 N·m (0.20 kgf·m, 1.5 lbf·ft)

