
DISASSEMBLY/ASSEMBLY

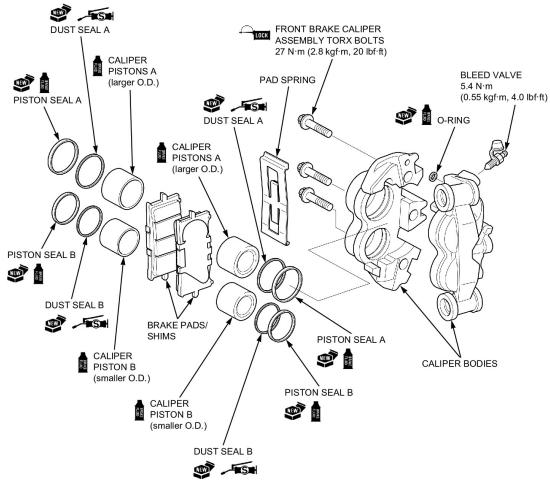

NOTE:

- · Be careful not to damage each piston.
- When removing the caliper pistons with compressed air, place a shop towel over the piston to prevent damaging the piston and caliper body. Do not use high pressure or bring the nozzle too close to the fluid inlet.
 Mark the pistons to ensure correct reassembly.
- Be careful not to damage the piston sliding surface.
- Install each caliper piston in their proper locations.
 Piston A: larger O.D.
 Piston B: smaller O.D.