TURN SIGNAL LIGHT REMOVAL/INSTALLATION


FRONT

Remove the middle cowl_.

Remove the following from the middle cowl [1]:

- Bolt/washer [2]
- Collar [3]
- Turn signal light [4]
- Grommet [5]

Installation is in the reverse order of removal.

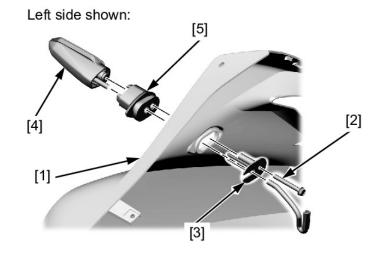


REAR

Remove the following:

- Pillion seat
- Rear fender A

Release the connector cover [1] from the stay. Disconnect the turn signal light 2P connector:

- Right: light blue [2]Left: orange [3]

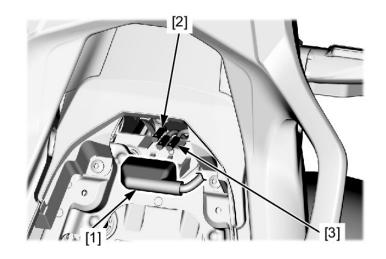

Remove the following from the rear fender A stay [1]:

- Bolt/washer [2]
- Collar [3]
- Turn signal light [4]Grommet [5]

Installation is in the reverse order of removal.

