
REMOVAL/INSTALLATION Page 1 of 2

## **REMOVAL/INSTALLATION**

## Remove the following:

- Windscreen stay
- Middle cowl
- Upper deflector socket bolt (long) [1]
- Plastic washer [2]
- Rubber washer[3]

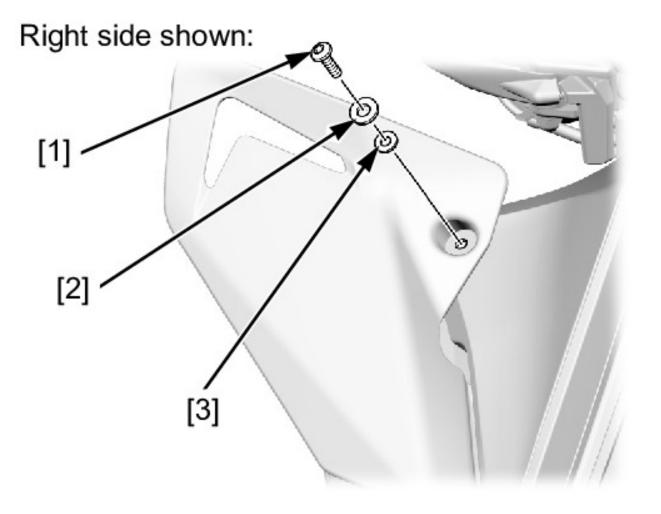

REMOVAL/INSTALLATION Page 2 of 2

Move the screen sliders [1] to the bottom position.

Remove the following:

- Socket bolts [2]
- Trim clips [3]

Release the bosses [4] from the grommets [5]. Remove the front cowl [6].

Installation is in the reverse order of removal.

## **TORQUE:**

Upper deflector socket bolt (long):

0.54 N·m (0.06 kgf·m, 0.4 lbf·ft)

