

# TOP BOX PANEL (ALUMINUM)

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
TOP BOX PANEL (ALUMINUM)	08L83-MKT-D00	NT1100A/D	2021.9	MII	0.2 H

#### Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

#### Honda Dealer:

Please give a copy of these instructions to your customer.

#### Customer

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

#### **How To Read These Symbols**

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

NOTITIES YOU CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

**CAUTION** You CAN be HURT if you don't follow instructions.

**MOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

**NOTE** Things you want to know, things that are useful to know.

Follow the instructions of the Service Manual.

Follow the other symbol instructions of the "Installation Instructions BASIC".

### Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures.

Refer to "Installation Instructions BASIC" for description of each symbol.

### **INFORMATION**

### **A**CAUTION

· To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

## NOTICE

· Take care not to damage the painted surfaces of the motorcycle.


### NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 21°C (70°F).
- · The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- · Save all removed parts unless otherwise indicated.


## **PARTS LIST**

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.

### <TOP BOX PANEL (ALUMINUM)>

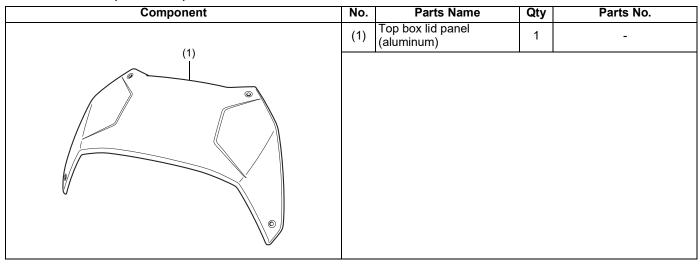


### <TOP BOX (MANUAL)>

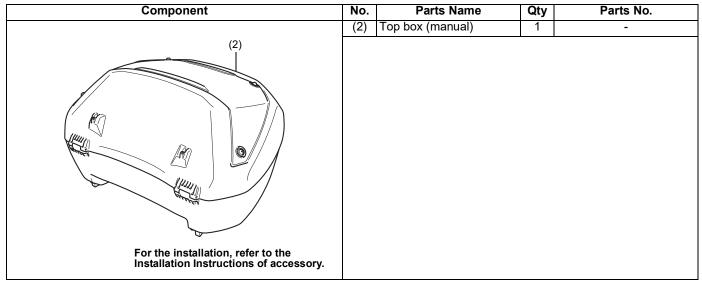


## **TORQUE INFORMATION**

Refer to the Service Manual for the torque values including standard torque of the removed parts. (iii)


# **INSTALLATION**

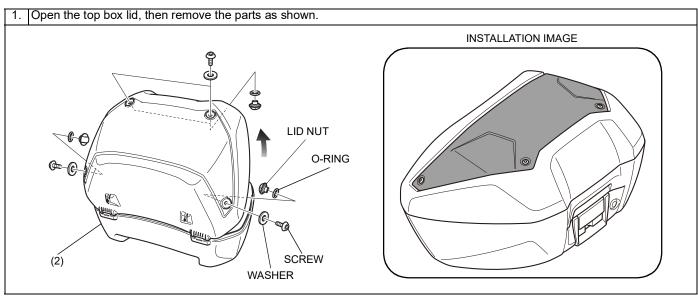


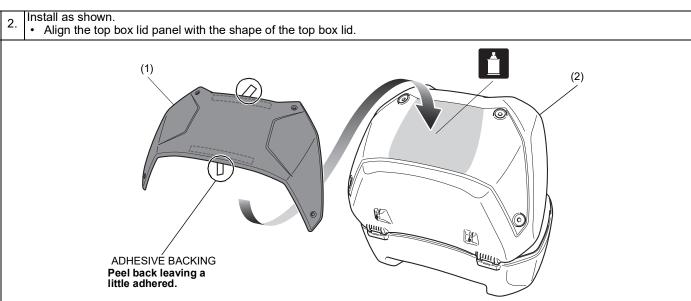

Temporarily set the screws to check the correct position of the attached top box lid panel. Remove the temporarily installed 3. screws.



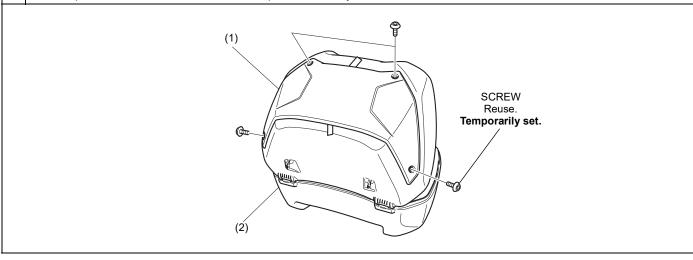

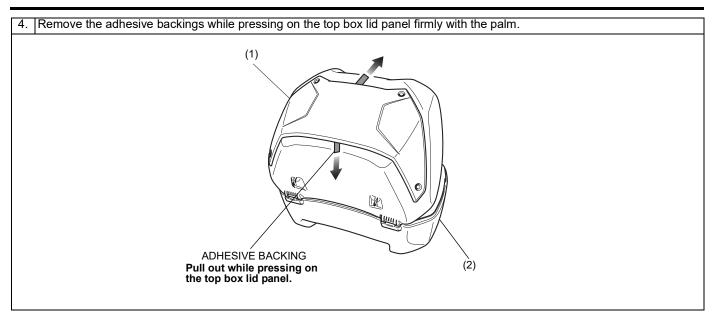

5. Applying adequate pressure of 5 kgf (50 N) to the attached top box lid panel, and then release the adequate pressure and leave the top box lid panel for 10 minutes to stabilize the fitting of the adhesive surface.

