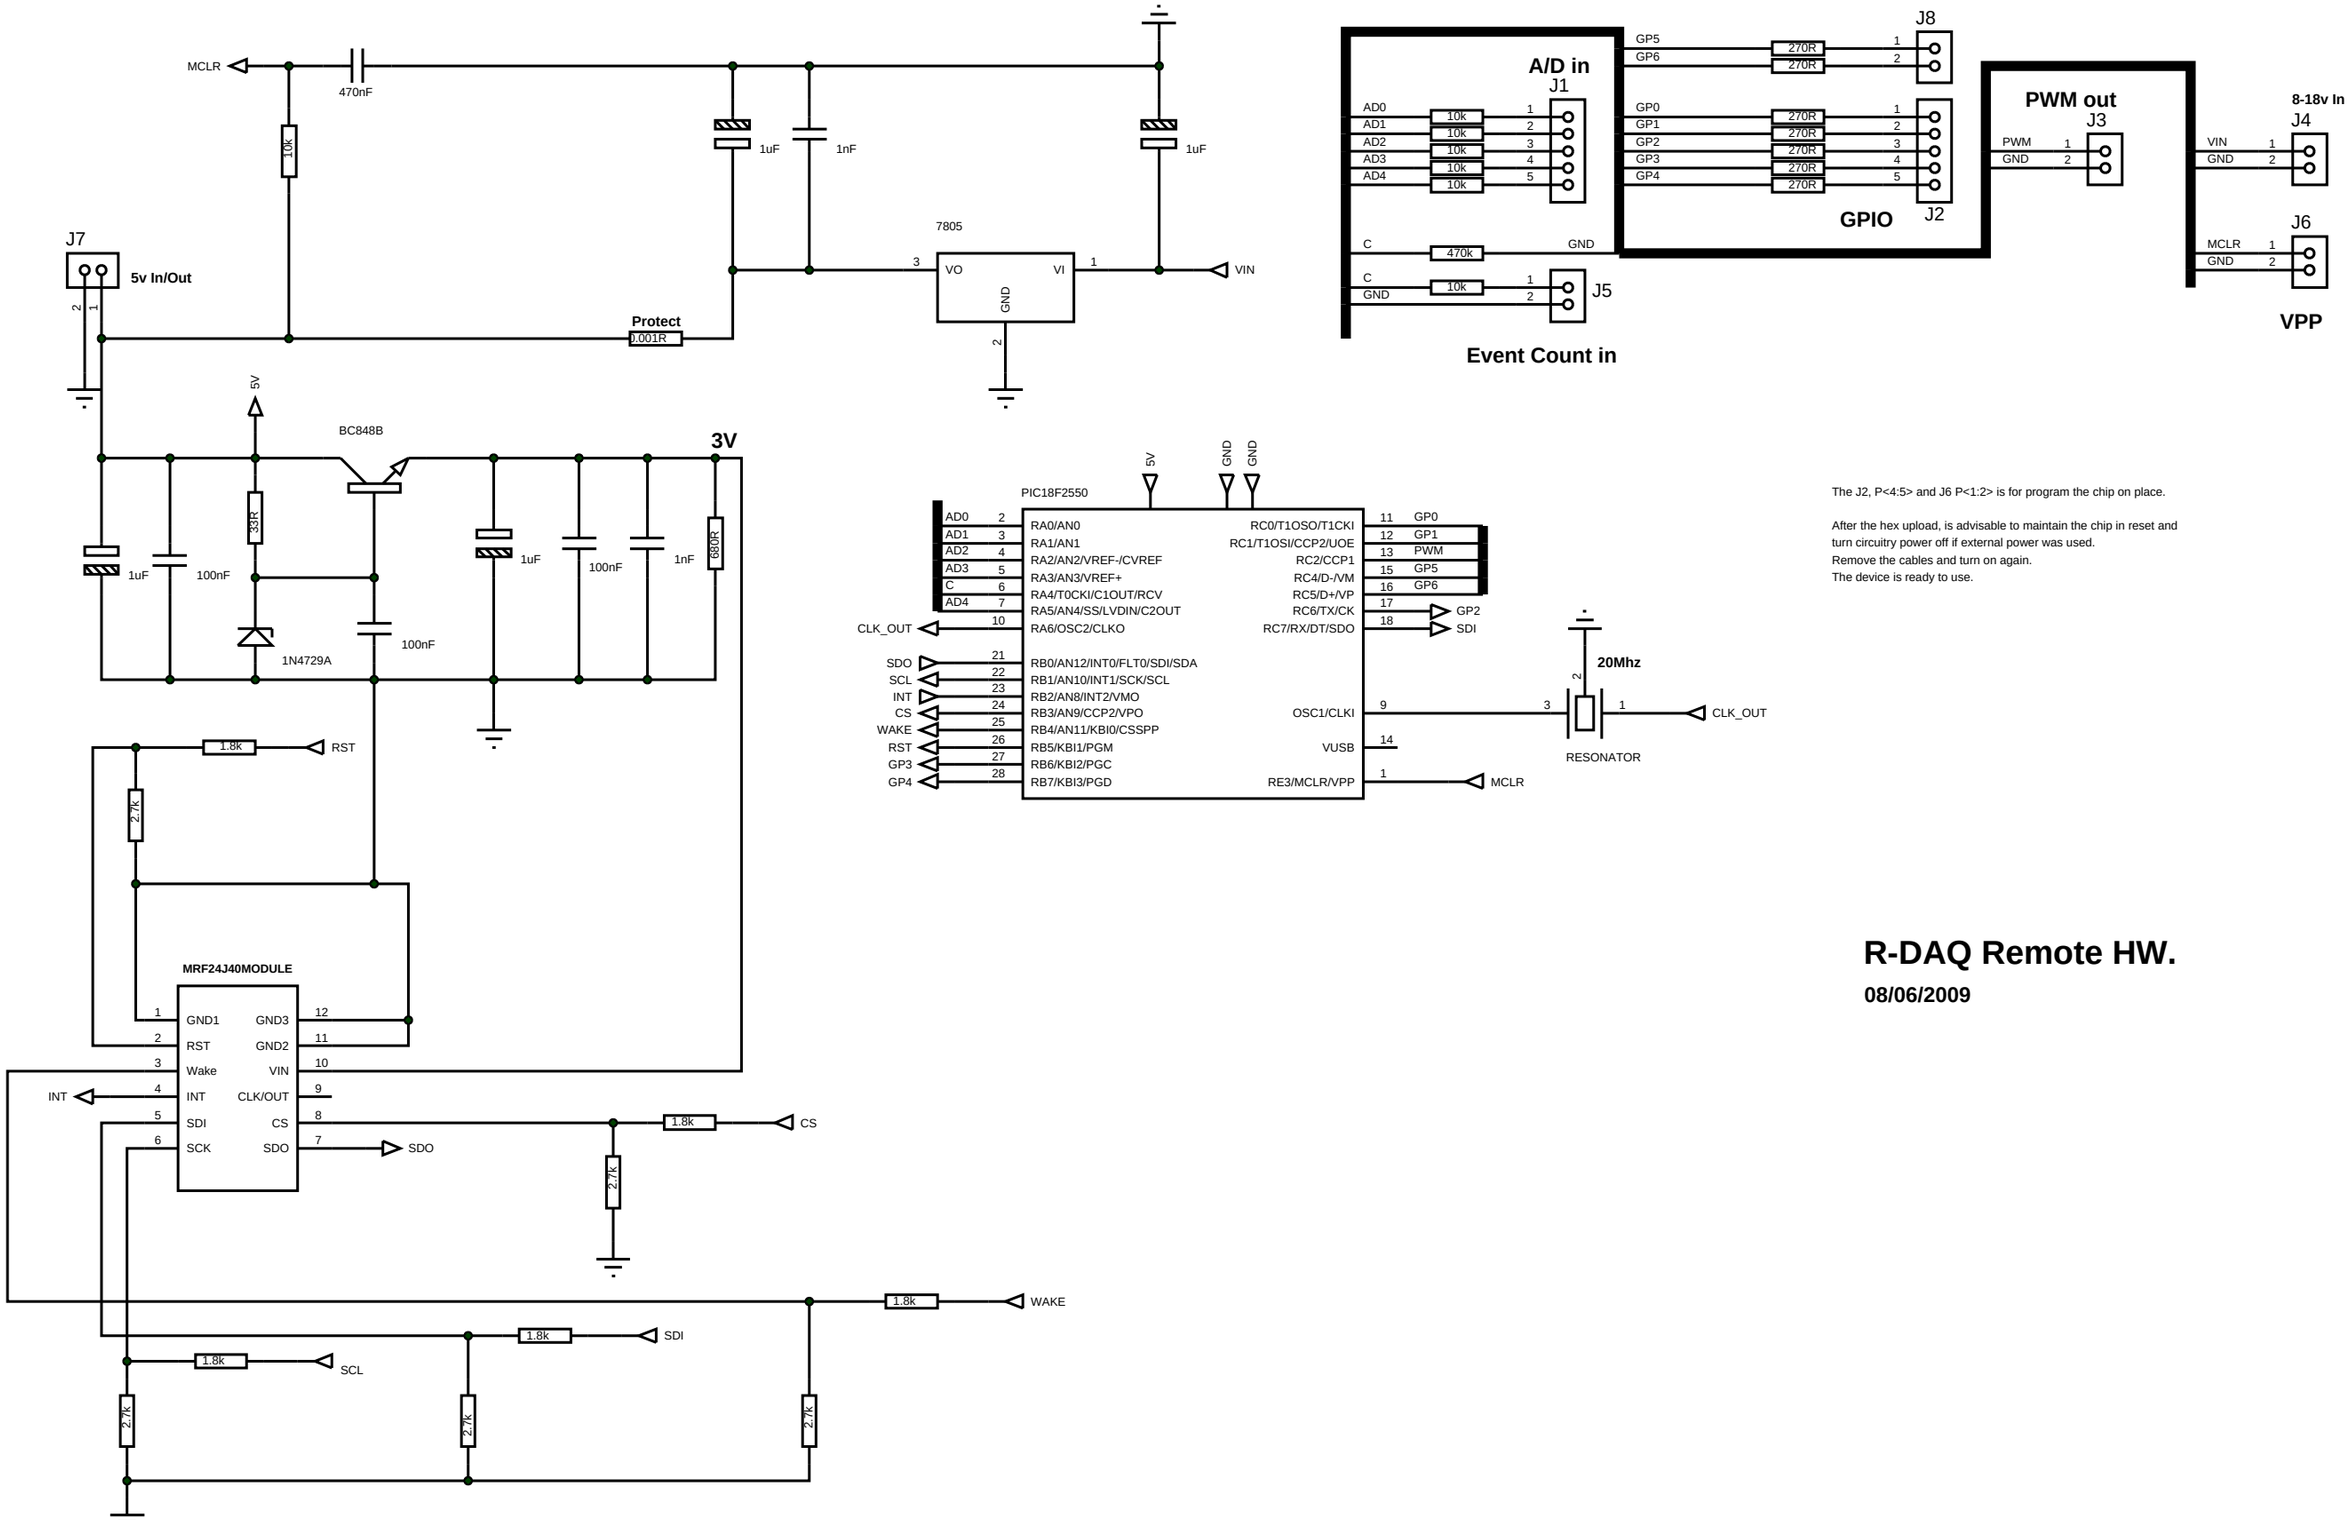

The J2, P<4:5> and J6 P<1:2> is for program the chip on place.

After the hex upload, is advisable to maintain the chip in reset and turn circuitry power off if external power was used.
Remove the cables and turn on again.
The device is ready to use.

R-DAQ Remote HW.

08/06/2009