

Electronic Signals

Maxx Seminario

University of Nebraska-Lincoln

January 2025

Signals: Information Carriers

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation


Frequency
Spectrum

Summary

Definition: Signals contain information about physical phenomena


Weather:

- Temperature
- Pressure
- Humidity

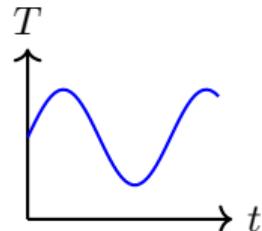


Audio:

- Voice
- Music
- Environmental sounds

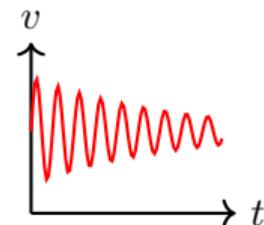

Industrial:

- Machine status
- Process control
- Safety monitoring

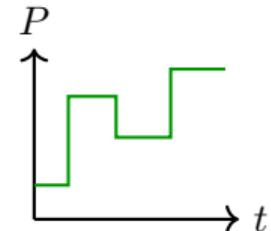

The Challenge

How do we extract useful information from these signals?

From Physical to Electrical Signals

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum
Summary

The Transducer:

- Converts physical signals to electrical
- Output: voltage or current
- Many types for different phenomena

Examples:

- Microphone: sound \rightarrow voltage
- Thermistor: temperature \rightarrow resistance
- Photodiode: light \rightarrow current
- Accelerometer: motion \rightarrow voltage

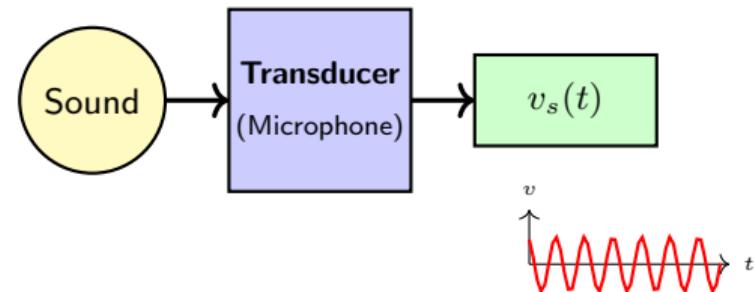


Figure 1: Transducer converts physical signal to electrical

Assumption in This Course

Signals already exist in the electrical domain (voltage or current)

Thevenin and Norton Representations

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum
Summary

Thevenin Form:

- Voltage source $v_s(t)$
- Series resistance R_s

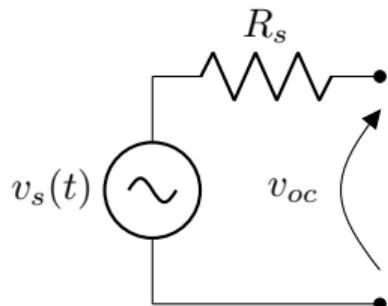


Figure 2: Thevenin equivalent circuit

Norton Form:

- Current source $i_s(t)$
- Parallel resistance R_s

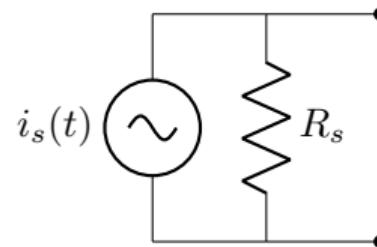


Figure 3: Norton equivalent circuit

Equivalence Condition

$$v_s(t) = R_s \cdot i_s(t) \text{ For the two representations to be equivalent}$$

Source Resistance: The Imperfection

ECEN 222

Maxx Seminario

What are
Signals?


Signal Source
Representations

Time-Domain
Signal
Representation


Frequency
Spectrum

Summary

Thevenin Source with Load:

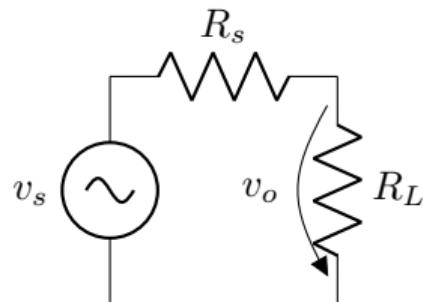

Norton Source with Load:

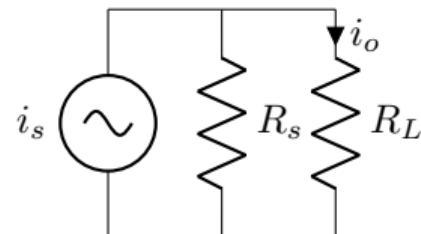

Voltage divider: $v_o = v_s \frac{R_L}{R_L + R_s}$

Condition for $v_o \approx v_s$: $R_s \ll R_L$

Current divider: $i_o = i_s \frac{R_s}{R_s + R_L}$

Condition for $i_o \approx i_s$: $R_s \gg R_L$

Important

Source resistance R_s limits signal delivery to the load!

Signal Loss Due to Source Resistance

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum
Summary

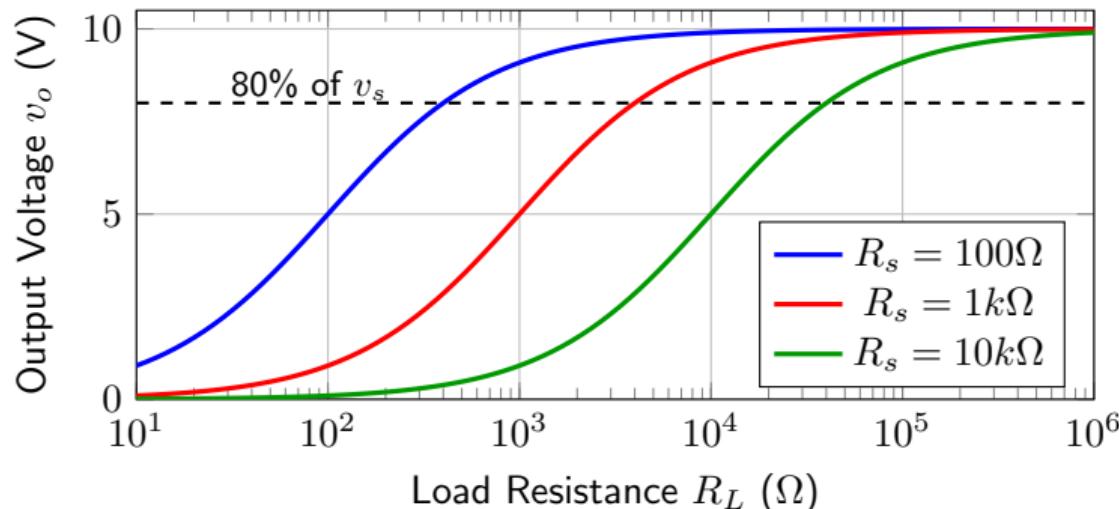


Figure 4: Thevenin source: output voltage vs. load resistance ($v_s = 10V$)

Design Insight

Higher R_s requires higher R_L to minimize signal loss

Arbitrary Time-Domain Signals

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum
Summary

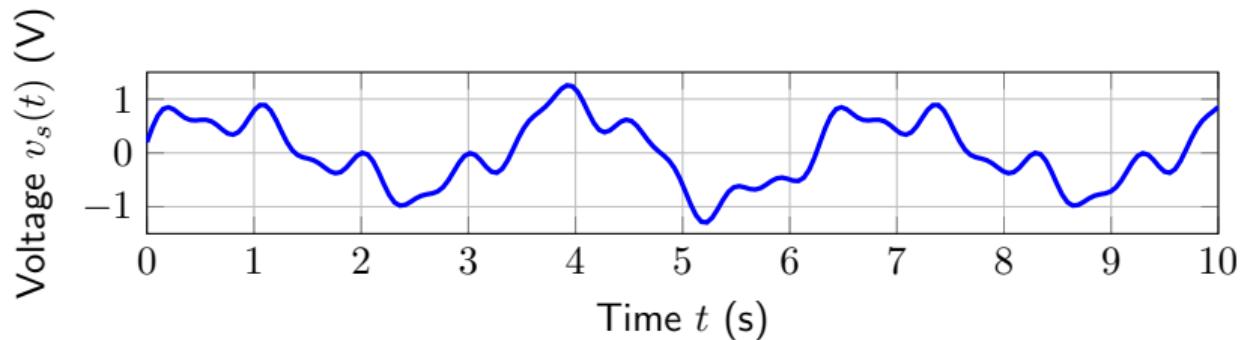


Figure 5: Example of an arbitrary voltage signal $v_s(t)$

Characteristics:

- Information in the “warbles”
- Difficult to describe mathematically

The Challenge:

- How to process?
- How to design circuits?

Solution

Frequency spectrum representation (Recall from Calculus: Fourier Series)

The Sinusoid: Building Block of Signals

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

Sine Wave Equation:

$$v_a(t) = V_a \sin(\omega t)$$

Parameters:

- V_a : Peak amplitude (V)
- ω : Angular frequency (rad/s)
- $f = 1/T$: Frequency (Hz)
- T : Period (s)

RMS Value:

$$V_{rms} = \frac{V_a}{\sqrt{2}}$$

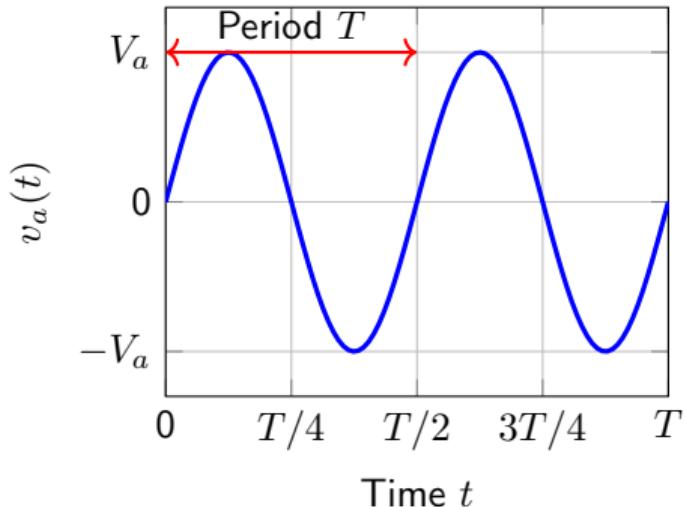


Figure 6: Sinusoidal voltage signal

Key Concept

ANY signal can be represented as a sum of sinusoids

Fourier Series: Periodic Signals

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

Concept: Express periodic signals as sum of harmonically related sinusoids

Square Wave Example:

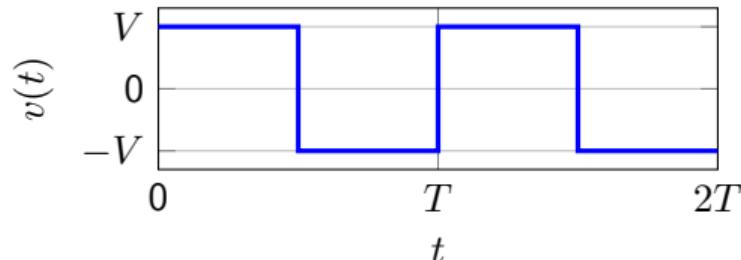


Figure 7: Symmetrical square wave

Frequency Spectrum:

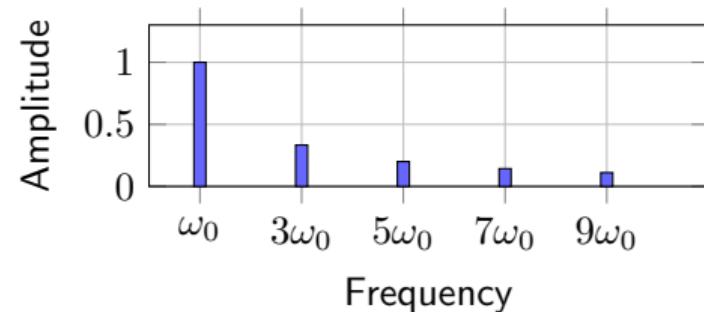


Figure 8: Line spectrum of square wave

Fourier Series:

$$v(t) = \frac{4V}{\pi} \left(\sin \omega_0 t + \frac{1}{3} \sin 3\omega_0 t + \frac{1}{5} \sin 5\omega_0 t + \dots \right), \text{ where } \omega_0 = \frac{2\pi}{T} \text{ is the fund. freq.}$$

Building a Square Wave from Sinusoids

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

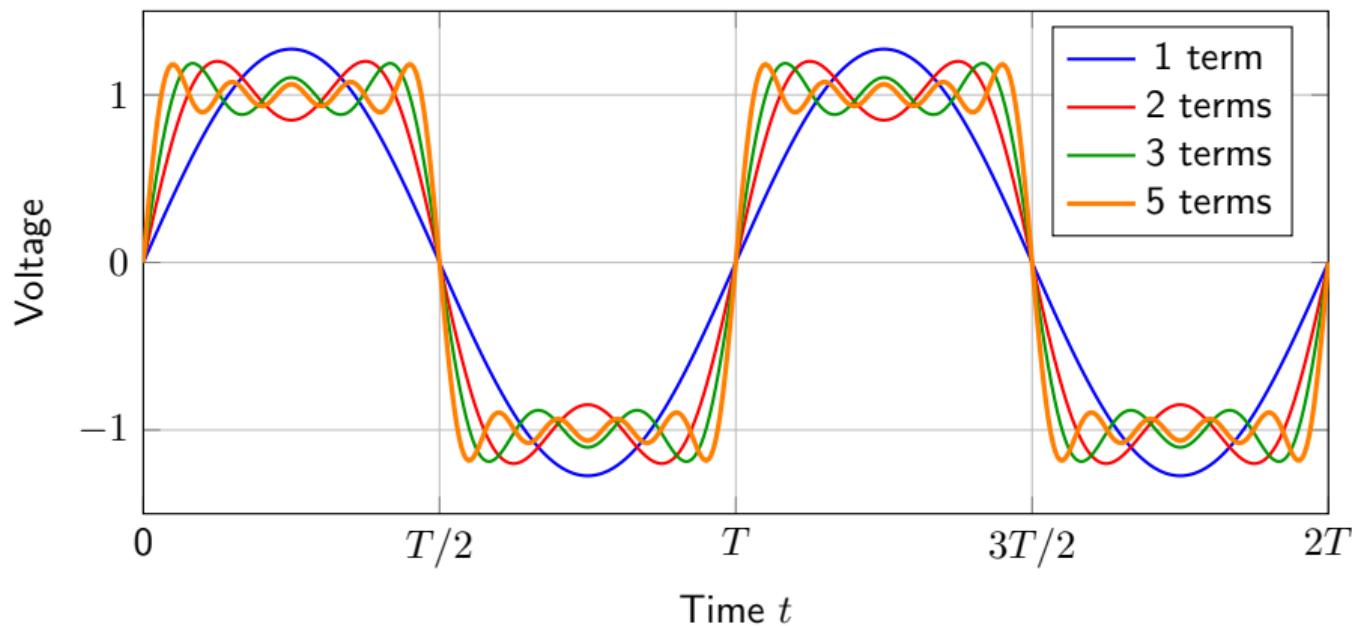


Figure 9: Fourier series approximation improves with more terms

Fourier Transform: Nonperiodic Signals

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

For Nonperiodic Signals:

- Fourier Transform (not series)
- **Continuous** frequency spectrum
- Contains all frequencies
- Notation: $v_a(t) \leftrightarrow V_a(\omega)$

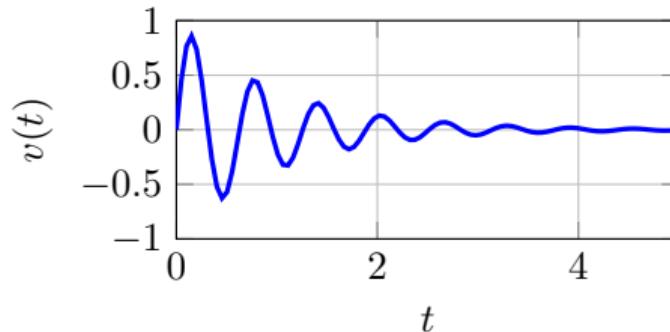


Figure 10: Nonperiodic signal

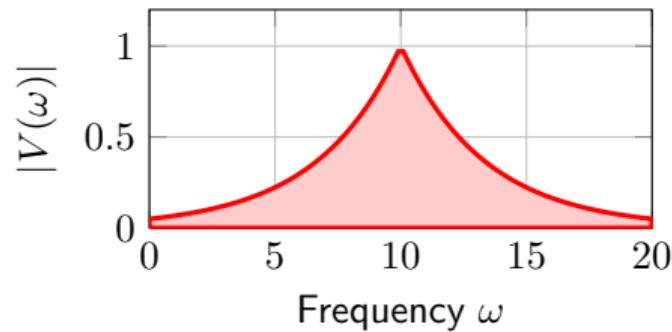


Figure 11: Continuous frequency spectrum

Time vs. Frequency Domain

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

Time Domain:

- Signal as $v(t)$ vs. time
- Shows temporal behavior
- Direct measurement
- Oscilloscope view

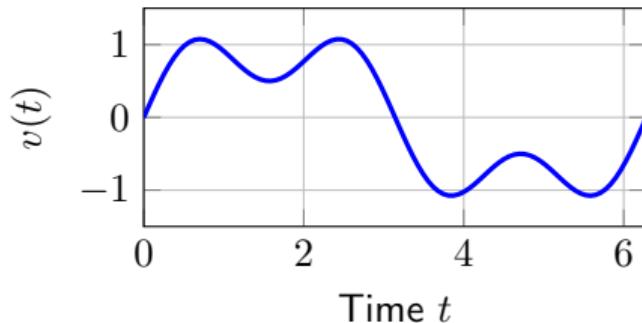


Figure 12: Time-domain representation

Frequency Domain:

- Signal as $V(\omega)$ vs. frequency
- Shows frequency content
- Reveals hidden components
- Spectrum analyzer view

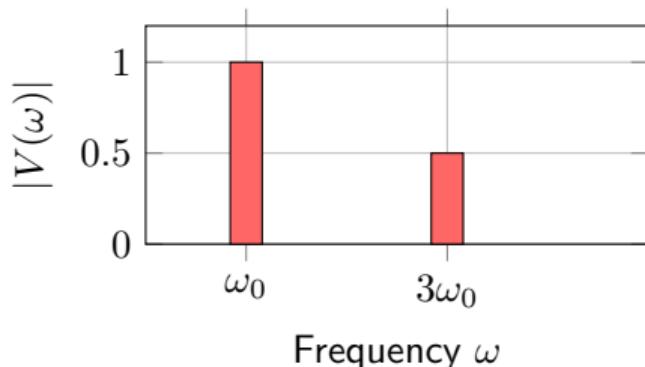


Figure 13: Frequency-domain representation

Summary

ECEN 222

Maxx Seminario

What are
Signals?

Signal Source
Representations

Time-Domain
Signal
Representation

Frequency
Spectrum

Summary

Signals:

- Carry information
- Transducers convert to electrical
- Represented as voltage or current

Signal Sources:

- Thevenin: voltage + R_s
- Norton: current + R_s
- Source resistance limits delivery

Frequency Spectrum:

- Signals as sum of sinusoids
- Fourier series: periodic signals
- Fourier transform: nonperiodic
- Line vs. continuous spectra

Two Representations:

- Time domain: $v(t)$
- Frequency domain: $V(\omega)$