FRC Procedure 2015_005

June 03

2015

Wire Bobbin Back Tension problem (during AWF operation and Positioning function)
"This back tension checking procedure applicable for α- CiA model machines"

[Checking of Wire Bobbin Back tension]

Wire Bobbin Back Tension problem (during AWF operation and positioning function)
"This back tension checking procedure applicable for α- CiA model machines".

Please follow the procedure.

1. The power of ROBOCUT is turned on.

2. Please touch the tension control unit by the finger. (Wire tension sensor)

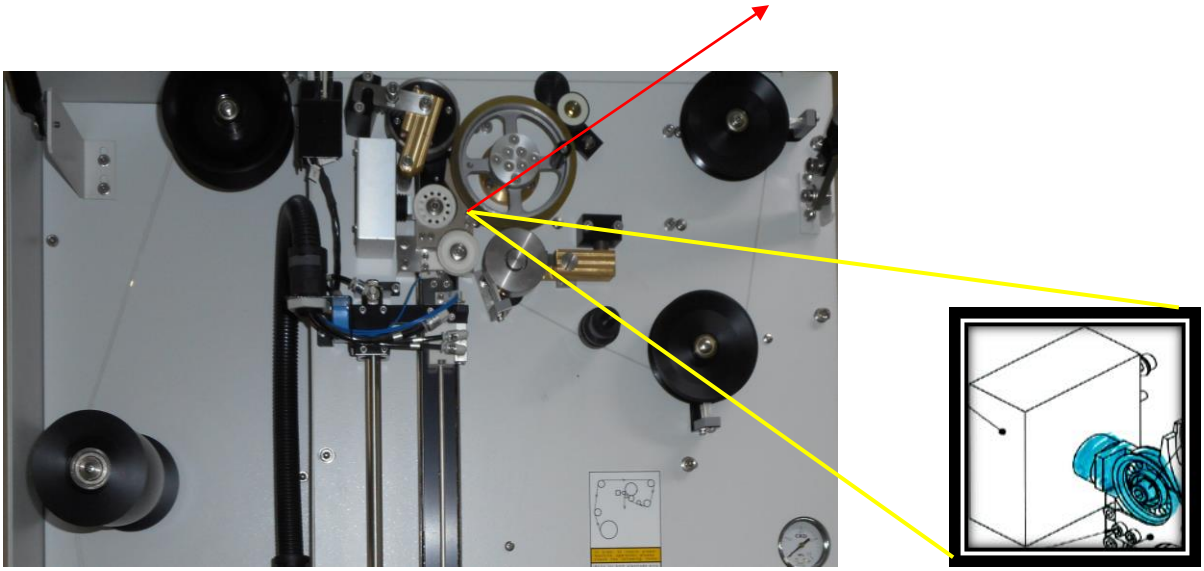

3. Check the back tension of the bobbin [by rotating the bobbin anti clock].

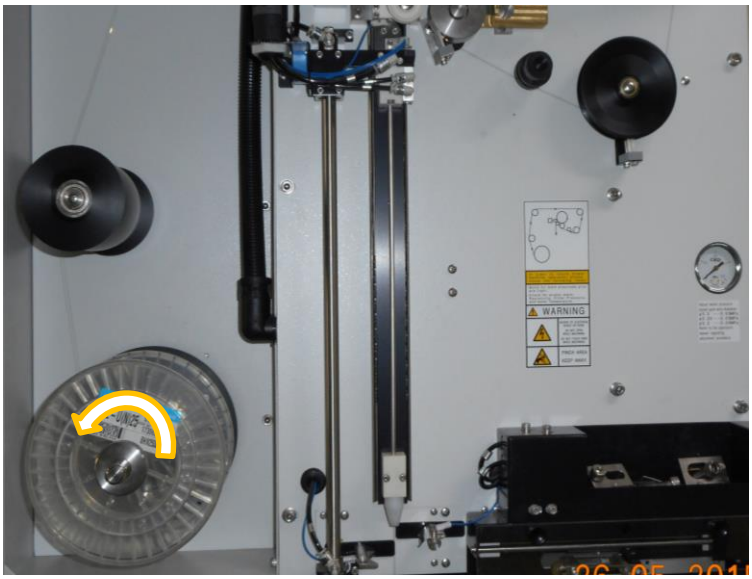

4. If the back tension is normal, the back tension of the bobbin is available.

5. As a result, loosening of the wire of the bobbin doesn't occur.

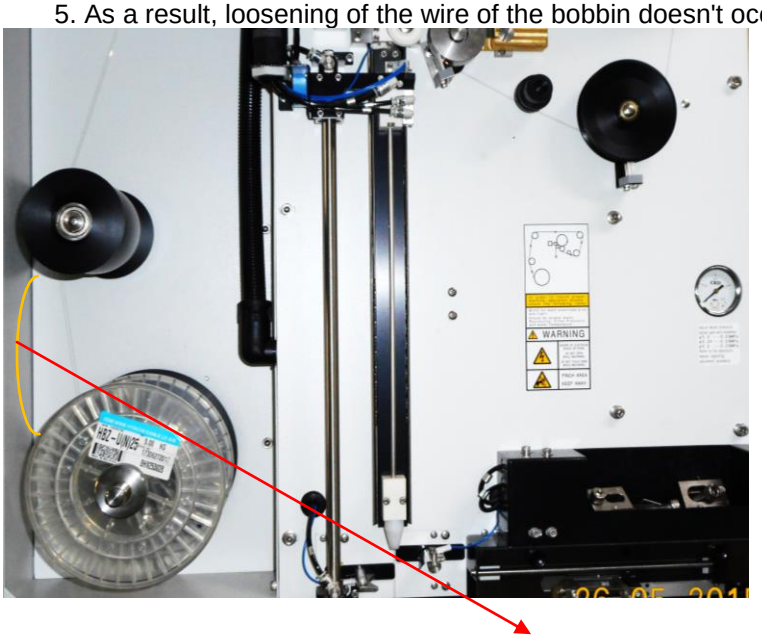

6. If loosening of the wire of the bobbin occurs, then check below points.

7. Check fuses blows. F10, F11, F12 [Electrical Panel]

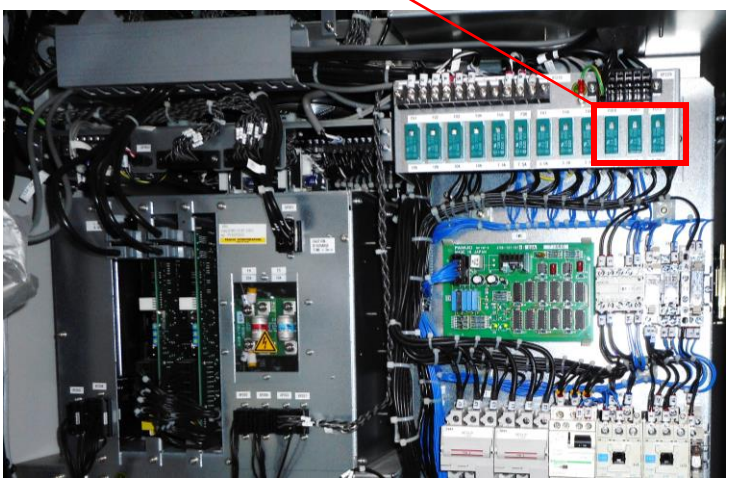

8. Check QF5 breaker is tripped.

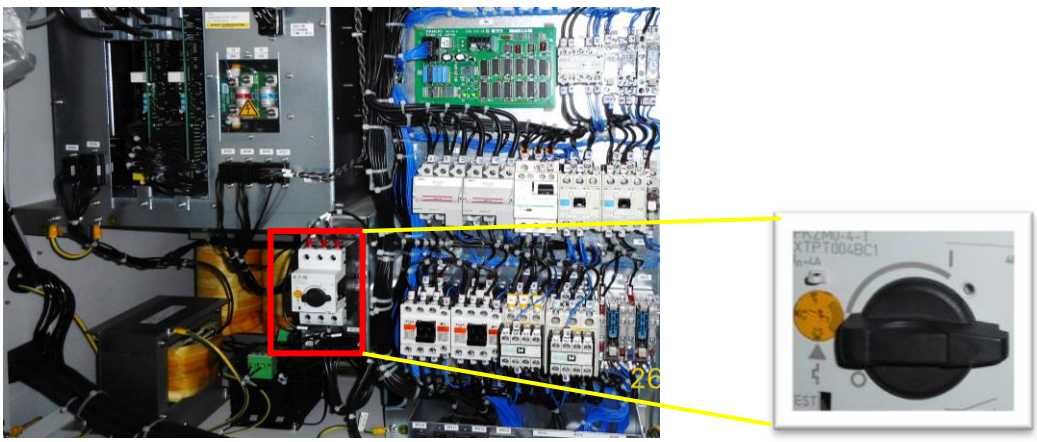

9. Check the input Voltage to breaker [AC 200V, 1Phase], if there is no voltage please check the Transformer -TM1.

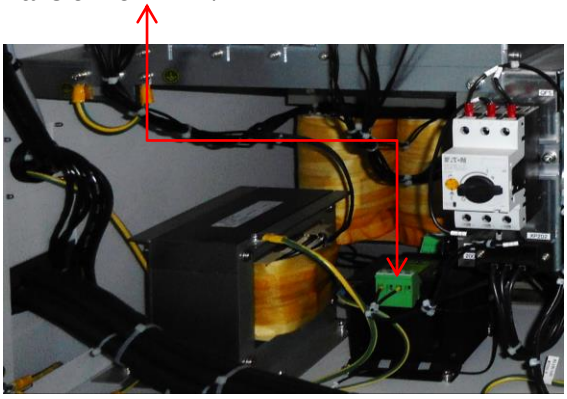

10. Check KA11 & KA12 is ON and Voltage is coming up to wire no 64.

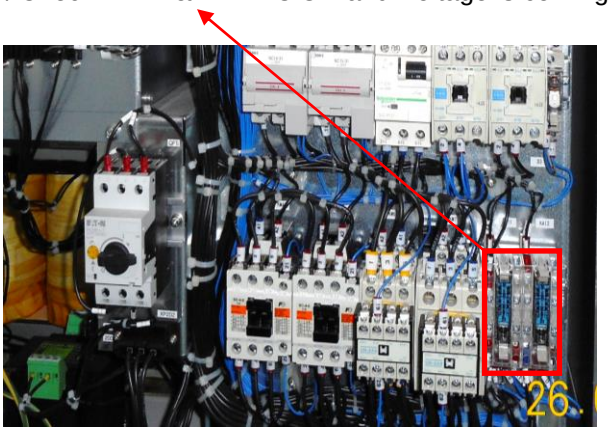

11. Check the AIO PCB 0~10VDC Voltage between “TMP” & “0A” test pins as shown below Pic.

12. Voltage value will be depending on back tension value setting. If Voltage is not appearing (zero) then **AIO PCB is faulty.**

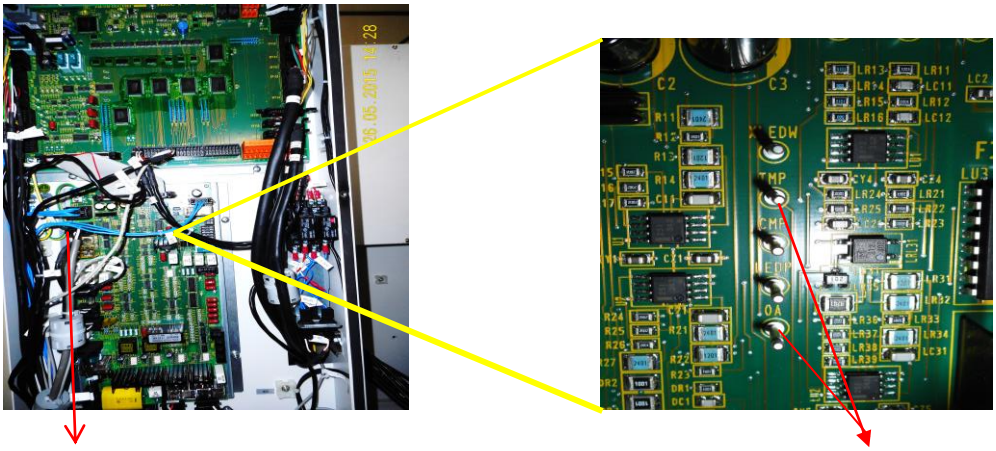

13. Check the Torque Motor AC output Voltage in AIO PCB connector XP78 between A1 & A2, if no output voltage than AIO PCB is faulty.

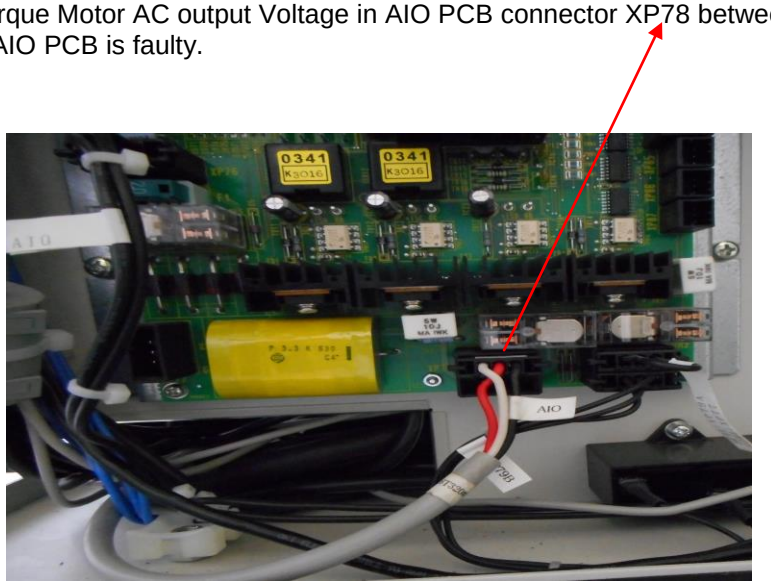

14. If voltage is appearing on XP78 still back tension not appearing than Torque Motor or Cable is faulty.

----------End----------