NEW FOR 2017

WHR SWITCHER™

The new WHR Switcher is two tools in one. Switch between pulling or cleaning without removing the nozzle from the pipe. When the pump is idled down and brought back to pressure the tool will switch the water flow between two different sets of jets.

FEATURES:

- Eliminates extra runs needed to swap nozzles
 saving water and time
- Run more jobs with one tank of water
- Switch to pulling jets for maximum thrust. Excellent for longer runs, climbing hills, going against the flow and flushing large amounts of material
- Switch to cleaning jets to maximize power for cutting roots and clearing debris, all with out affecting the houses



I used the Switcher non-stop every day, 8 hours a day, and didn't have one problem with it. I've been waiting for something like this."


JASON DEMARTINI VALLEJO SANITATION

WHR Switcher Specifications

MAXIMUM PRESSURE	8	k psi	550 bar
OPERATING PRESSURE	1500-8k psi	100)-550 bar
ROTATION SPEED		150-	-400 rpm
FLOW	14-50 gpm	60-	190 I/min
FLOW RATING			2.6 Cv
PULLING FORCE	30-90) lb	13-41 kg
INLET CONNECTION	3/4	4 NPT	or BSPP
NOZZLE PORTS		5 x	1/8 NPT
TOOL DIAMETER INCL. CEN	7. 3.62	25 in.	92 mm
LENGTH	8.20	3 in.	210 mm
WEIGHT COMPLETE	7	'.48 II	3.4 kg

WHR SWITCHER

Exploded View - Part Names and Numbers

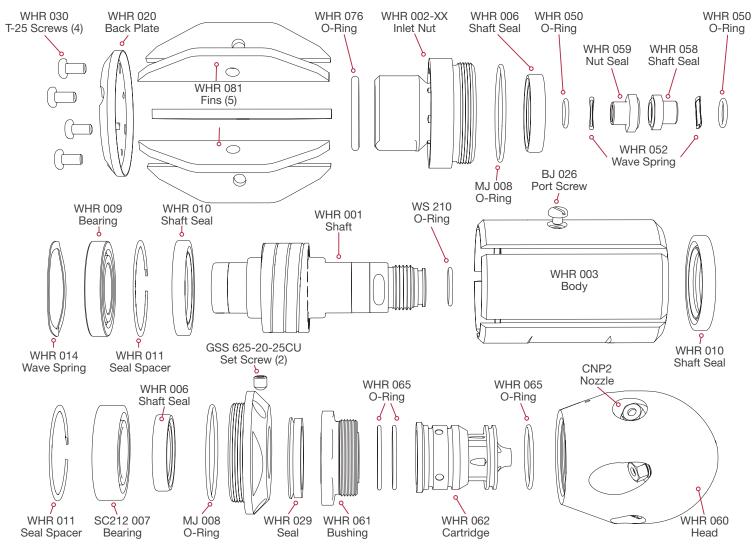

Maintenance & Overhaul Kits -

WHR 600 • SERVICE KIT WHR 602		WHR 602 • I	THR 602 • HP SEAL KIT (2) WHR 006		Shaft Seal – Outer	WHR 612 • TOOL KIT	
(1) BJ 048-M	Visc Fluid, 6oz	(1) BJ 062-S	Antiseize, 2g	(1) WHR 009	Rear Bearing	(1) BA 481	Bearing Removal Tool
(1) BJ 062-S	Antiseize, 2g	(2) WHR 050	O-Ring	(2) WHR 010	Shaft Seal – Inner	(1) WGR 180	Torx L-Wrench
(1) GP 049	Grease Syringe	(2) WHR 052	HP Wave Spring	(2) WHR 011	Seal Spacer	(1) WHR 181	Removal Press Tube
(2) GSS 625-20	D-25CU Set Screw	(1) WHR 058	HP Shaft Seal	(1) WHR 014	Bearing Wave Spring	(1) WHR 182	Install Press Tube
(2) MJ 008	Nut O-Ring	(1) WHR 059	HP Nut Seal	(4) WHR 030	Torx Screws	(1) WHR 183	Hex Tool
(1) SC212 007	Front Bearing	WHR 610 • 0	OVERHAUL KIT	(2) WHR 050	O-Ring	(1) WHR 184	HP Seal Install Tool
(2) WHR 006	Outer Shaft Seal	(2) BJ 026	Port Plug	(2) WHR 052	HP Wave Spring	(1) WGR 186	HP Seal Puller
(1) WHR 009	Rear Bearing	(1) BJ 048-M	Visc Fluid, 6oz	(1) WHR 058	HP Shaft Seal	(1) WHR 187	HP Seal Puller Pin
(2) WHR 010	Inner Shaft Seal	(1) BJ 062-S	Antiseize, 2g	(1) WHR 059	HP Nut Seal		
(2) WHR 011	Seal Spacer	(1) GP 025-P2	SS Hex Plug	(1) WHR 076	Weep Seal O-Ring		
(2) WHR 050	O-Ring	(1) GP 049	Grease Syringe	(1) WS 210	O-Ring		
(1) WHR 076	Weep Seal O-Ring	(2) GSS 625-2	0-25CU Set Screw	(1) WGR 180	Torx L-Wrench		
(4) WHR 030	Torx Screws	(2) MJ 008	Nut O-Ring				
(1) WS 210	O-Ring	(1) SC212 007	Front Bearing				