BANSHEE BEETLE

Rotary Cleaning for Curved Tubes



*Shown larger than actual size.

OVERVIEW

The Banshee line of tube cleaning tools use high pressure water as a liquid bearing, replacing ball bearings, seals or lubricant used in conventional rotary tools. This patented design features a straight flow path that delivers the highest quality jets for maximum cleaning power.

Now the same powerful features that make Banshee tools ideal for unplugging, cleaning and polishing tubes have been packed into the smallest Banshee tools ever engineered — the Beetle BT18 and BT12.

The shorter length of the Beetle models makes them ideal for cleaning process piping, drain lines, u-tube bundles and other small ID tubes with bends and elbows that may have been inaccessible in the past.

COMPETITIVE ADVANTAGES

- Banshee tube cleaning tools are proven to be the most effective on the market
- Uniquely diminuitive size allows the Banshee Beetle to navigate tight curves in small diameter pipe
- Low cost, low maintenance bearing design
- Easy to pair with automated flex lance machines

FEATURES	BENEFITS
Rotating head	Better jet coverage and more efficient cleaning than a static head
Short tool length	 Allows Beetle to pass bends and elbows to clean tubes that may otherwise be inaccessible
Small diameter	 Clean tubes with internal diameters as small as 5/8 in. (16 mm)
	 Accept jobs where small tube size has been a barrier
Patented liquid bearing technology	 No bearings, seals or lubricant to replace — reduced maintenance costs
Recessed inlet design	Retains short rigid length when coupled with hose
• Up to 22k psi (1500 bar) MAWP	Ideal for removing scale, carbons and polymers



QUESTIONS TO ASK YOUR CUSTOMER

- What size and length of hose are you using?
- What pressure and flow are you operating?
- What are the length, diameter and curve radius of the tubes?
- What is the curve radius of the tubes?
- What type of cleaning is required? Are the tubes plugged?
- Do you need a backout preventer? You should always use a backout preventer with high pressure tube cleaning tools.

TOOL SPECIFICATIONS

PART ID	BT12	BT18	
Tube ID Range	0.6-1.0 in. 15-25 mm	0.9–1.3 in. 22–33 mm	
Pressure Range	10–22k psi 700–1500 bar	10–22k psi 700–1500 bar	
Flow Range	6.5–8.5 gpm 25–32 l/min	8.5–11.0 gpm 32–42 l/min	
Flow Coefficient	0.25 Cv	0.25 Cv	
Pulling Force	9.0 lb @ 15k psi 4.1 kg @ 1000 bar	10.5 lb @ 15k psi 4.7 kg @ 1000 bar	
Inlet Connections	P1, M7, MP4L, MP4R	P1, P2, BSPP2, MP6L, MP6R, MP4L, MP4R	
Diameter	0.5 in. 12 mm	0.7 in. 18 mm	
Length	1.3 in. 32 mm	1.5 in. 39 mm	
Maximum Water Temperature	250 °F 120 °C	250 °F 120 °C	

OTHER INFORMATION

- We recommend that the entire system be flushed out before installing the Banshee on the end of the hose or stinger. The swivels require a clean water supply for reliable operation; filtration to 25 micron particulates or smaller is recommended.
- When using rotating nozzles in plugged tubes, do not jam the head into the deposit because this will stop the rotation of the tool and impede the cutting ability. When the tool contacts the deposit, allow it to cut away the material and advance at its own rate. If it stops advancing, pull back slightly on the hose to move the head away from the deposit. This action also allows the jets to cut the deposit at different angles.
- Water must be blown out of the Banshee after each use to avoid corrosion damage. It is also important to soak or bathe the tool in a very light oil such as WD-40 between applications.
- The use of pipe wrenches and or pliers with "teeth" will void all tool warranty. All Banshee tube cleaning tools require the use of a correctly sized open-end wrench to fit the flats provided on the inlet nut when attaching the tool to the lance. Incorrect tools can crush or crack the hardened steel body, leading to failure or breakage during operation.
- It is important to consider the length of your hose crimp and avoid couplings and adapters when configuring the Beetle to best take advantage of the small profile when cleaning tubes with bends or elbows. The following table illustrates minimum tube size and bend radius specifications for common applications:


APPLICATION	TOOL MODEL	MINIMUM TUBE ID	MINIMUM RADIUS
15k psi/P1 on 3 mm Hose	BT12 -	0.63 in. 16 mm	2.5 in. 64 mm
		0.75 in. 19 mm	2.0 in. 51 mm
		0.75 in. 19 mm	2.0 in. 51 mm
		1.0 in. 25 mm	3.0 in. 76 mm
15k psi/P2 on 5 mm Hose	BT18	1.0 in. 25 mm	3.0 in. 76 mm
20k psi/L4 on 5 mm Hose	BT12	0.75 in. 19 mm	5.0 in. 127 mm
		1.0 in. 25 mm	3.0 in. 76 mm
	BT18	1.6 in. 41 mm	2.5 in. 64 mm

Visit the StoneAge Dealer Portal for tool resources including sales, operation and maintenance videos:

DEALER.STONEAGETOOLS.COM



BANSHEE BEETLE TOOL CONFIGURATION

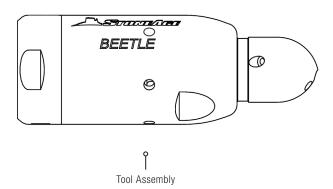

A complete Banshee Beetle tool configuration requires the following components:

1. Tool for required working pressure and inlet connection

The following items may also be required:

Backout preventer

To configure a Banshee tool, the following information should be obtained:

- Pump pressure and flow
- Hose length and ID
- Hose/lance end fitting

ORDERING A BEETLE

Complete tools can be configured by following the steps outlined below.

Contact your StoneAge Account Representative for questions about specific applications.

SIEPI	TOOL SELECTION
CTED4 \	TOOL SELECTION

TUBE SIZE	MAXIMUM PRESSURE	FLOW RANGE	INLET CONNECTION	TOOL PART ID
0.6–1.0 in. 15–25 mm	15k psi 1000 bar	6.5-8.5 gpm 25-32 l/min	1/16 NPT	BT12-P1-B
		6.5-8.5 gpm 25-32 l/min	M7-1.0	BT12-M7-B
	22k psi 1500 bar	6.5-8.5 gpm 25-32 l/min	1/4-28 LH	BT12-MP4L-B
		6.5-8.5 gpm 25-32 l/min	1/4-28 RH	BT12-MP4R-B
	15kmai 1000 har	8.5-11 gpm 32-42 l/min	1/16 NPT	BT18-P1-A
	15k psi 1000 bar	8.5-11 gpm 32-42 l/min	1/8 NPT	BT18-P2-A
	18k psi 1250 bar	8.5-11 gpm 32-42 l/min	1/8 BSPP	BT18-BSPP2-A
0.9–1.3 in. 22–33 mm	nm .	8.5-11 gpm 32-42 l/min	1/4-28 LH	BT18-MP4L-A
		8.5-11 gpm 32-42 l/min	1/4-28 RH	BT18-MP4R-A
	22k psi 1500 bar -	8.5-11 gpm 32-42 l/min	3/8-24 LH	BT18-MP6L-A
		8.5-11 gpm 32-42 l/min	3/8-24 RH	BT18-MP6R-A

STEP 2 MAINTENANCE RESOURCES

StoneAge provides a tool kit for the Banshee Beetle. This kit contains required wrenches for the Beetle swivel.

TOOL MODEL	TOOL KIT	MANUAL
BT12	BT12 612	PL 601
BT18	BT18 612	PL 601

Kit components and tool maintenance/assembly videos are available on the StoneAge Dealer Portal:

DEALER.STONEAGETOOLS.COM

For questions or help with a specific application, configuration or tool repairs, please contact your StoneAge Account Representative.

When ordering a Banshee Beetle tool, the Dealer should specify:

- 1. Tool Part ID
- 2. Part IDs of maintenance items, if required

FOR EXAMPLE:


Beetle for cleaning 1-inch diameter tube at 22k psi with a 1/4" right hand inlet

QTY	PART ID	DESCRIPTION
1	BT18-MP4R-A	Beetle Tube Spinner, 22k psi (8.5-11gpm)



TOOL COMPONENT VIEW

BEETLE BT12

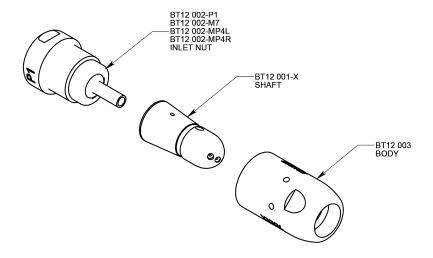

BEETLE BT18

