



# **MicroBlaze Debug Module** (MDM) (v1.00g)

DS641 December 2, 2009

**Product Specification** 

### Introduction

This document provides the design specification for the MicroBlaze<sup>TM</sup> Debug Module (MDM) which enables JTAG-based debugging of one or more MicroBlaze processors.

## **Features**

- Support for JTAG-based software debug tools
- Support for debugging up to eight MicroBlaze processors (version 7 and higher)
- Support for synchronized control of multiple MicroBlaze processors
- Support for a JTAG based UART with a configurable OPB or PLBv46 interface
- Based on Boundary Scan (BSCAN) logic in Xilinx® **FPGAs**
- Supports connection to the Chipscope™ ICON core through BSCAN signals
- Support for one master FSL port
- Support for the Xilinx MicroBlaze Trace Core (XMTC)

LogiCORE™ Facts					
Core Specifics					
Supported Device Family	6, Spart Spartan Virtex <sup>®</sup> - Virtex-5	Spartan <sup>®</sup> -3, Spartan-3E, Spartan-6, Spartan-3A/3A DSP, Automotive Spartan-3/-3A/3A DSP/ 3E, Virtex <sup>®</sup> -4, Virtex-4Q, Virtex-4QV, Virtex-5, Virtex-5 FX, Virtex-6, Virtex-6CX			
Resources Used	I/O	LUTs	FFs	Block RAMs	
	N/A	4	N/A	N/A	
Provided with Core					
Documentation	Product Specification				
Design File Formats	VHDL				
Constraints File	N/A				
Verification	N/A				
Instantiation Template	N/A				
Design Tool Requirements					
Xilinx Implementation Tools ISE® 11.4 or later					
Verification N/A					
Simulation	ModelSim PE/SE 6.4b or later				
Synthesis XST				XST	
Support					
Provided by Xilinx, Inc.					

© 2007-2009 Xilinx, Inc., XILINX, the Xilinx logo, Virtex, Spartan, ISE and other designated brands included herein are trademarks of Xilinx in the United States and other countries. All other trademarks are the property of their respective owners.



### **Overview**

The MicroBlaze Debug Module (MDM):

- Enables JTAG-based debugging of one or more MicroBlaze processors. It also provides JTAG-based communication to the Xilinx MicroBlaze Trace Core.
- Includes a master FSL interface.
- Instantiates one BSCAN primitive. In the Virtex®-4 and Virtex-5 architectures which contain more than one BSCAN primitive, MDM uses the USER2 BSCAN by default.
- Includes a UART with a configurable slave bus interface which can be configured for either a PLBv46 bus or an OPB bus.

The UART TX and RX signals are transmitted over the FPGA JTAG port to and from the Xilinx Microprocessor Debug (XMD) tool. When the data width is 8, the UART behaves in a manner similar to the OPB\_UARTLITE or the OPB\_JTAGUART cores.

The block diagram of the module is shown in the following figure:.

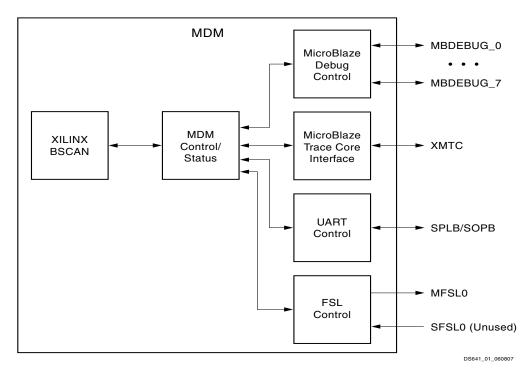


Figure 1: Microprocessor Debug Module (MDM) Block Diagram

# MDM I/O Signals

The I/O signals for the MicroBlaze Debug Module (MDM) are listed and described in Table 1.



Table 1: MDM I/O Signals

Signal Name	Interface	I/O	Initial State	Description		
System Signals						
Interrupt		0	0	Interrupt from UART		
Debug_SYS_Rst		0	0	Debug system reset		
Ext_BRK		0	0	External break		
Ext_NM_BRK		0	0	External non-maskable break		
	PLB Interfa	ace Sig	nals			
SPLB_Clk	SPLB	I	=	PLB clock		
SPLB_Rst	SPLB	I	•	PLB reset		
PLB_ABus[0:31]	SPLB	I	-	PLB address bus		
PLB_UABus[0:31]	SPLB	I	•	PLB upper address bus		
PLB_PAValid	SPLB	I	•	PLB primary address valid		
PLB_SAValid	SPLB	I	=	PLB secondary address valid		
PLB_rdPrim	SPLB	I	-	PLB secondary to primary read request indicator		
PLB_wrPrim	SPLB	ı	-	PLB secondary to primary write request indicator		
PLB_MasterID[0:C_SPLB_MID_WIDTH-1]	SPLB	I	-	PLB current master identifier		
PLB_busLock	SPLB	I	-	PLB bus lock		
PLB_abort	SPLB	1	·	PLB abort		
PLB_RNW	SPLB	I	-	PLB read not write		
PLB_BE[0:C_SPLB_DWIDTH/8 - 1]	SPLB	I	Ī	PLB byte enables		
PLB_MSize[0:1]	SPLB	I	-	PLB data bus width indiactor		
PLB_size[0:3]	SPLB	I	=	PLB size of requested transfer		
PLB_type[0"2]	SPLB	I	•	PLB transfer type		
PLB_lockErr	SPLB	I	ı	PLB lock error		
PLB_wrDBus[0:C_SPLB_DWIDTH-1]	SPLB	I	-	PLB write data bus		
PLB_wrBurst	SPLB	I	•	PLB burst write transfer		
PLB_rdBurst	SPLB	I	-	PLB burst read transfer		
PLB_wrPendReq	SPLB	ı	Ī	PLB pending bus write request		
PLB_rdPendReq	SPLB	I	•	PLB pending bus read request		
PLB_wrPendPri[0:1]	SPLB	ı	-	PLB pending write request priority		
PLB_rdPendPri[0:1]	SPLB	I	-	PLB pending read request priority		
PLB_reqPri[0:1]	SPLB	I	-	PLB current rquest priority		
PLB_TAttribute[0:15]	SPLB	I	=	PLB transfer attribute		
SI_addrAck	SPLB	0	-	Slave address acknowledge		
SI_SSize[0:1]	SPLB	0	-	Slave data bus size		



Table 1: MDM I/O Signals (Cont'd)

Signal Name	Interface	I/O	Initial State	Description
SI_wait	SPLB	0	-	Slave wait
SI_rearbitrate	SPLB	0	-	Slave bus rearbitrate
SI_wrDAck	SPLB	0	-	Slave write data acknowledge
SI_wrComp	SPLB	0	-	Slave write transfer complete
SI_wrBTerm	SPLB	0	-	Slave terminate write burst transfer
SI_rdDBus[0:C_SPLB_DWIDTH -1]	SPLB	0	-	Slave read data bus
SI_rdWdAddr[0:3]	SPLB	0	-	Slave read word address
Sl_rdAck	SPLB	0	-	Slave read data acknowledge
SI_rdComp	SPLB	0	-	Slave read transfer complete
SI_rdBTerm	SPLB	0	-	Slave terminate read burst transfer
SI_MBusy [0:C_SPLB_NUM_MASTERS-1]	SPLB	0	-	Slave busy
SI_MWrErr [0:C_SPLB_NUM_MASTERS-1]	SPLB	0	-	Slave write error
SI_MrdErr [0:C_SPLB_NUM_MASTERS-1]	SPLB	0	-	Slave read error
SI_MIRQ [0:C_SPLB_NUM_MASTERS-1]	SPLB	0	-	Master interrupt request
	OPB Interf	ace Sig	ınals	
OPB_Clk	ОРВ	I	-	OPB clock
OPB_Rst	ОРВ	I	-	OPB reset
OPB_ABus[0:31]	ОРВ	I	-	OPB address bus
OPB_BE[4]	ОРВ	1	-	OPB Byte Enable
OPB_RNW	ОРВ	I	-	OPB Read Not Write
OPB_select	ОРВ	I	-	OPB Select
OPB_seqAddr	ОРВ	I	-	OPB Sequential Address
OPB_DBus[0:31]	ОРВ	I	-	OPB Data Bus
MDM_DBus	ОРВ	0	0	MDM slave Data Bus
MDM_errAck	ОРВ	0	0	MDM slave Error Ack
MDM_retry	ОРВ	0	0	MDM slave Retry
MDM_toutSup	ОРВ	0	0	MDM slave Timeout Suppress
MDM_xferAck	ОРВ	0	0	MDM slave Transfer Acknowledge
	MicroBlaze Debug	g Interf	ace Signa	ls
Dbg_Clk_n	MBDEBUG_n	0	0	MicroBlaze Debug Clock
Dbg_TDI_n	MBDEBUG_n	0	0	MicroBlaze Debug TDI
Dbg_TDO_n	MBDEBUG_n	I	-	MicroBlaze Debug TDO
Dbg_Reg_En_n	MBDEBUG_n	0	0	MicroBlaze Debug Register Enable



Table 1: MDM I/O Signals (Cont'd)

Signal Name	Interface	I/O	Initial State	Description
Dbg_Capture_n	MBDEBUG_n	0	0	MicroBlaze Debug Capture
Dbg_Shift_n	MBDEBUG_n	0	0	MicroBlaze Debug Shift
Dbg_Update_n	MBDEBUG_n	0	0	MicroBlaze Debug Update
Dbg_Rst_n	MBDEBUG_n	0	0	MicroBlaze Debug Reset
	FSL Interfa	ace Sig	nals	
FSL0_M_Clk	FSL	0	0	Master FSL port clock
FSL0_M_Write	FSL	0	0	Master FSL port write signal
FSL0_M_Data[0:31]	FSL	0	0	Master FSL port data signals
FSL0_M_Control	FSL	0	0	Master FSL port control signal
FSL0_M_Full	FSL	I	-	Master FSL port full signal
FSL0_S_Clk	FSL	0	0	Read FSL port clock (not used)
FSL0_S_Read	FSL	0	0	Read FSL port write signal (not used)
FSL0_S_Data[0:31]	FSL	I	-	Read FSL port data signals (not used)
FSL0_S_Control	FSL	I	-	Read FSL port control signal (not used)
FSL0_S_Exists	FSL	I	-	Read FSL port full signal (not used)
	MicroBlaze Trace Co	ore Inte	erface Sig	nals
Ext_JTAG_DRCK	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_RESET	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_SEL	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_CAPTURE	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_SHIFT	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_UPDATE	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_TDI	XMTC	0	0	Connection to MicroBlaze Trace Core
Ext_JTAG_TDO	XMTC	I	-	Connection to MicroBlaze Trace Core
	Chipscope ICON	Interfa	ce Signal	s
bscan_tdi	ICON	0	0	Connection to Chipscope ICON core
bscan_reset	ICON	0	0	Connection to Chipscope ICON core
bscan_shift	ICON	0	0	Connection to Chipscope ICON core
bscan_update	ICON	0	0	Connection to Chipscope ICON core
bscan_capture	ICON	0	0	Connection to Chipscope ICON core
bscan_sel1	ICON	0	0	Connection to Chipscope ICON core
bscan_drck1	ICON	0	0	Connection to Chipscope ICON core
bscan_tdo1	ICON	I	-	Connection to Chipscope ICON core



# **MDM Design Parameters**

Table 2 lists and describes the features that can be parameterized in MDM.

**Table 2: MDM Design Parameters** 

Syster	D		Type				
	System Parameters						
C_FAMILY	spartan3, aspartan3, spartan3e, aspartan3e, spartan3a, aspartan3a, spartan3adsp, aspartan3adsp, spartan6, virtex4, qrvirtex4, virtex5, virtex5fx, virtex6, virtex6cx	virtex5	string				
Debu	g Parameters						
C_MB_DBG_PORTS	0-8	1	integer				
C_JTAG_CHAIN	1 = USER1 2 = USER2 3 = USER3 4 = USER4	2	integer				
		1					
C_USE_UART	0,1	1	integer				
C_INTERCONNECT	0 = OPB 1 = PLBv46	1	integer				
C_UART_WIDTH	8,16,32	8	integer				
C_BASEADDR	Valid Address <sup>(1)</sup>	None (1)	std_logic_ vector				
C_HIGHADDR	Valid Address (1)	None (1)	std_logic_ vector				
PLB	Parameters						
C_SPLB_AWIDTH	32	32	integer				
C_SPLB_DWIDTH	32	32	integer				
C_SPLB_P2P	0 = Shared Bus Topology 1 = Point-to- Point Bus Topology	0	integer				
C_SPLB_MID_WIDTH	log <sub>2</sub> (C_SPLB _NUM_MASTERS) with a minimum value of 1	1	integer				
C_SPLB_NUM_MASTER S	1-16	1	integer				
C_SPLB_NATIVE_WIDTH	32	32	integer				
C_SPLB_SUPPORT_ BURSTS	0 = Supports only single beat transactions	0	integer				
	C_MB_DBG_PORTS  C_JTAG_CHAIN  C_USE_UART C_INTERCONNECT  C_UART_WIDTH  C_BASEADDR  C_HIGHADDR  PLB  C_SPLB_AWIDTH  C_SPLB_DWIDTH  C_SPLB_DWIDTH  C_SPLB_P2P  C_SPLB_MID_WIDTH  C_SPLB_NUM_MASTER S C_SPLB_NATIVE_WIDTH  C_SPLB_SUPPORT_ BURSTS	spartan6, virtex4, qrvirtex4, virtex5, virtex5fx, virtex5fx, virtex6cx    Debug Parameters	Spartan6, virtex4, qrvirtex4, qvirtex4, virtex5, virtex5fx, virtex5fx, virtex6fx virtex6fx   Debug Parameters				



Table 2: MDM Design Parameters

Feature / Description	Parameter Name	Allowable Values	Default Value	VHDL Type
OPB data width	C_OPB_DWIDTH	32	32	integer
OPB address width	C_OPB_AWIDTH	32	32	integer
FSL Parameters				
Number of write FSL ports	C_WRITE_FSL_PORTS	0,1	0	integer

<sup>1.</sup> The range specified by C\_BASESADDR and C\_HIGHADDR must be sized and aligned to some power of 2, 2n. Then, the least n significant bits of C\_BASEADDR are zero. This range needs to encompass the addresses needed by the MDM UART registers.

#### **Allowable Parameter Combinations**

There are no restrictions on parameter combinations for this core.

## **Parameter-Port Dependencies**

The core has no parameter-port dependencies.

## **MDM Registers**

The MDM registers are listed and described in Table 3.

Table 3: MDM Registers

Register Name	Size (bits)	Address Offset	Initial State	Description
Rx_FIFO	C_UART_WIDTH	0	0	JTAG UART receive data
Tx_FIFO	C_UART_WIDTH	4	0	JTAG UART transmit data
Status_reg	8	8	0x04	Read only bit 7 rx_Data_Present bit 6 rx_Buffer_Full bit 5 tx_Buffer_Empty bit 4 tx_Buffer_Full bit 3 enable_interrupts
Ctrl_reg	8	С	0x03	Write only bit 3 enable_interrupts bit 5 Clear Ext BRK signal bit 6 Reset_RX_FIFO bit 7 Reset_TX_FIFO

# **MDM Interrupts**

If the interrupt enable register bit in the control register is set, the UART raises the interrupt signal in the cycle when the TX FIFO goes empty, or in every cycle where the RX FIFO has data available.



## **Design Implementation**

## **Target Technology**

The intended target technology is an FPGA in one of the following families: Spartan-3, Spartan-3E, Spartan-3A, Spartan-3A DSP, Automotive Spartan-3/3A/3E/3A DSP, Spartan-6, Virtex-4QV, Virtex-4Q, Virtex-5, Virtex-5FX, Virtex-6.

#### **Device Utilization and Performance Benchmarks**

Not available.

## **Specification Exceptions**

When programming a SystemAce device, the MDM clock must be at least twice as fast as the SystemAce controller clock for the ELF file to load correctly.

## **Reference Documents**

The MDM core is intended to be used with the EDK XMD tool. For more information on how to debug using MDM and XMD, see the *Embedded System Tools Reference Manual*.

# **Revision History**

Date	Version	Revision
6/18/2007	1.0	Initial Xilinx release.
11/21/2007	1.1	Updated table titles.
4/28/2008	1.2	Added Automotive Spartan <sup>®</sup> -3E, Automotive Spartan-3A, Automotive Spartan-3 and Automotive Spartan-3A DSP; added Spartan-3A DSP.
6/25/2008	1.3	Added QPro Virtex4 Hi-Rel and QPro Virtex4 Rad Tolerant.
8/27/2008	1.4	Remove Virtex-II Pro.
12/15/08	1.5	In LogiCORE IP Facts Table, replaced device family listing and tool name(s) with link to PDF file; added link to special disclaimer on first page.
4/24/09	1.6	Replaced references to supported device families and tool name(s) with hyperlink to PDF file. Removed references to fast download.
6/24/09	1.7	Updated for EDK_L 11.2; created version 1.00f.
12/2/09	1.8	Created version 1.00g for the 11.4 build.



## **Notice of Disclaimer**

Xilinx is providing this design, code, or information (collectively, the "Information") to you "AS-IS" with no warranty of any kind, express or implied. Xilinx makes no representation that the Information, or any particular implementation thereof, is free from any claims of infringement. You are responsible for obtaining any rights you may require for any implementation based on the Information. All specifications are subject to change without notice. XILINX EXPRESSLY DISCLAIMS ANY WARRANTY WHATSOEVER WITH RESPECT TO THE ADEQUACY OF THE INFORMATION OR ANY IMPLEMENTATION BASED THEREON, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OR REPRESENTATIONS THAT THIS IMPLEMENTATION IS FREE FROM CLAIMS OF INFRINGEMENT AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Except as stated herein, none of the Information may be copied, reproduced, distributed, republished, downloaded, displayed, posted, or transmitted in any form or by any means including, but not limited to, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Xilinx.