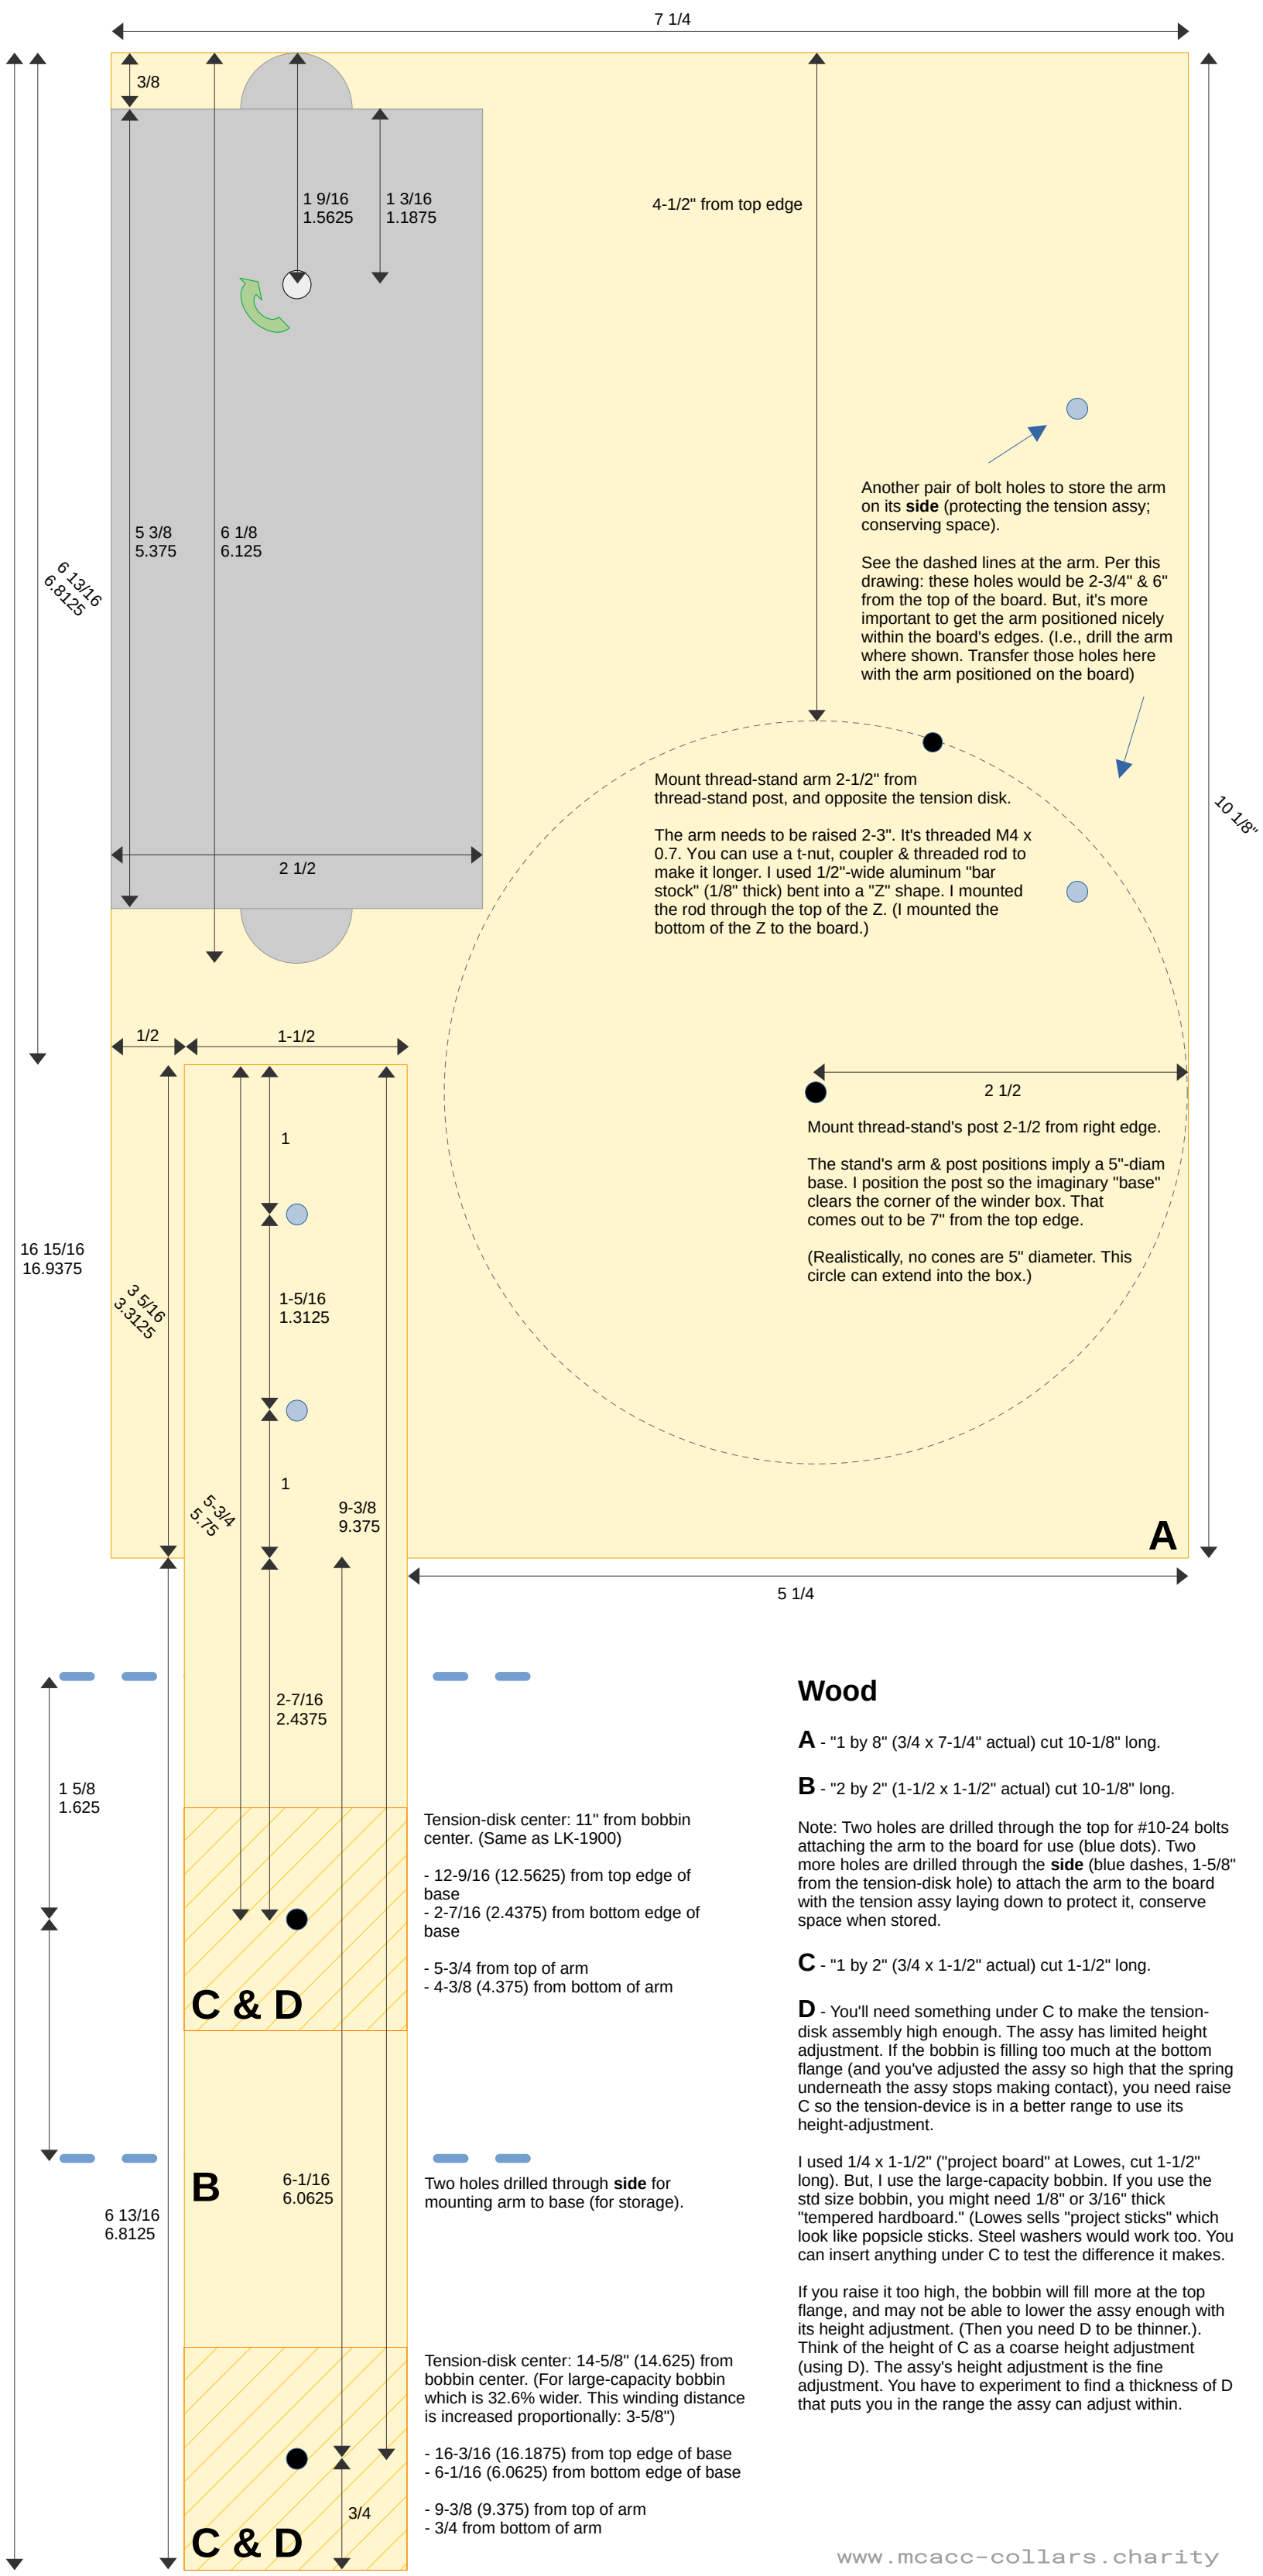

Wood

A - "1 by 8" (3/4 x 7-1/4" actual) cut 10-1/8" long.

B - "2 by 2" (1-1/2 x 1-1/2" actual) cut 10-1/8" long.

Note: Two holes are drilled through the top for #10-24 bolts attaching the arm to the board for use (blue dots). Two more holes are drilled through the **side** (blue dashes, 1-5/8" from the tension-disk hole) to attach the arm to the board with the tension assy laying down to protect it, conserve space when stored.

C - "1 by 2" (3/4 x 1-1/2" actual) cut 1-1/2" long.

D - You'll need something under C to make the tension-disk assembly high enough. The assy has limited height adjustment. If the bobbin is filling too much at the bottom flange (and you've adjusted the assy so high that the spring underneath the assy stops making contact), you need raise C so the tension-device is in a better range to use its height-adjustment.

I used 1/4 x 1-1/2" ("project board" at Lowes, cut 1-1/2" long). But, I use the large-capacity bobbin. If you use the std size bobbin, you might need 1/8" or 3/16" thick "tempered hardboard." (Lowes sells "project sticks" which look like popsicle sticks. Steel washers would work too. You can insert anything under C to test the difference it makes.

If you raise it too high, the bobbin will fill more at the top flange, and may not be able to lower the assy enough with its height adjustment. (Then you need D to be thinner.). Think of the height of C as a coarse height adjustment (using D). The assy's height adjustment is the fine adjustment. You have to experiment to find a thickness of D that puts you in the range the assy can adjust within.

www.mcacc-collars.charity