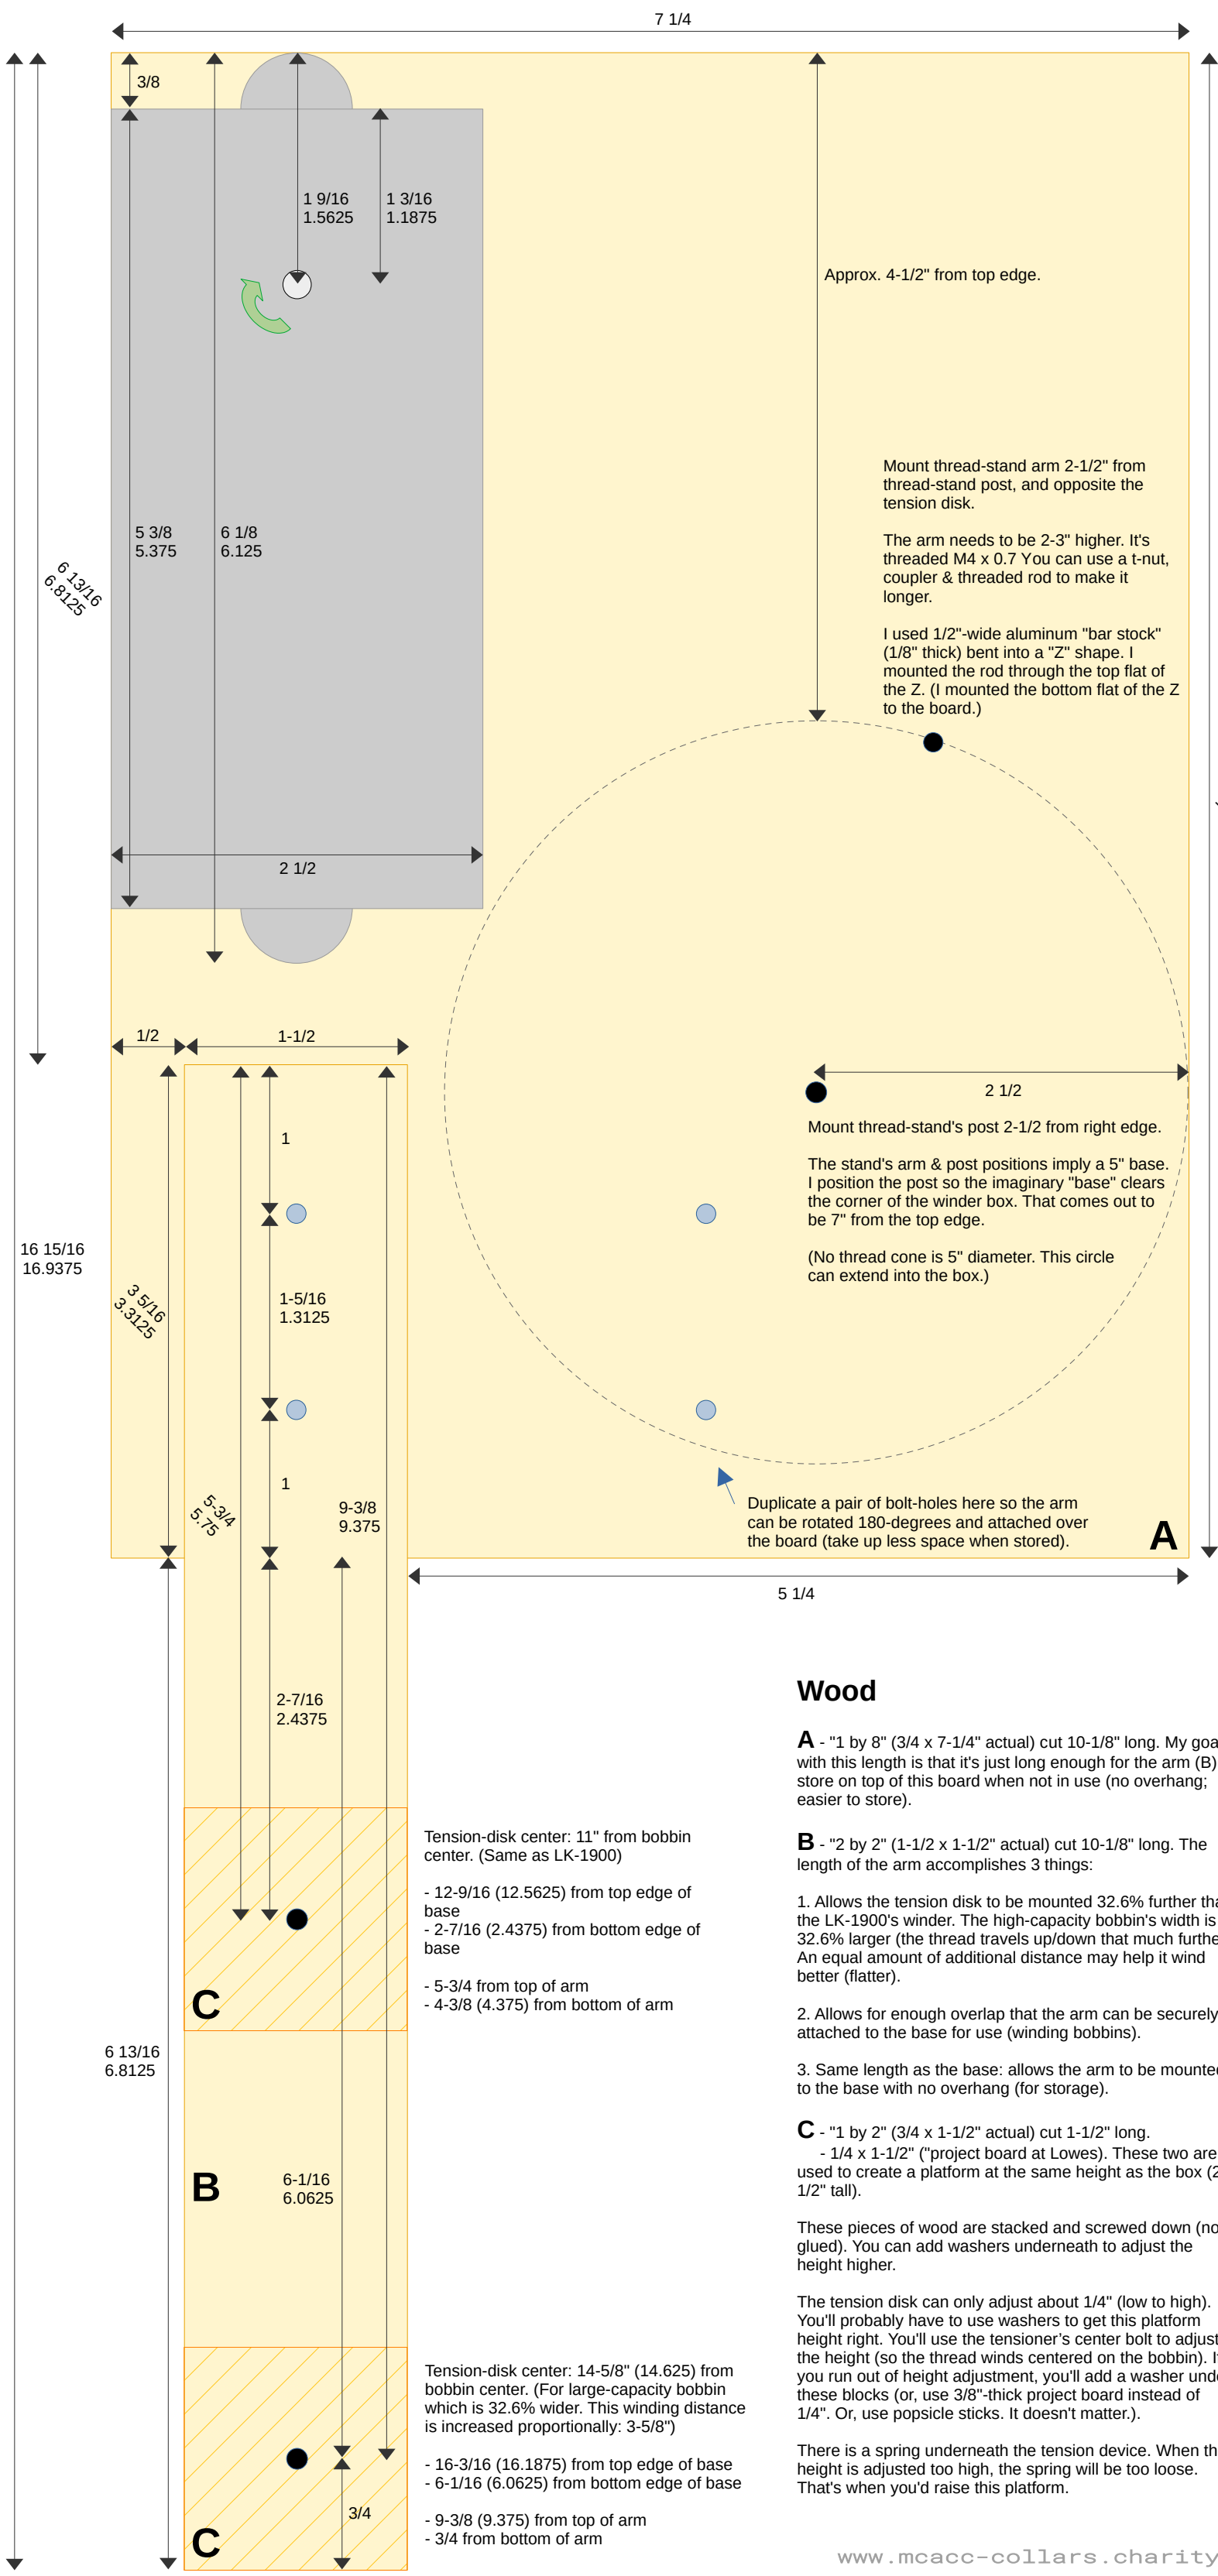

Mount thread-stand arm 2-1/2" from thread-stand post, and opposite the tension disk.

The arm needs to be 2-3" higher. It's threaded M4 x 0.7 You can use a t-nut, coupler & threaded rod to make it longer.

I used 1/2"-wide aluminum "bar stock" (1/8" thick) bent into a "Z" shape. I mounted the rod through the top flat of the Z. (I mounted the bottom flat of the Z to the board.)

Mount thread-stand's post 2-1/2 from right edge.

The stand's arm & post positions imply a 5" base. I position the post so the imaginary "base" clears the corner of the winder box. That comes out to be 7" from the top edge.

(No thread cone is 5" diameter. This circle can extend into the box.)

Tension-disk center: 11" from bobbin center. (Same as LK-1900)

- 12-9/16 (12.5625) from top edge of base
- 2-7/16 (2.4375) from bottom edge of base

- 5-3/4 from top of arm
- 4-3/8 (4.375) from bottom of arm

Tension-disk center: 14-5/8" (14.625) from bobbin center. (For large-capacity bobbin which is 32.6% wider. This winding distance is increased proportionally: 3-5/8")

- 16-3/16 (16.1875) from top edge of base
- 6-1/16 (6.0625) from bottom edge of base

- 9-3/8 (9.375) from top of arm
- 3/4 from bottom of arm

Wood

A - "1 by 8" (3/4 x 7-1/4" actual) cut 10-1/8" long. My goal with this length is that it's just long enough for the arm (B) to store on top of this board when not in use (no overhang; easier to store).

B - "2 by 2" (1-1/2 x 1-1/2" actual) cut 10-1/8" long. The length of the arm accomplishes 3 things:

1. Allows the tension disk to be mounted 32.6% further than the LK-1900's winder. The high-capacity bobbin's width is 32.6% larger (the thread travels up/down that much further). An equal amount of additional distance may help it wind better (flatter).

2. Allows for enough overlap that the arm can be securely attached to the base for use (winding bobbins).

3. Same length as the base: allows the arm to be mounted to the base with no overhang (for storage).

C - "1 by 2" (3/4 x 1-1/2" actual) cut 1-1/2" long.
- 1/4 x 1-1/2" ("project board at Lowes). These two are used to create a platform at the same height as the box (2-1/2" tall).

These pieces of wood are stacked and screwed down (not glued). You can add washers underneath to adjust the height higher.

The tension disk can only adjust about 1/4" (low to high). You'll probably have to use washers to get this platform height right. You'll use the tensioner's center bolt to adjust the height (so the thread winds centered on the bobbin). If you run out of height adjustment, you'll add a washer under these blocks (or, use 3/8"-thick project board instead of 1/4". Or, use popsicle sticks. It doesn't matter.).

There is a spring underneath the tension device. When the height is adjusted too high, the spring will be too loose. That's when you'd raise this platform.