


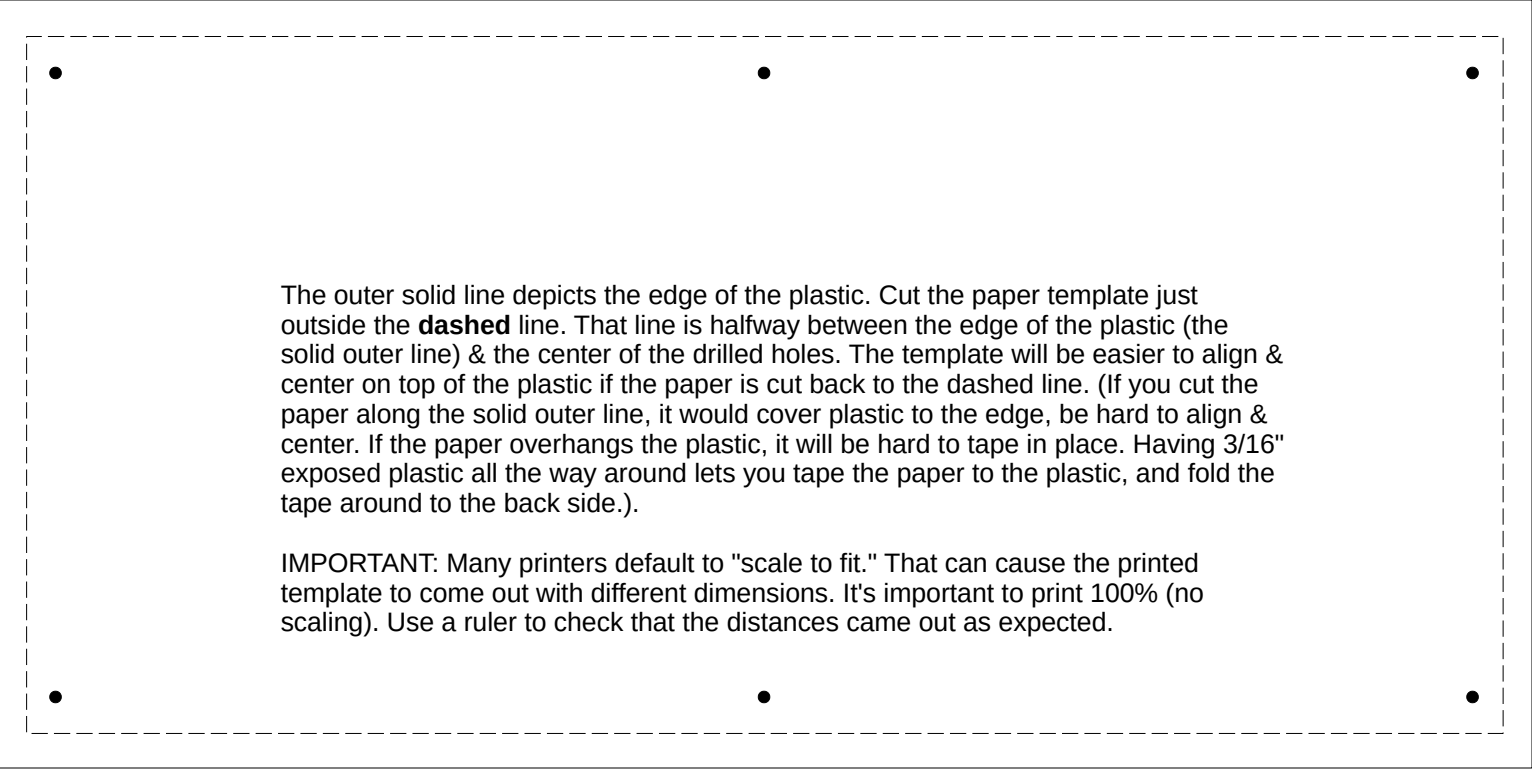

The outer solid line depicts the edge of the plastic. Cut the paper template just outside the **dashed** line. That line is halfway between the edge of the plastic (the solid outer line) & the center of the drilled holes. The template will be easier to align & center on top of the plastic if the paper is cut back to the dashed line. (If you cut the paper along the solid outer line, it would cover plastic to the edge, be hard to align & center. If the paper overhangs the plastic, it will be hard to tape in place. Having 3/16" exposed plastic all the way around lets you tape the paper to the plastic, and fold the tape around to the back side.).

IMPORTANT: Many printers default to "scale to fit." That can cause the printed template to come out with different dimensions. It's important to print 100% (no scaling). Use a ruler to check that the distances came out as expected.

This template is used to mark snap-hole locations on "adopt me" leash sleeved made for dogs. More information:

www.mcacc-collars.charity/resources/leash_sleeve/