

Foam templates | efficient A4 layout

22 cutting pages + this index. 33 reusable patterns for 35 foam pieces.

Print all pages at Actual Size / 100%. Disable Fit and Shrink.

Check the 100 x 20 mm rectangle below before cutting.

Several numbered patterns share each page. Outlines remain full size.

Join only pages with the same S-number, using their row/column labels.

Align matching grey crosses and the 10 mm overlap; trim white page margins.

Assemble the large posters before separating their individual patterns.

Whole = a complete outline is on that page; no tile assembly needed for that ID.

F31 and F32 are each used twice to cut the two laminate layers.

Black solid = CUT. Blue/dashed = reference. Corner digits retain DXF mark numbers.

F01 S01 pp2,3,4,5,6,7

F02 S02 pp8,9,10,11,12,13

F03 S03 pp14,15,16

F04 S04 pp17,18,19

F05 S05 pp20,21

F06 S06 pp22,23

F07 whole on p13

F08 whole on p7

F09 whole on p13

F10 whole on p10

F11 S01 pp4,7

F12 S01 pp5,6

F13 whole on p23

F14 whole on p4

F15 whole on p23

F16 S01 pp4,7

F17 S01 pp4,7

F18 S01 pp4,7

F19 whole on p5

F20 whole on p15

F21 whole on p13

F22 whole on p5

F23 whole on p12

F24 whole on p11

F25 whole on p21

F26 whole on p21

F27 whole on p19

F28 whole on p18

F29 whole on p21

F30 whole on p7

F31 whole on p10

F32 whole on p16

F33 whole on p2



100 x 20 mm

Measure both directions.

Use the separate assembly map and forming guide for construction.



S01H1C1A

p2 S01 R1/2 C1/3 | 100%
IDs F01,F22,F33
origin 0,0 mm; overlap 10mm

S01H1C1B



F33



S01V1R1B



S01V1R1A

S01H1C2A

p3 S01 R1/2 C2/3 | 100%
IDs F01
origin 190,0 mm; overlap 10mm

S01H1C2B


S01V1R1B

S01V2R1B

F01

S01V1R1A

S01V2R1A

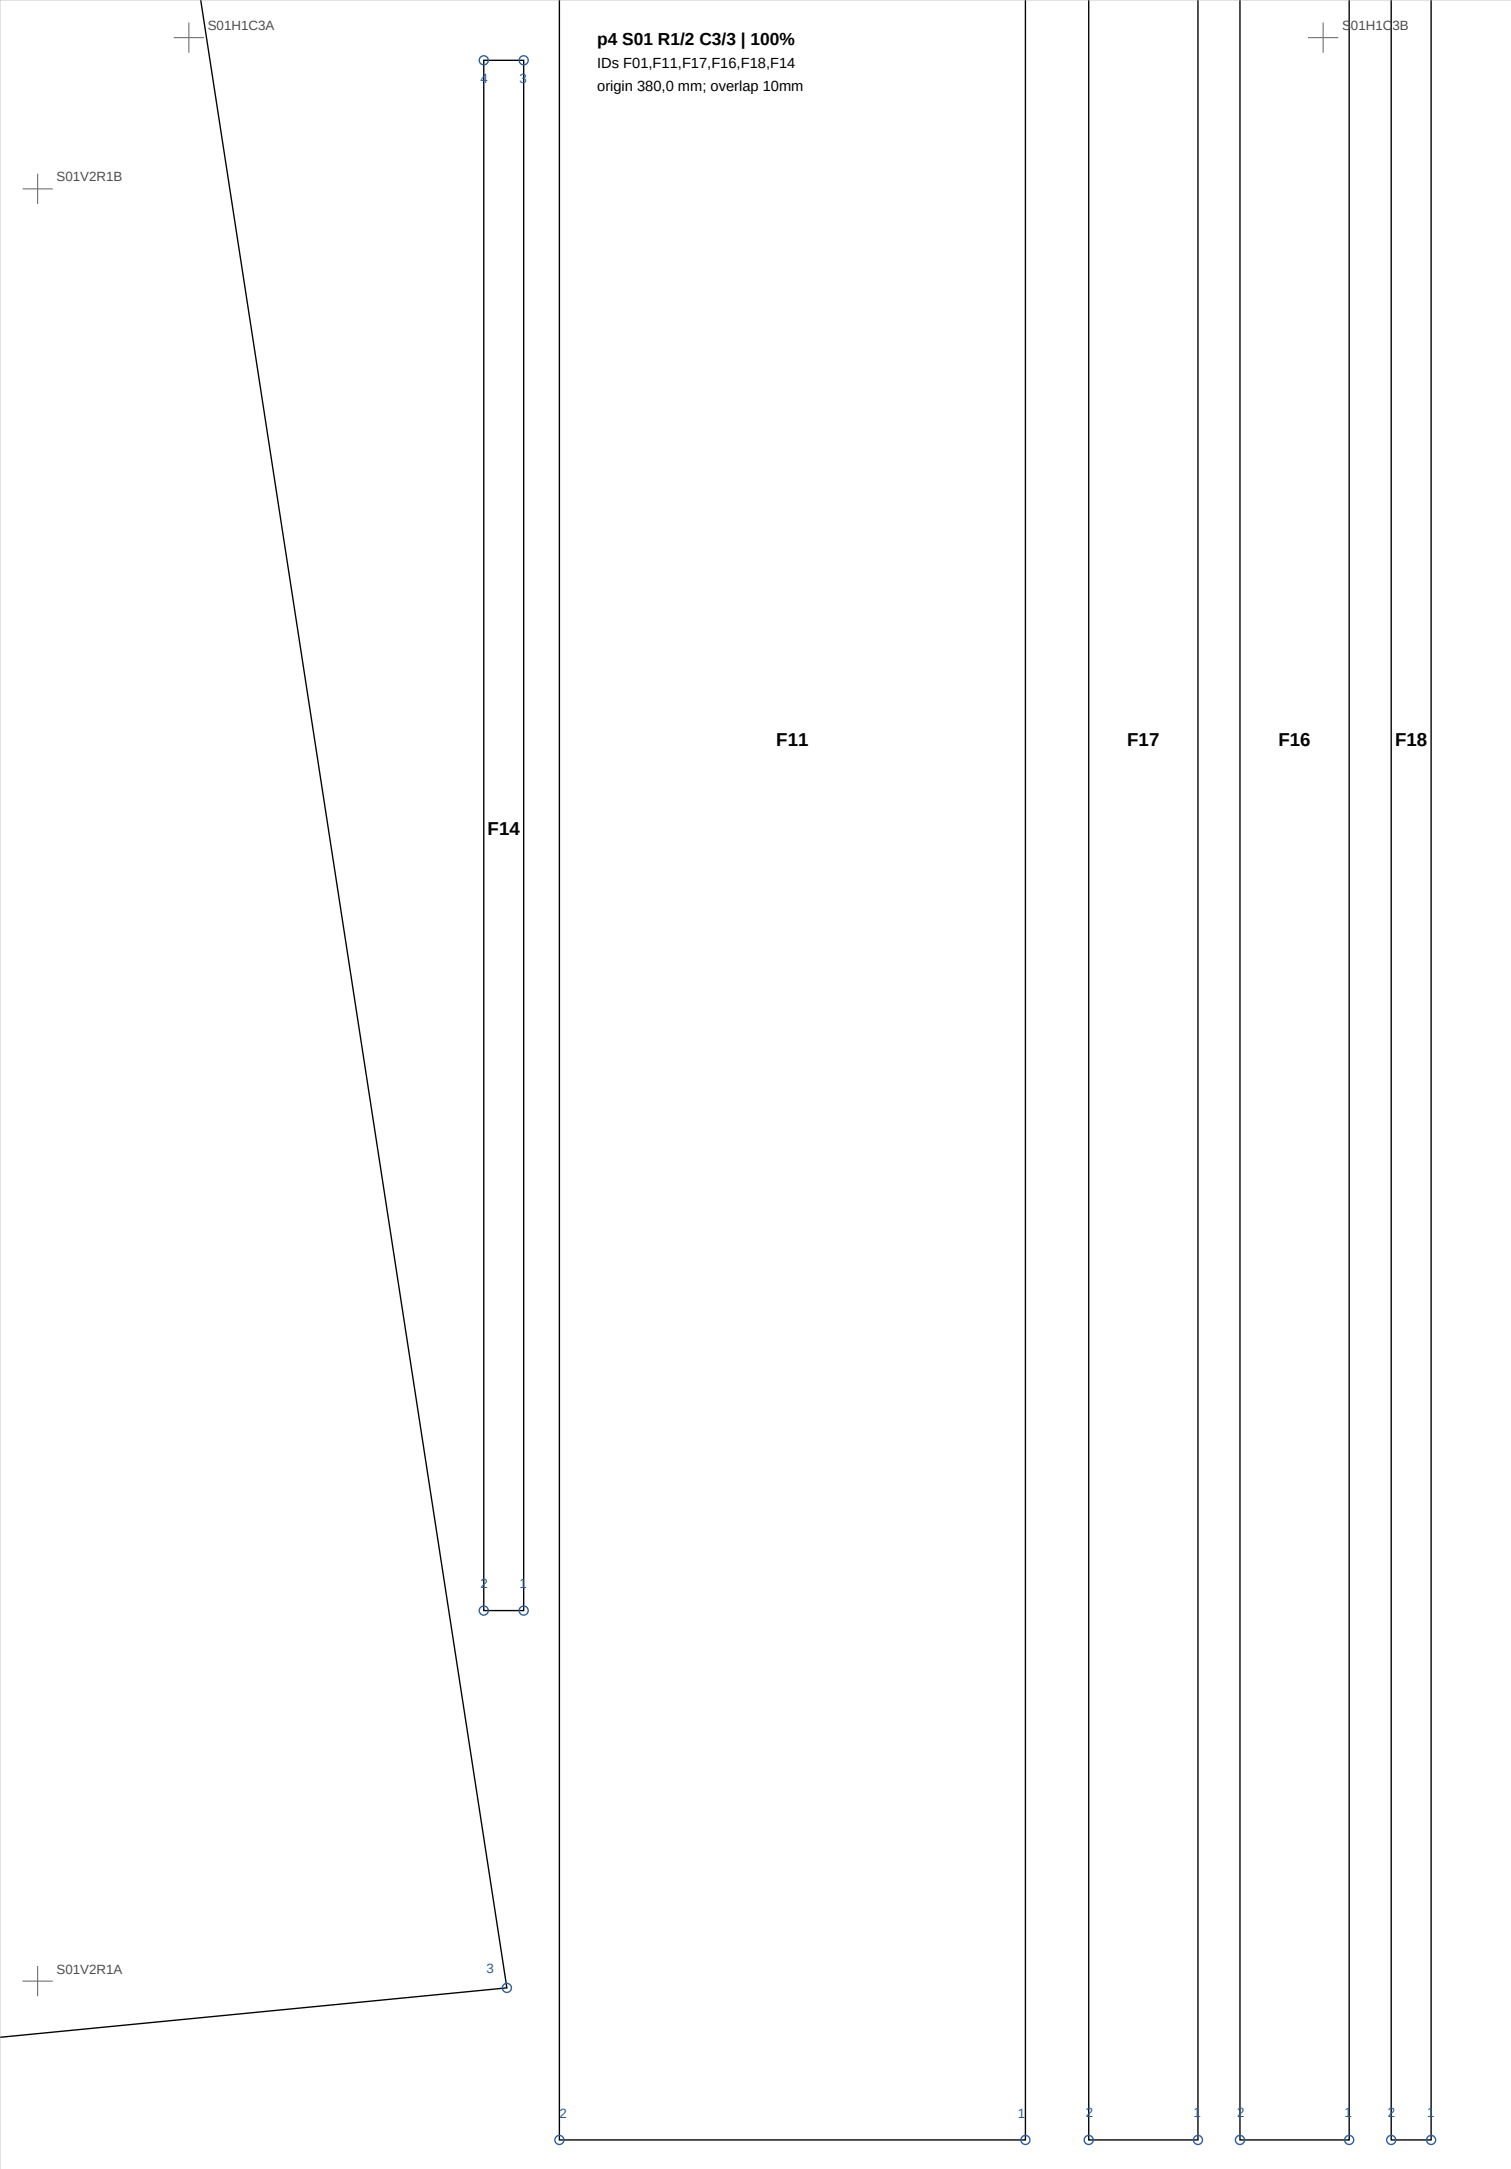

S01V1R2B

F12

F19

F22

S01H1C1A


S01V1R2A

S01H1C1B

p6 S01 R2/2 C2/3 | 100%
IDs F01,F12,F08
origin 190,277 mm; overlap 10mm

S01V1R2B

S01V2R2B

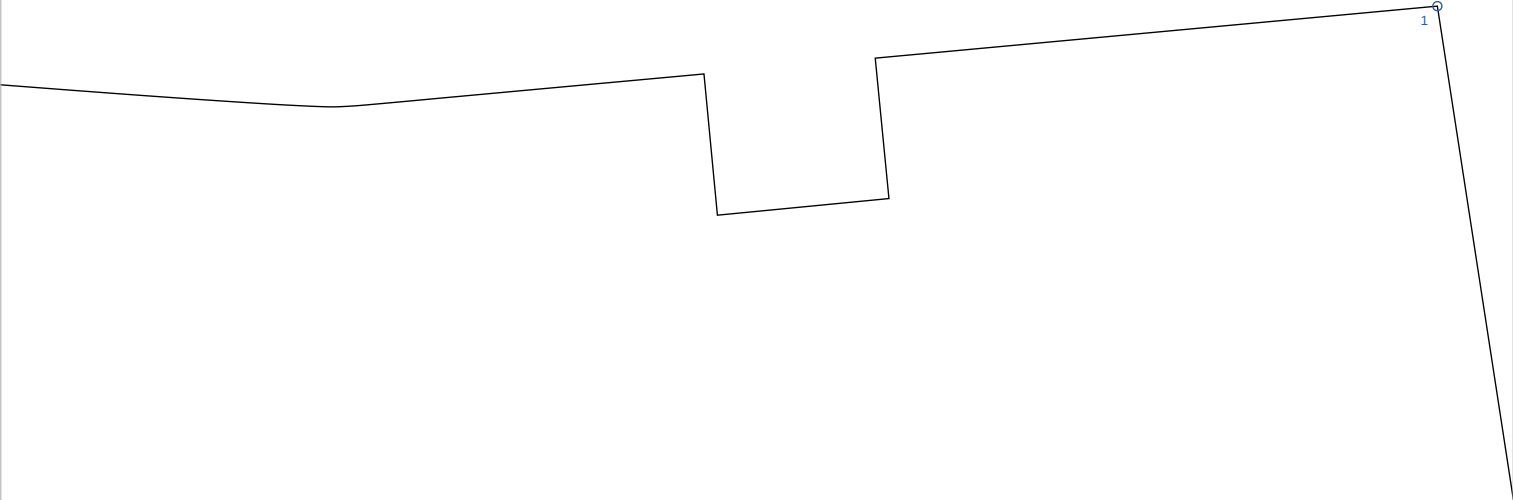

S01V1R2A

S01V2R2A

S01H1C2A

S01H1C2B

p7 S01 R2/2 C3/3 | 100%
IDs F01,F11,F17,F16,F18,F08,F30,F14
origin 380,277 mm; overlap 10mm

S01V2R2B

3

1

2

4

F30

F08

1

2

4

4

3

4

3

4

3

4

3

S01V2R2A

S01H1C3A

4

3

S01H1C3B

S02H1C1A

p8 S02 R1/2 C1/3 | 100%
IDs F02
origin 0,0 mm; overlap 10mm

S02H1C1B

S02V1R1B



S02V1R1A



4



S02H1C2A

p9 S02 R1/2 C2/3 | 100%
IDs F02
origin 190,0 mm; overlap 10mm

S02H1C2B


S02V1R1B

S02V2R1B




F02

S02V1R1A


S02V2R1A



p10 S02 R1/2 C3/3 | 100%
IDs F02,F10,F09,F07,F31
origin 380,0 mm; overlap 10mm

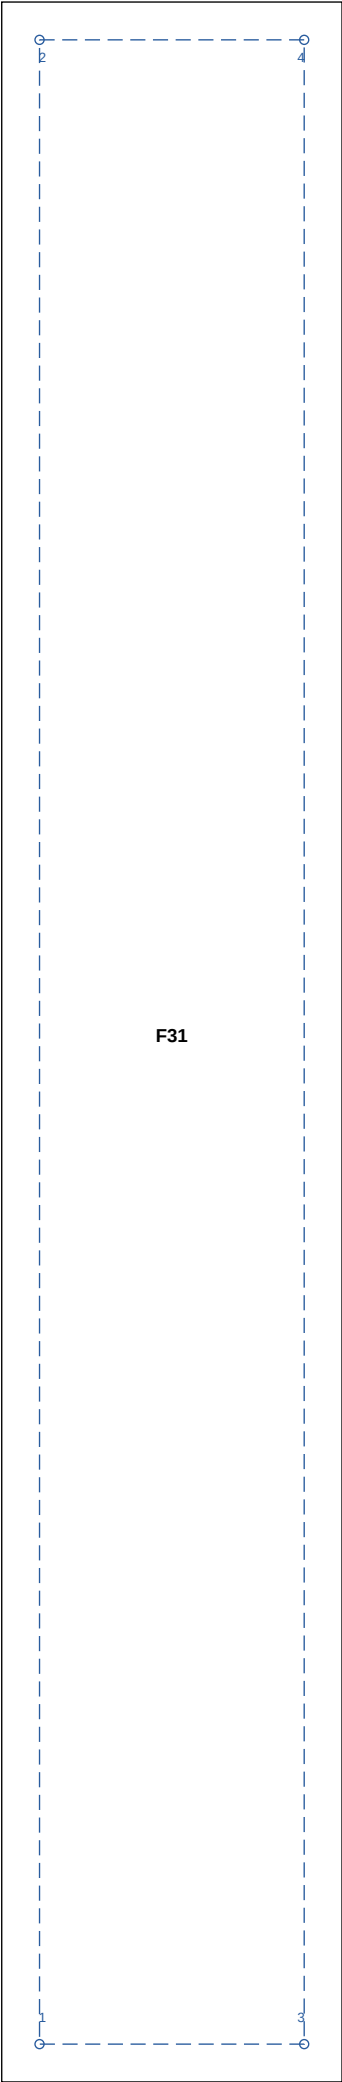

p11 S02 R2/2 C1/3 | 100%
IDs F02,F24,F23
origin 0,277 mm; overlap 10mm

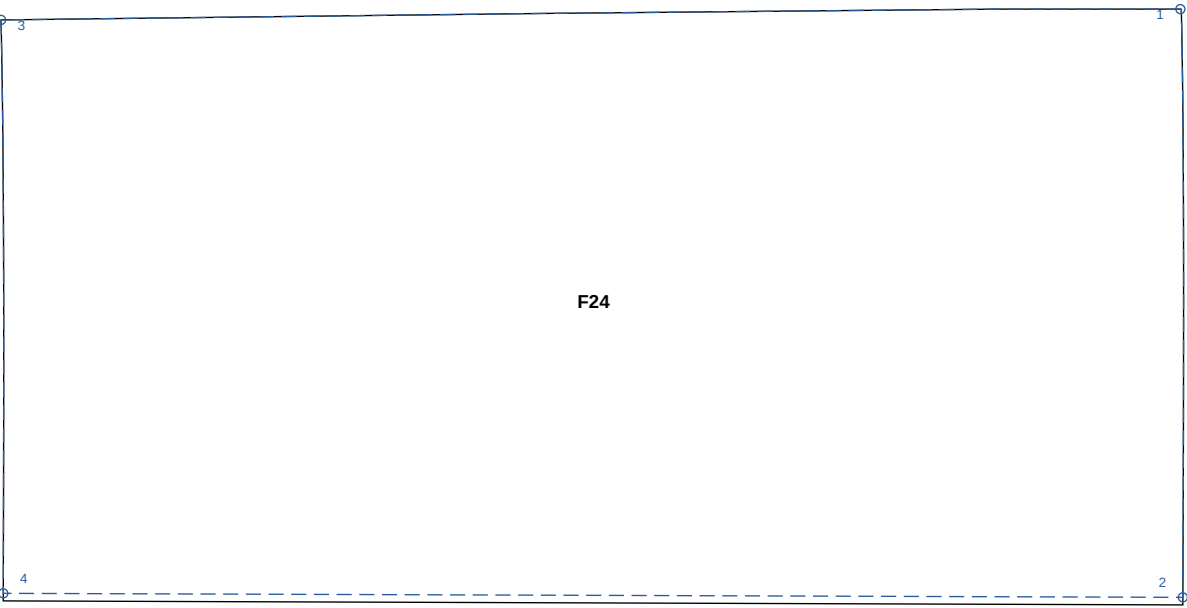

S02V1R2B



2

S02H1C1A




S02V1R2A



S02H1C1B



p12 S02 R2/2 C2/3 | 100%
IDs F02,F23,F21
origin 190,277 mm; overlap 10mm



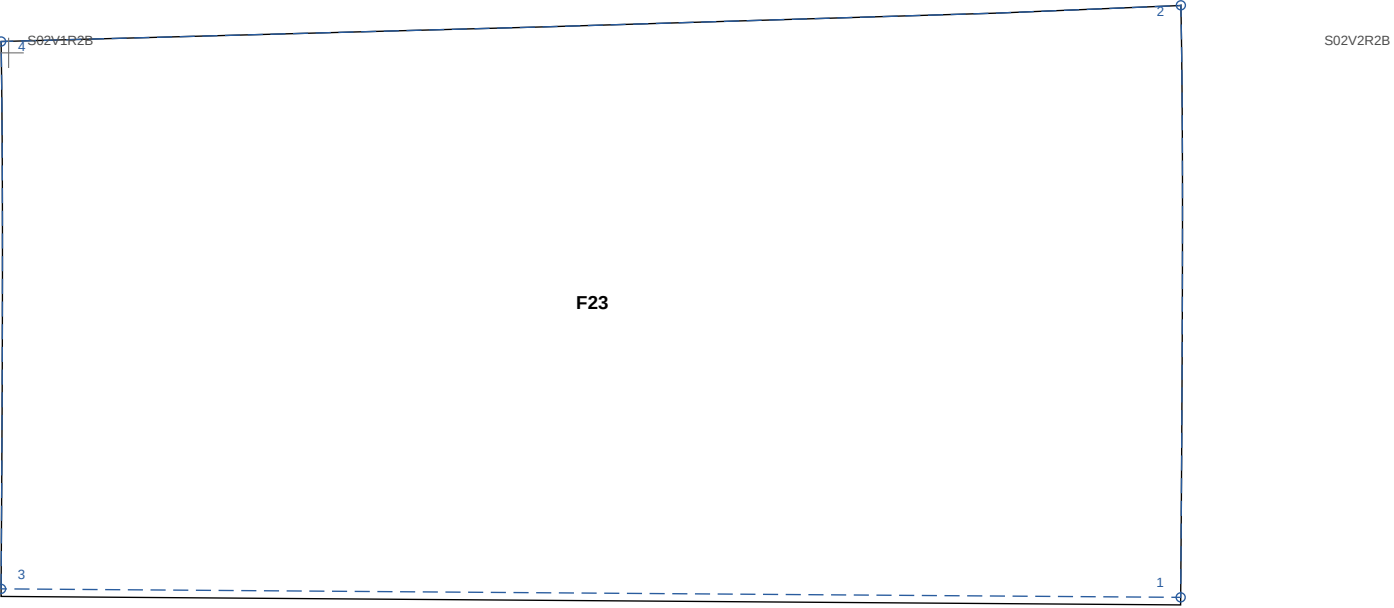


S02V1R2A

S02V2R2A

S02H1C2A

S02H1C2B

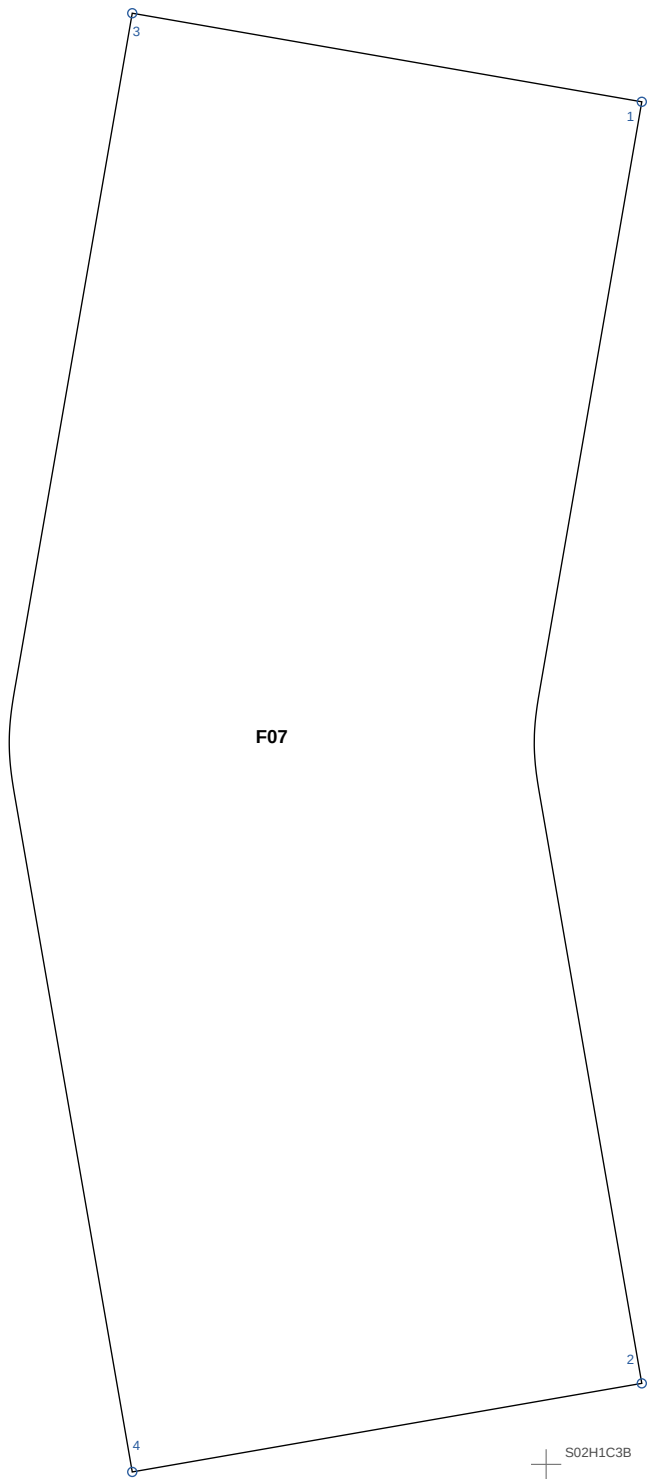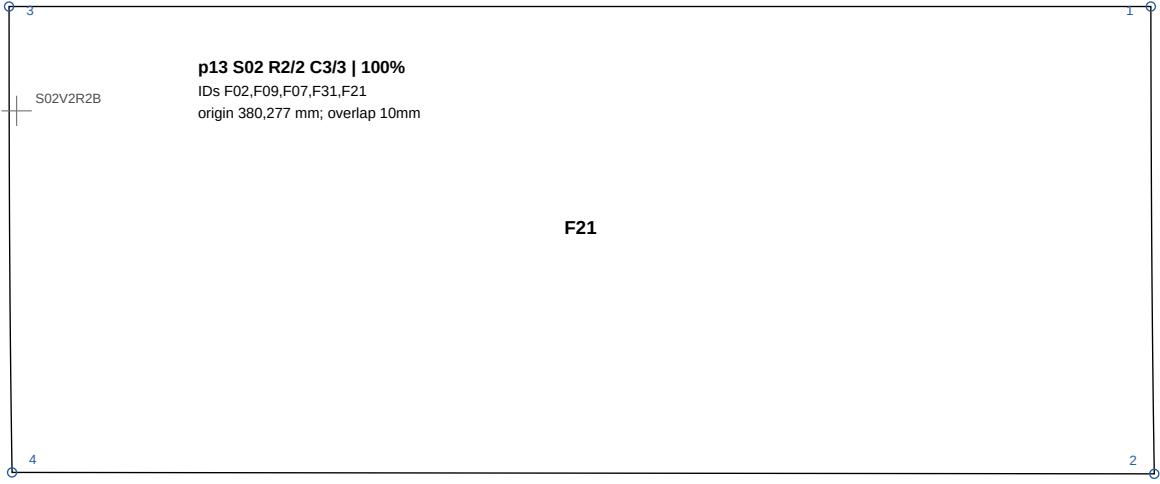

S02V2R2A

S02H1C3A

S02H1C3B


p14 S03 R1/1 C1/3 | 100%
IDs F03
origin 0,0 mm; overlap 10mm


S03V1R1B +

1

S03V1R1A +

2

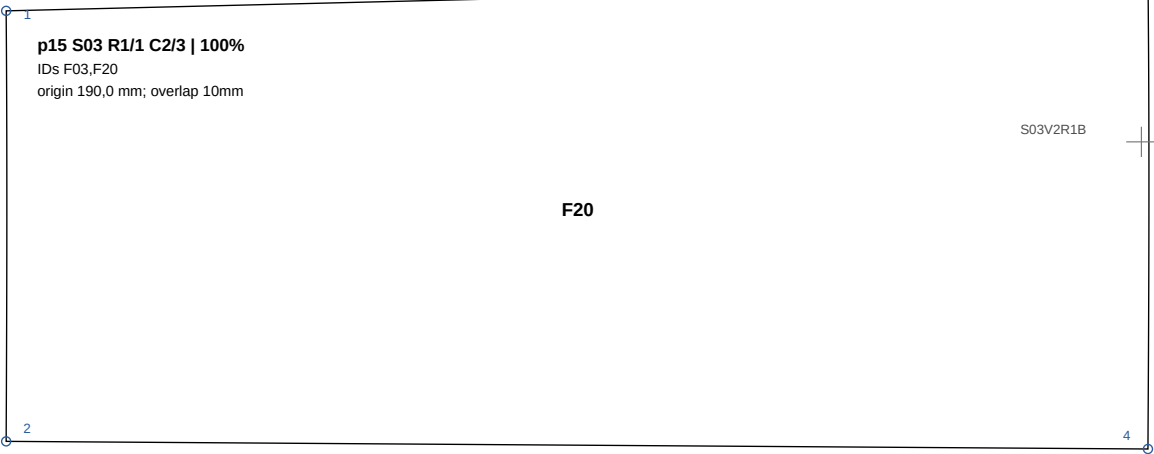

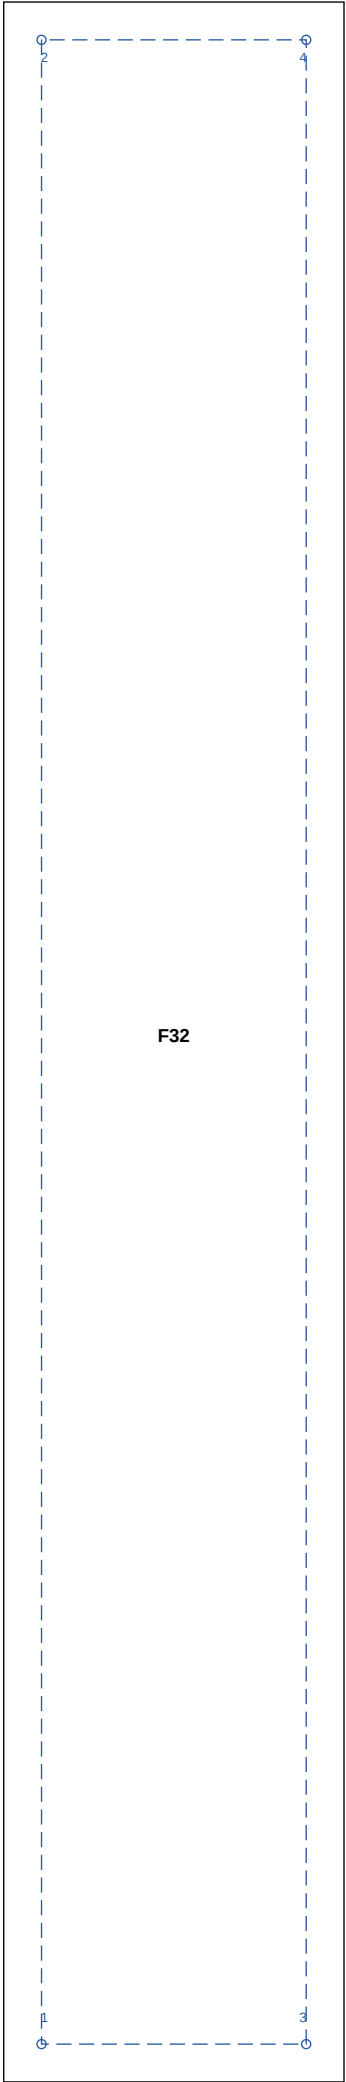

S04V1R1B +

1

S04V1R1A +

2

p18 S04 R1/1 C2/3 | 100%
IDs F04,F28
origin 190,0 mm; overlap 10mm

S04V1R1B

S04V2R1B

F28

F04

S04V1R1A

S04V2R1A

p19 S04 R1/1 C3/3 | 100%
IDs F04,F27,F28
origin 380,0 mm; overlap 10mm

S04V2R1B

F27

S04V2R1A



S05H1C1A



S05H1C1B

p20 S05 R1/2 C1/1 | 100%

IDs F05





origin 0,0 mm; overlap 10mm

F05

4

3

p21 S05 R2/2 C1/1 | 100%
IDs F05,F25,F26,F29
origin 0,277 mm; overlap 10mm

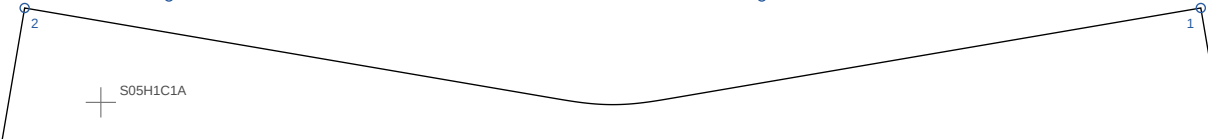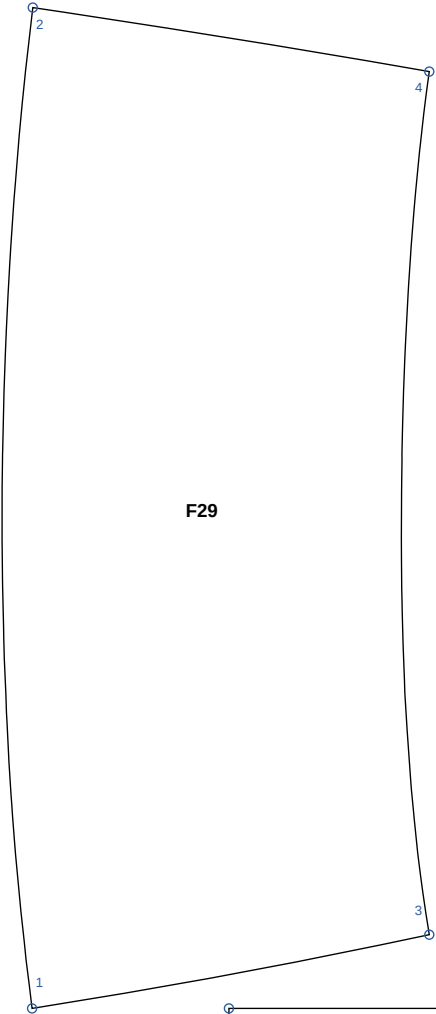



S06H1C1A

p22 S06 R1/2 C1/1 | 100%

IDs F06,F15

origin 0,0 mm; overlap 10mm





S06H1C1B

F06

4

3

p23 S06 R2/2 C1/1 | 100%
IDs F06,F15,F13
origin 0,277 mm; overlap 10mm

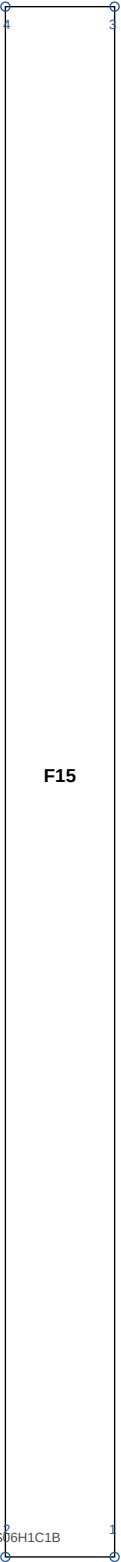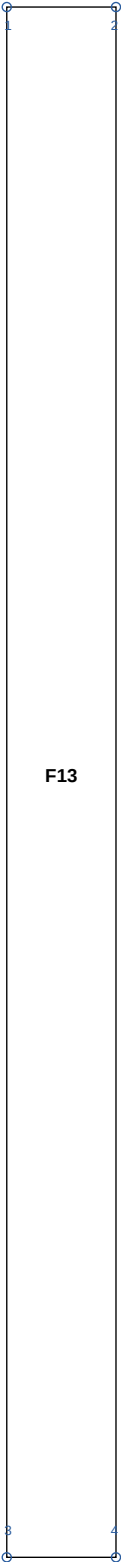

S06H1C1A

S06H1C1B