


# N1 / simplified nose

Nose-only print order | 22 September 2026

## A59\_Nose\_N1\_mm.stl

**Quantity 1. Millimetres. 100% scale.** Supplied XYZ size: 109.03 x 309.68 x 88.55 mm. Rotation may exchange the axes. Do not scale to fit or split without a reviewed joint.

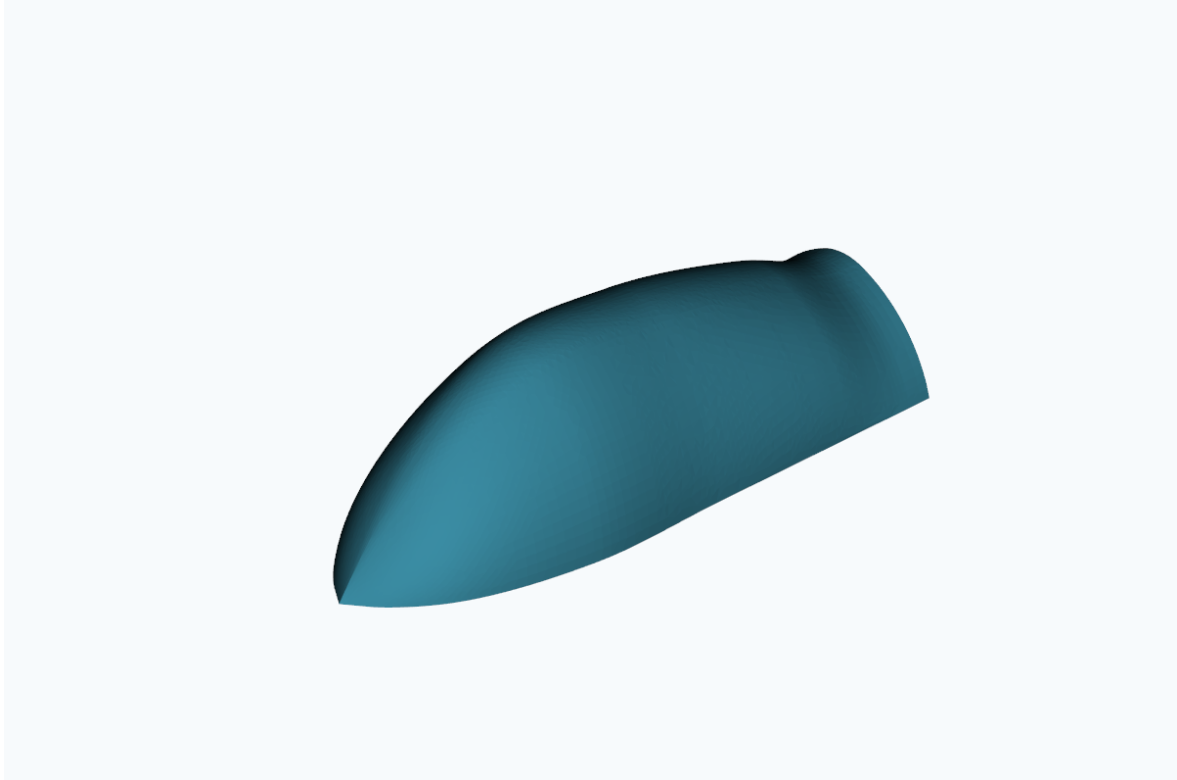

### What changed

Original curved tip restored. No added screw holes or large front pitot notch. No printed cover columns, spacers or shaped washers. Rear mating surface and original variable wall geometry retained. The restored tip is about 6.23 mm longer than Rev2.

This is the hollow upper nose cover. The underside and rear assembly openings are intentional and meet the frame/lower foam skin. Do not fill or cap the cavity.

### Print preparation

PLA+ starting case: 0.4 mm nozzle, 0.2 mm layers, 2 perimeters, 4 top/bottom layers, 5% infill. Use normal slicing, not vase mode. The shop must choose orientation, supports and brim for its printer and inspect every layer.

Digital checks: one manifold mesh; 32,174 triangles; 1.61 MB; CAD volume difference 0.049%. Sampled surface difference to a finer reference mesh was at most 0.101 mm. These are file checks, not a physical fit or strength test.

# Printing and installation

## Printer size and material estimate

The reference slice in supplied orientation used 327.64 g including supports. This is not the installed part mass.

Rear-opening-down comparison: 228.55 g including automatic supports and an 8 mm brim. Rotate -90 degrees about the supplied X axis. Footprint is about 109 x 89 mm, height 310 mm; allow extra clearance for brim and supports. The shop must check adhesion, stability and its usable build height.

Ask the shop to confirm the actual part/support envelope fits. Do not shrink it. Record finished part mass separately. No machine G-code is included.

## Attachment and access

Dry-fit the cover on the wooden frame and lower foam skin. Use simple bench-fitted locating ledges where needed, then replaceable reinforced tape across adjacent skin joints. Test tape adhesion and retention on the actual materials. Keep the cover removable. Do not attach the battery or heavy equipment to it.

The subsequent frame/foam redesign must retain the original A59 mating envelope. Old cover bolts, I00 spacers, I05 columns and I06 washers are superseded. Their holes have not been added to this print.

## Pitot passage: finish to actual hardware

The print has no guessed probe hole. Position the actual probe on its own frame support, mark the passage, then drill/file only the clearance needed and deburr. Keep pressure openings clear of shell, tape and glue. If the probe passes through a closed hole, make it withdrawable before lifting the cover. The old I14/notch arrangement is superseded.

## Inspect after printing

Check dimensions, layer bonds and edges. Remove supports from the cavity without damage. Dry-fit before drilling or finishing. Keep PLA+ away from hot storage; this cover is not a landing skid.

## Rest of aircraft: redesign pending

Print this nose only. Landing gear is removed from the intended new design. Belly protection, remaining mounts, controls, wood/foam changes, final mass/CG and full-aircraft instructions will follow. The old Rev2 full print set and calculations are historical references. See README.md and the enclosed checks for details.