



G01 FORMED PROFILE / tile 1 of 2 / 100%

Forming reference only. Not the flat blank. Align paired crosses with 10 mm overlap.




Calibration 100 x20 mm

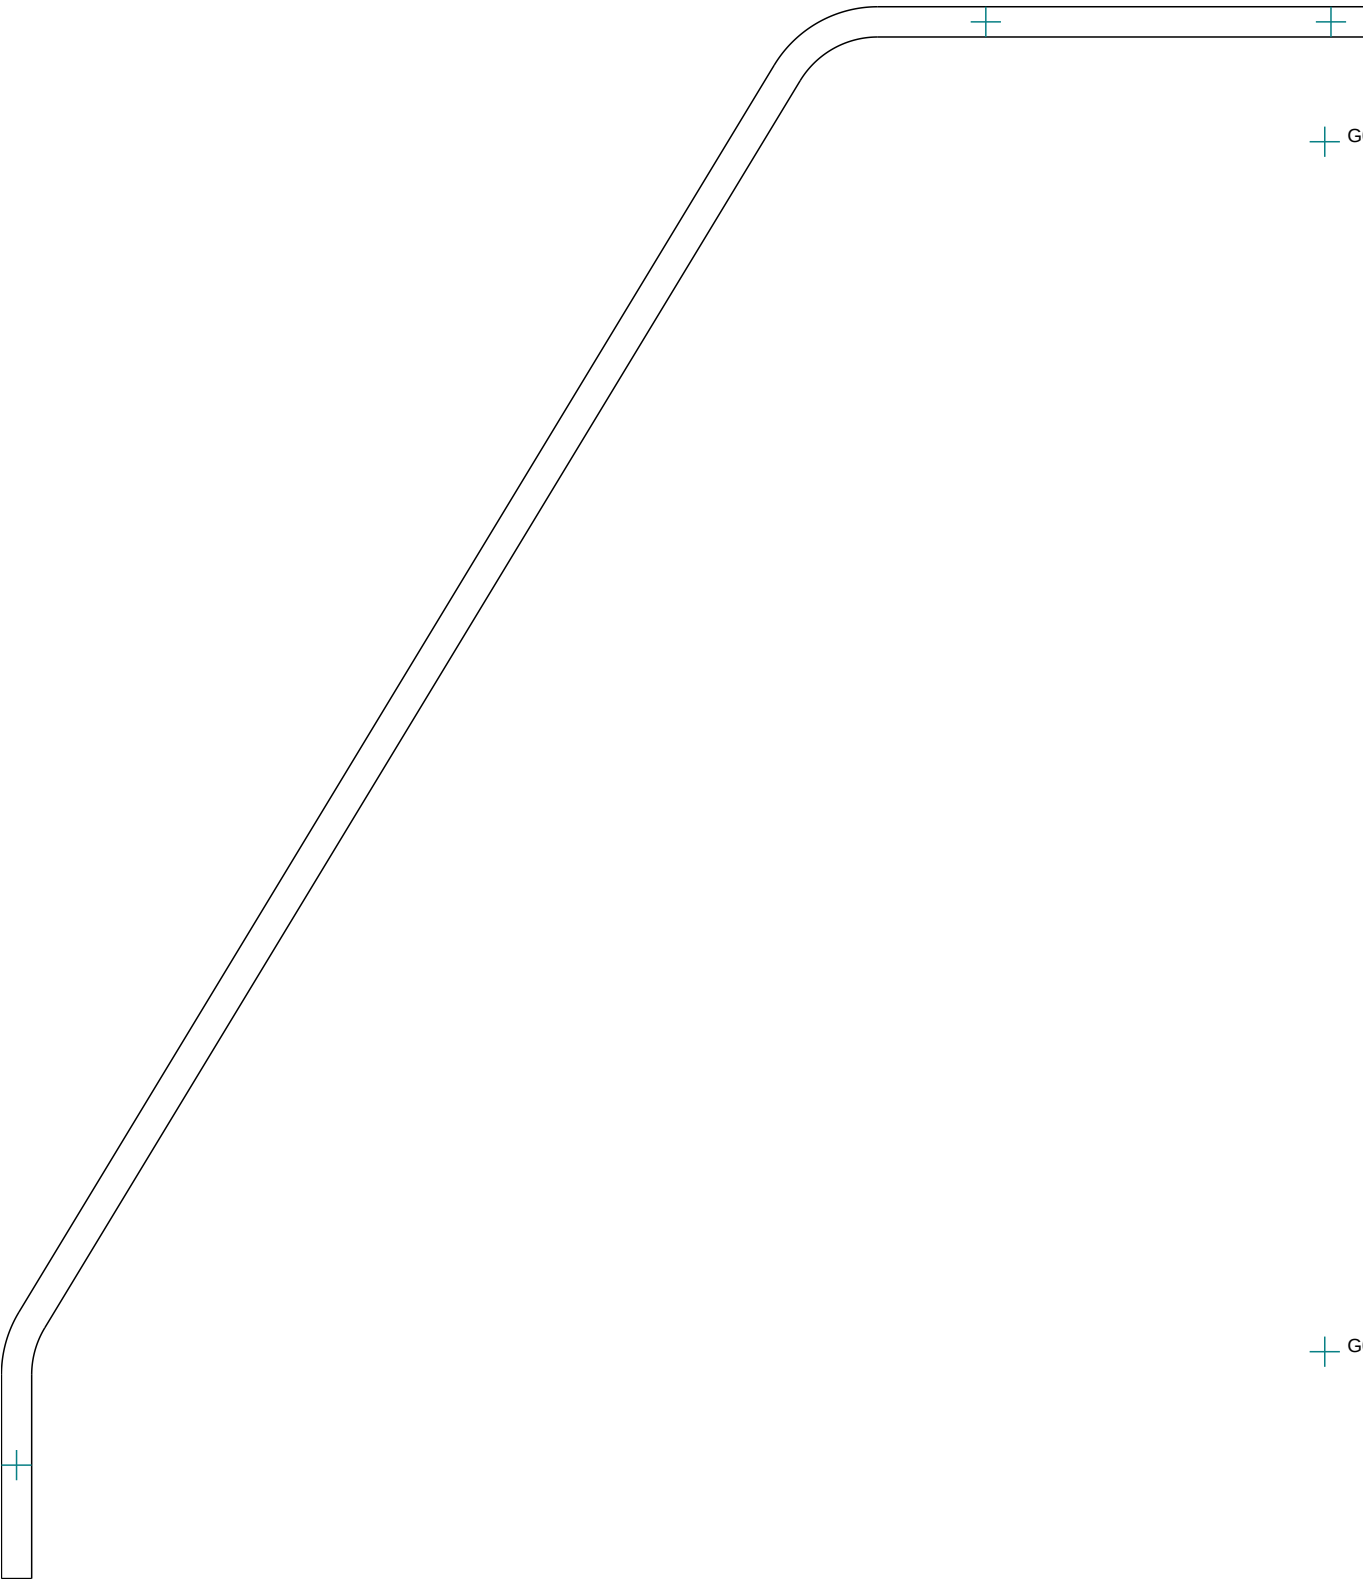

G01 FORMED PROFILE / tile 2 of 2 / 100%

Forming reference only. Not the flat blank. Align paired crosses with 10 mm overlap.

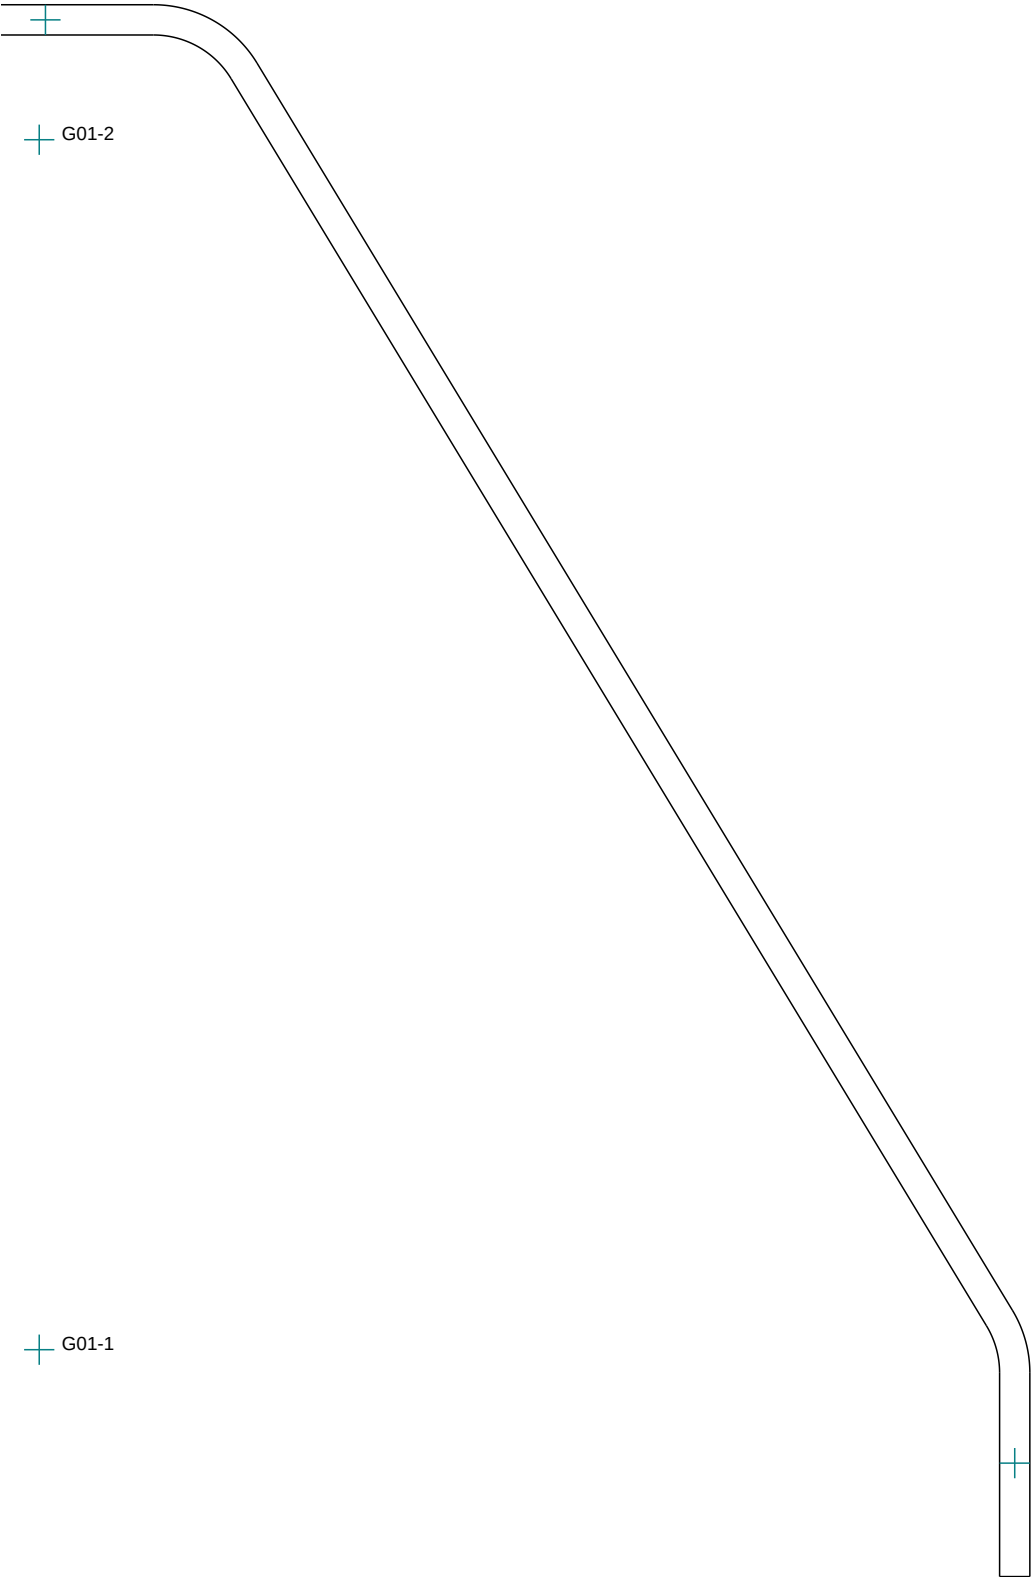

G02 NOSE WIRE / whole part / 100%

4 mm wire. Centreline R8 bend. Shop must qualify the forming process.



Calibration 100 x20 mm

Preserve steering axis Y=-293.65.

Top of shaft: Z=+1 mm.

Wheel centre: X26, Z=-200.85.

Axle end: X46.

Do not use glue as axle retention.

Fit actual collars and washers first.