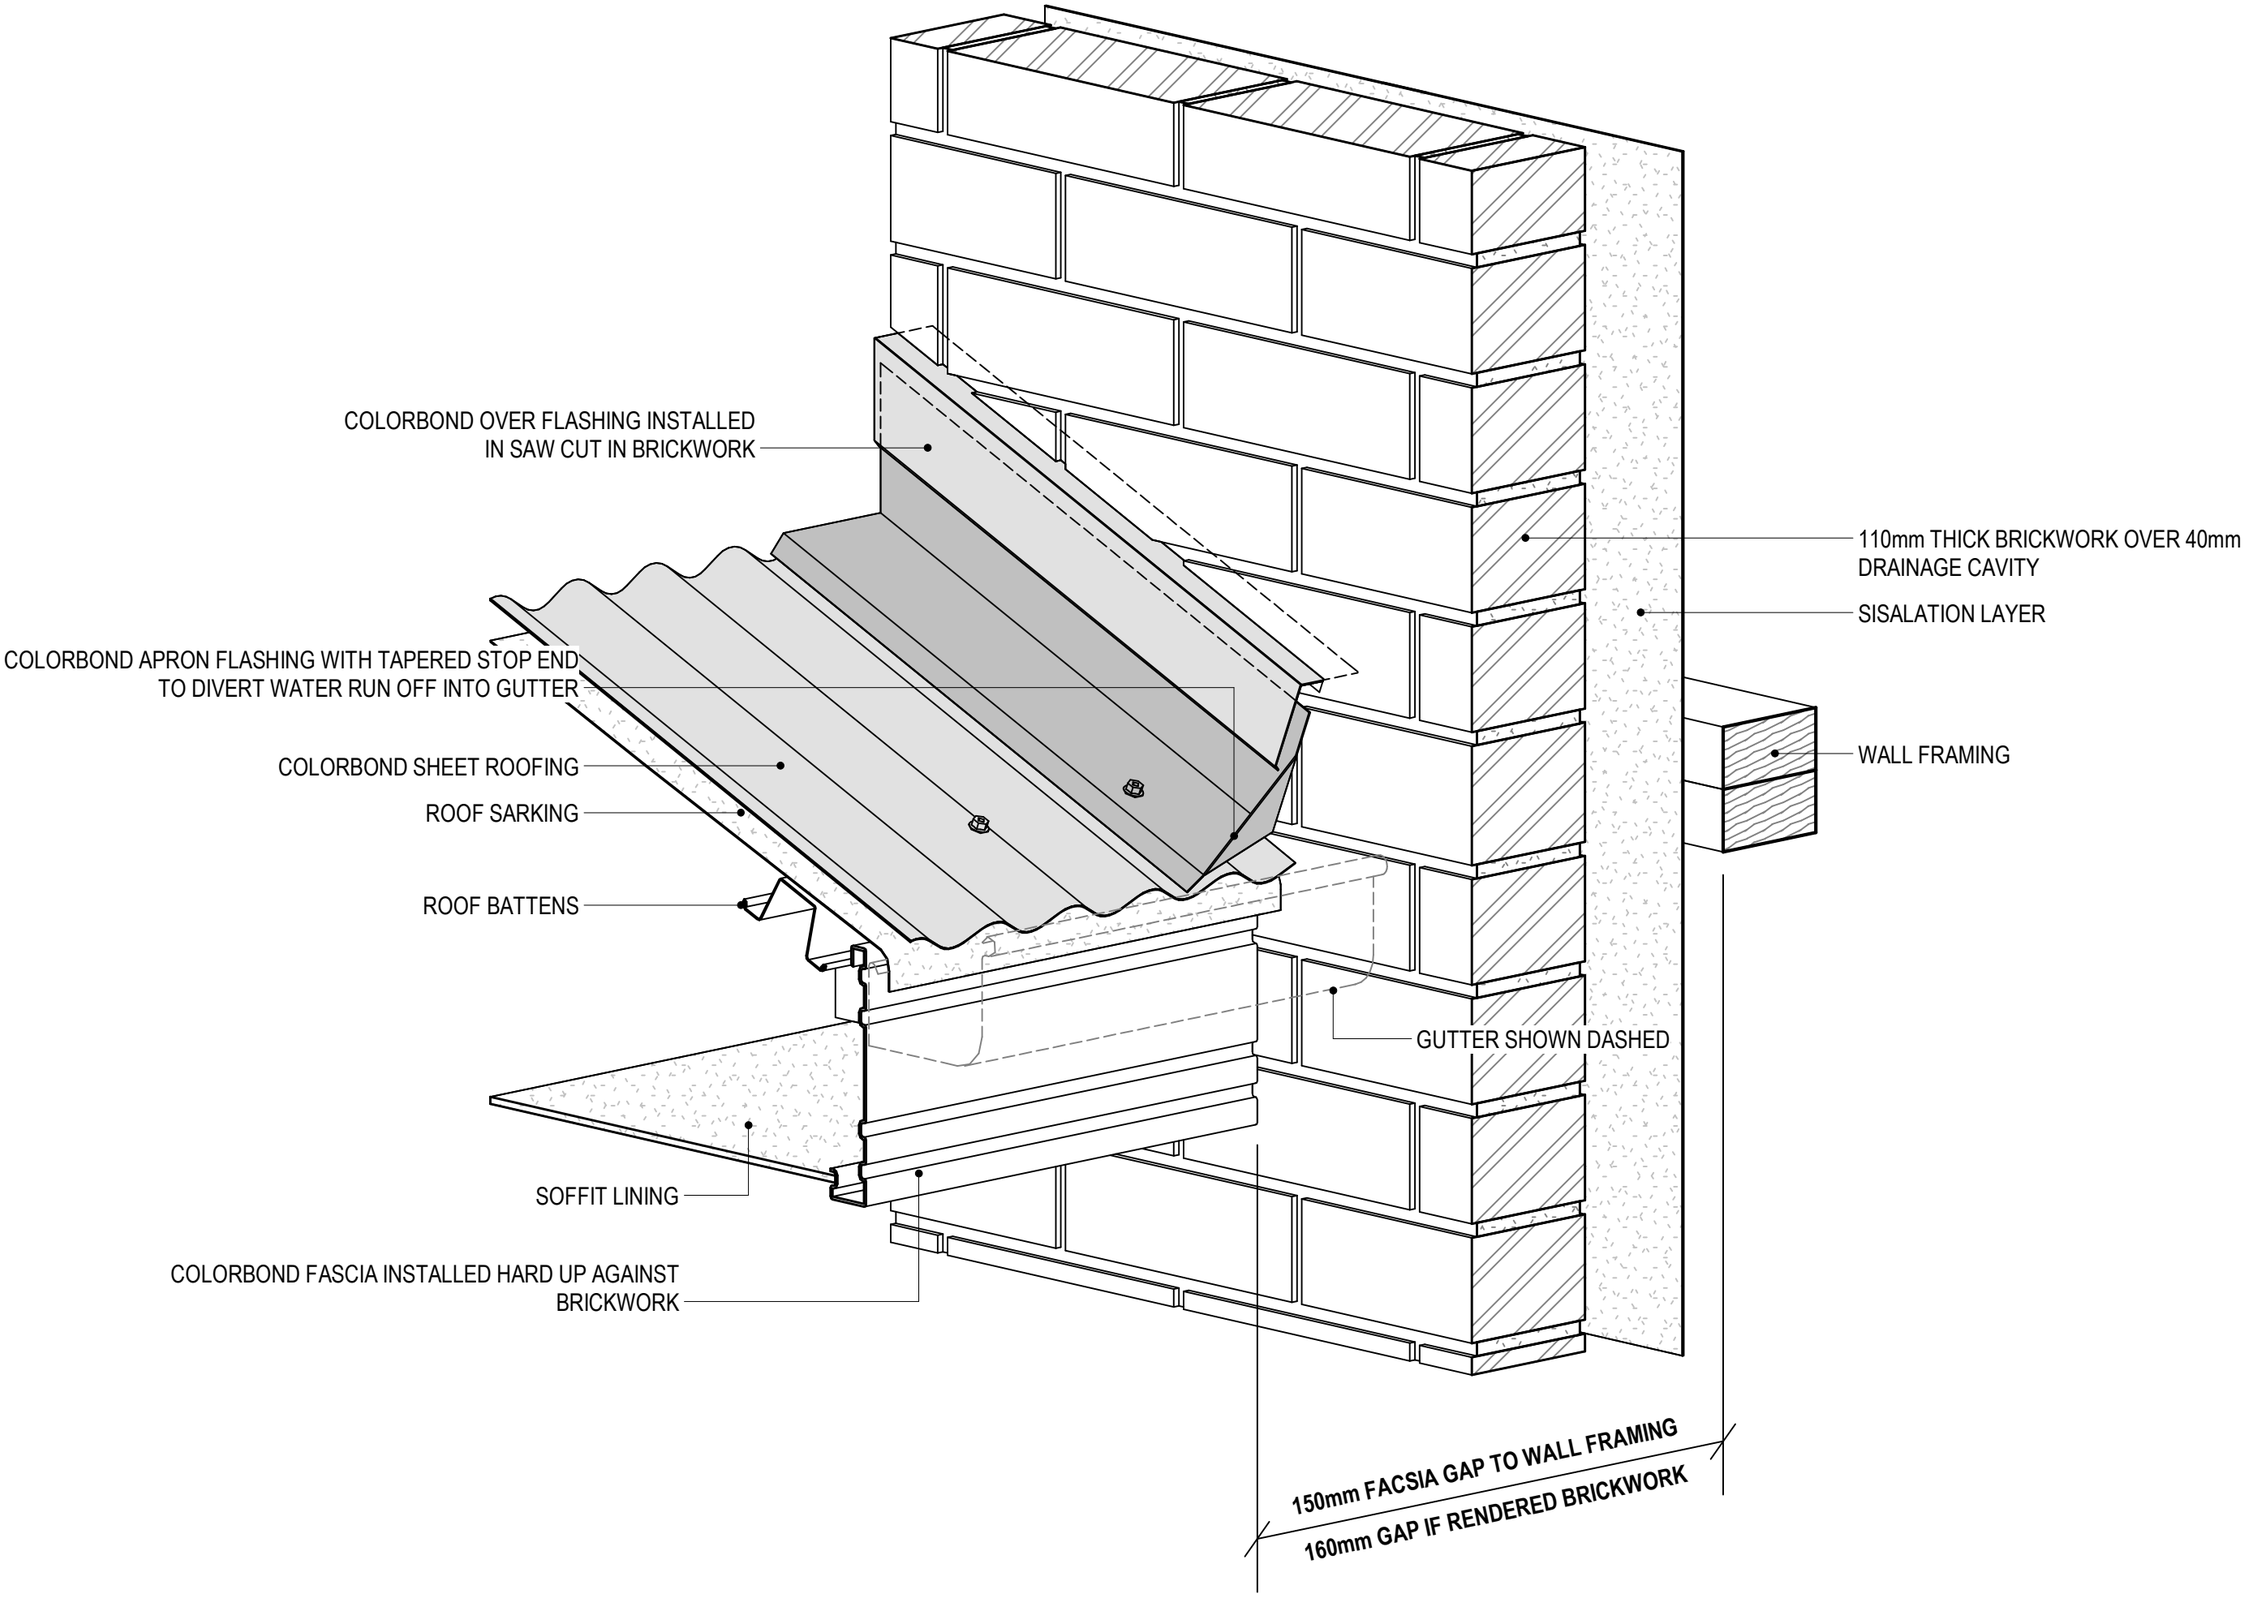

COLORBOND OVER FLASHING INSTALLED IN SAW CUT IN BRICKWORK
110mm THICK BRICKWORK OVER 40mm DRAINAGE CAVITY
SISALATION LAYER
COLORBOND APRON FLASHING WITH TAPERED STOP END TO DIVERT WATER RUN OFF INTO GUTTER
WALL FRAMING
COLORBOND SHEET ROOFING
ROOF SARKING
ROOF BATTENS
GUTTER SHOWN DASHED
SOFFIT LINING
COLORBOND FASCIA INSTALLED HARD UP AGAINST BRICKWORK
150mm FACSIA GAP TO WALL FRAMING
160mm GAP IF RENDERED BRICKWORK