A little more room on your desk

A four-part shelf for notebooks and small desk supplies.
Finished size: 24" wide x 8" deep x 8" high. All dimensions are inches.

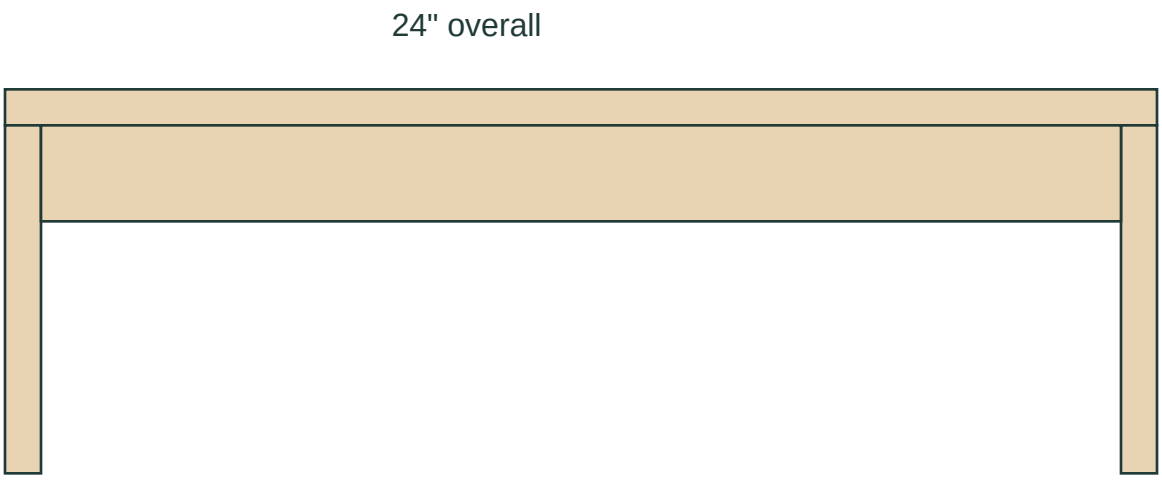

Front view - 8" high; 8" deep. Not to scale.

CUT LIST

Part	Qty	Length	Width	Thickness
Top	1	24"	8"	3/4"
Sides	2	7 1/4"	8"	3/4"
Back rail	1	22 1/2"	2"	3/4"

Start with a sound 24" x 48" panel of actual 3/4" plywood.
Measure first: plywood sold as 3/4" is often thinner. For thickness t,
side length = 8 - t and rail length = 24 - 2t. Keep top at 24" x 8".
The download assumes exactly 3/4"; update all affected parts and positions.

You will also need wood glue, suitable wood screws, clamps, a drill,
a square and sanding supplies. Choose screw/pilot sizes for your plywood.
This is a planning example, not a load-rated or physically tested design.

Cut, check, then assemble

Suggested panel breakdown - allow 1/8" kerf and room to trim rough edges.
Diagram is schematic. Use the measurements above, not a printed scale.

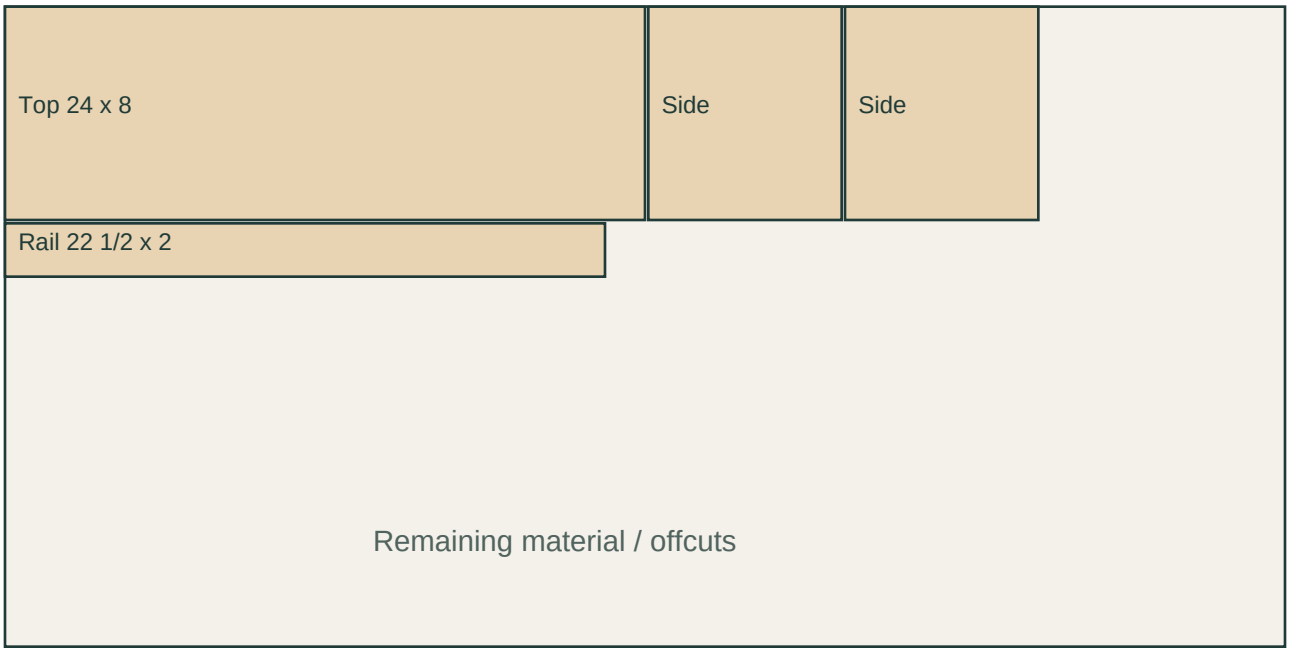

48" along grain x 24" across grain

1. Rip an 8" strip, then crosscut the top and both sides from it.
   Rip a 2" strip from the remainder and cut the back rail to length.
2. Dry-fit the sides under the top, flush with its ends and front/back edges.
   Fit the rail between the sides, tight under the top and flush at the rear.
3. Check square and mark fasteners. Pre-drill and countersink to avoid splits.
   Glue and screw the top to the sides, and the sides to the rail ends.
   Secure the rail to the top as appropriate for your chosen material.
4. Follow the glue cure time, ease sharp edges, sand and finish. Add felt feet.

Plan before you cut

Open desktop-shelf.carvd in Carvd Studio. Inspect the model, change the dimensions or stock, then generate your own cutting diagram. Re-check clearances and joints after resizing. Use offcuts to test your fasteners.

Free to download, adapt and share with credit to Carvd Studio.