### **Pressure Measurement**

Prof. A. Agrawal IIT Bombay

### Introduction

- Pressure is not a fundamental quantity (rather derived from force and area)
- However, very accurate instruments are available for calibration of less accurate instruments
- Standards are (as per the range):
  - Several hundred MPa to medium vacuum (~0.1 mm Hg):
     Precision Hg column (manometer)/ Deadweight piston gauge
  - Low vacuum (10<sup>-1</sup> to 10<sup>-3</sup> mm Hg): McLeod gauge
  - Very low to ultra-low vacuum (< 10<sup>-3</sup> mm Hg): Several accurate orifices + McLeod gauge

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

#### **Manometer**

- Unlike deadweight gauge, manometer is deflection type (and not null-type) gauge
- It has continuous (and not step) output
- However, they have comparable accuracies
- Manometers tend to become very long at large pressures, and therefore become unwieldy
- Here,  $h = (p_1-p_2)/\rho g$  where h is difference in height,  $\rho$  is density of manometer fluid
- Water and Hg are the most common manometer fluids

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

3

#### Refinements/Corrections in Manometer

For high accuracy:


- Thermal expansion of scale needs to be considered
- Variation of manometer fluid density with temperature needs to be considered
- Local value of g should be determined and employed

Additional sources of error include:

- Non-verticality of the tubes
- Difficulty in reading h due to meniscus formed by capillarity

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

# Various forms of manometer

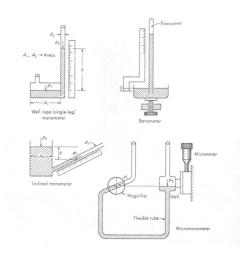

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

5

# Various forms of manometer (contd.)

- Well-type manometer
  - Well area very large compared to the tube
  - Small change in zero-level is suitably compensated
  - However, compensation is dependent on the variation in cross-sectional area
  - Less accurate as compared to U tube manometer

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

# Various forms of manometer (contd.)


#### Barometer

- Here h gives the absolute pressure, as the inside pressure is essentially zero (actually equals the vapor pressure of Hg, about 0.7 Pa absolute at 21 °C)
- Inclined manometer
  - Increased sensitivity by inclining
  - Thus, greater motion of liquid for a given change in vertical-height

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

7

# McLeod Gauge

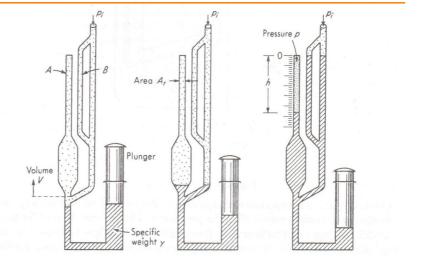


Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

# Pirani Gauge (Thermal Conductivity Gauge)

- <u>Basic Idea</u>: Change in gas pressure will affect heat loss from a heated wire (because of change in density of the surrounding gas). Heat loss affects the wire temperature and therefore its electrical resistance. Pick-up change in electrical resistance by using a resistance bridge.
- <u>Construction</u>: Platinum filament enclosed in a chamber. Change in wire resistance calibrated in terms of chamber pressure. A compensating arm used to minimize variations due to ambient temperature changes, etc.

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

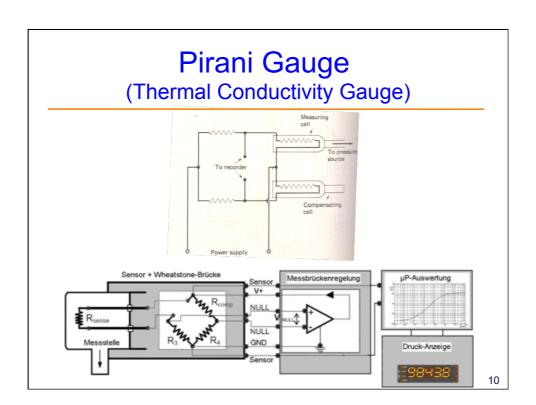

# **Thermal Conductivity Gauge**

Two variants possible of thermal conductivity gauge possible:


- Resistance change picked up by a resistance bridge Pirani gauge
- Temperature gauge picked up thermocouples welded on the wire – Thermocouple-type conductivity gauge
- Capable of measuring pressures in the range of 1 to 1000 torr (10<sup>2</sup> – 10<sup>5</sup> Pa)
- 1 torr = 1/760 of atmospheric pressure = 133.3 Pa

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

11

#### **Triode**





- · Air is removed from tube, so electrons can move freely
- Electrons are attracted to positively charged plate (P)
- Magnitude of current can be controlled by a voltage applied between cathode and grid (G) (made of wiremesh). The grid acts like a gate for the electrons.
- Note: a low power varying (AC) signal applied to the grid can control a much more powerful plate current, resulting in amplification

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

### **Ionization Gauges**

- Consists of heated filament, positively biased grid, negatively biased plate in an envelope evacuated by the pressure to be measured
- Grid draws current from the heated filament; collision between electrons and gas molecules cause ionization of molecules
- Positively charged molecules are attracted to the plate of the tube
- This causes current flow in the external circuit
- Magnitude of current depends on gas pressure

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

13


### **Ionization Gauges**

- Used for measuring extremely low pressures (1 – 10<sup>-6</sup> torr or 100 – 10<sup>-4</sup> Pa)
- · Disadvantages of ionization gauge:
  - Pressure of more than 1 torr causes rapid deterioration of filament, resulting in short life
  - Electron bombardment is a function of filament temperature, which therefore requires careful control of filament current

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

# Elastic Transducers for Pressure Measurement

- Flexible metallic elements of the form Bourdon tube, diaphragm, bellow is used as the sensitive element in pressure transducer
- Deflection of the element is connected to pointer/ scale readout through linkages/gears

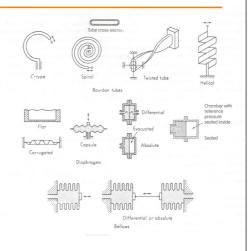


Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

15

# Elastic Transducers for Pressure Measurement (contd.)

- Bourdon tube has a tube of non-circular cross-section
- Pressure difference causes the tube to attempt to attain a circular cross-section
- This leads to distortion, and curvilinear translation/ rotation of the free end




- Motion of the free end gives the desired output
- Spiral/helical configurations give more output motion for a given pressure
- Twisted tube is soft in rotation, but stiff in radial direction (reduces sensitivity to shock and vibration)

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

### Elastic Diaphragm Based Pressure Gauges

- Many dynamic pressure measuring gauges use an elastic diaphragm as primary pressure transducer
- Diaphragm can be flat or corrugated

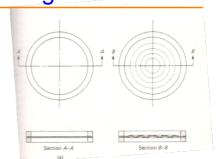

- Flat type together with a secondary electrical transducer allows measurement of very small diaphragm deflections
- Corrugated type used when deflections are large
- (Secondary) Electrical transducer can be resistance, capacitance, inductance or piezo based.

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

17

#### Flat Diaphragm Pressure Gauges

- Generally, maximum deflection is limited to 30% of diaphragm thickness
  - To either maintain linear pressure-displacement relation or stress consideration
- Resistance strain gauge can be used to measure strain in terms of pressure
  - Note, small area available for mounting
  - Gauge with small lengths used
  - Change in resistance measured using a Wheatstone bridge

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

#### **Corrugated Diaphragm Pressure Gauges**


- Corrugated diaphragm used in larger diameter than flat types
- Convolutions to diaphragm however increases complexity of theoretical design
- Corrugation permits increased linear deflections and reduced stresses
- However, large size and deflections reduce the dynamic response
  - Employed mostly in static applications

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

19

#### Differential pressure cell with inductancetype secondary transducer

- Variable inductance has been successfully used as a form of secondary transducer
- Flexing of the diaphragm due to applied pressure causes it to move toward one pole piece and away from the other
  - Causes change in relative inductances
  - An inductance bridge circuit used to pick up this change
- Typical range: 0-7 bar

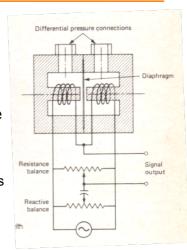

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

# **Deadweight Gauge**

- The gauge to be calibrated (less accurate gauge) is connected to a chamber filled with liquid
- Air buoyancy on weights and piston
  weights and piston
  Coll film
  Cage to be calibrated
  Coll film
  Coge reference point
  Coll film
  Coge reference point
  Sheed
- The chamber pressure
   is adjusted by pump and bleed valve
- Weights applied on piston-cylinder
- When the piston and weights appear to float, the gauge pressure equals the weight applied divided by piston area

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay

21

# Refinements/Corrections in Deadweight Gauge

- Frictional force between piston-cylinder must be reduced to a minimum
- Small clearance between piston-cylinder leads to axial flow of fluid from high-pressure end to low-pressure end. This movement leads to viscous shear force, which tends to support part of the deadweight
- Small clearance also means that the area to be employed in pressure calculation is not clear
- Corrections needed for:
  - Temperature effect on areas of piston and cylinder
  - Local gravity condition
  - Buoyancy effect

Prof. A. Agrawal, ME226, Mechanical Measurements, IIT Bombay