



Replacing the D145F/D150F CRT Monitor and the Power Supply by the Monitor Unit FSU211




1. Demount the panel front from the chassis. Therefore, unscrew the four hexagon screws at the front (1), and unplug the connection cable that leads from the chassis to the panel front (2).

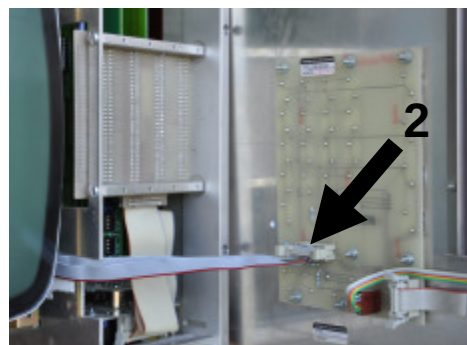


2. Remove the upper and the back cover of the operating station.
3. Disconnect the signal cable from the monitor (3). Therefore, if present, remove the two cable holders (4). Disconnect the monitor power cable (5). Cut the three-conductor connection to the brightness potentiometer (6), or, alternatively, dismount the potentiometer. Unscrew the four screws that are used to mount the monitor on the chassis (7). Remove the monitor from the chassis.

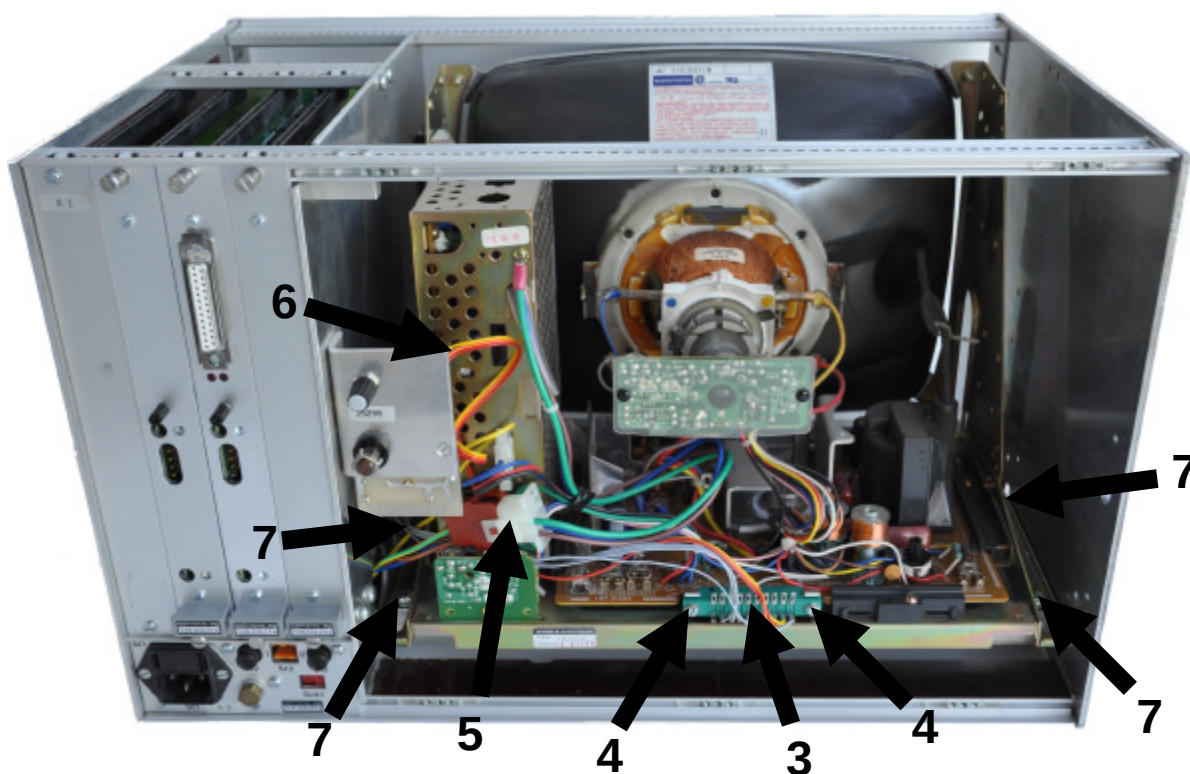

4. Remove the four mounting brackets that are attached at the screen window (8). Therefore, unscrew the ten nuts (9) at the back side of the front panel. The mounting brackets are no more used.

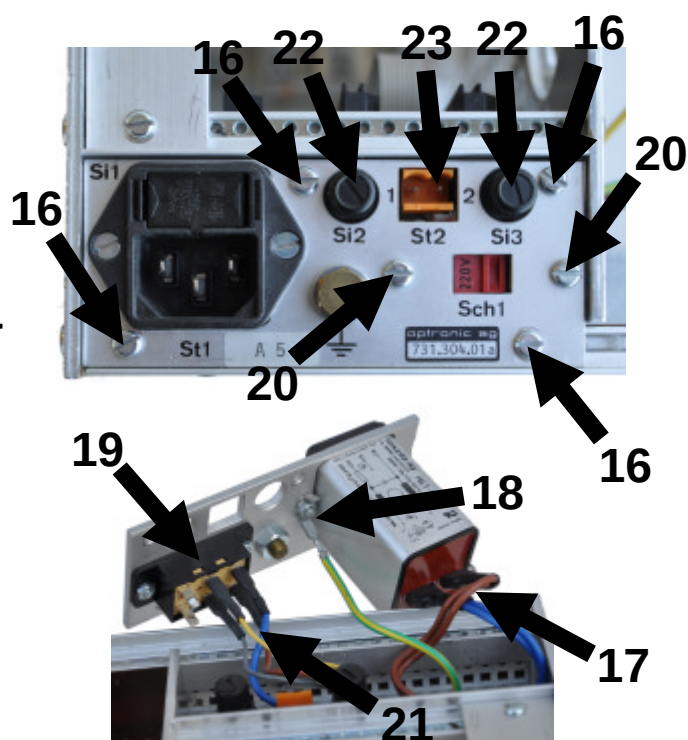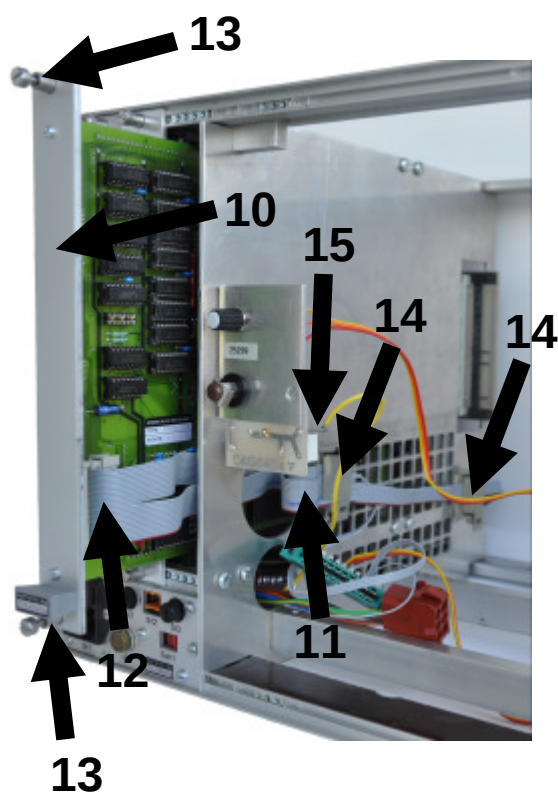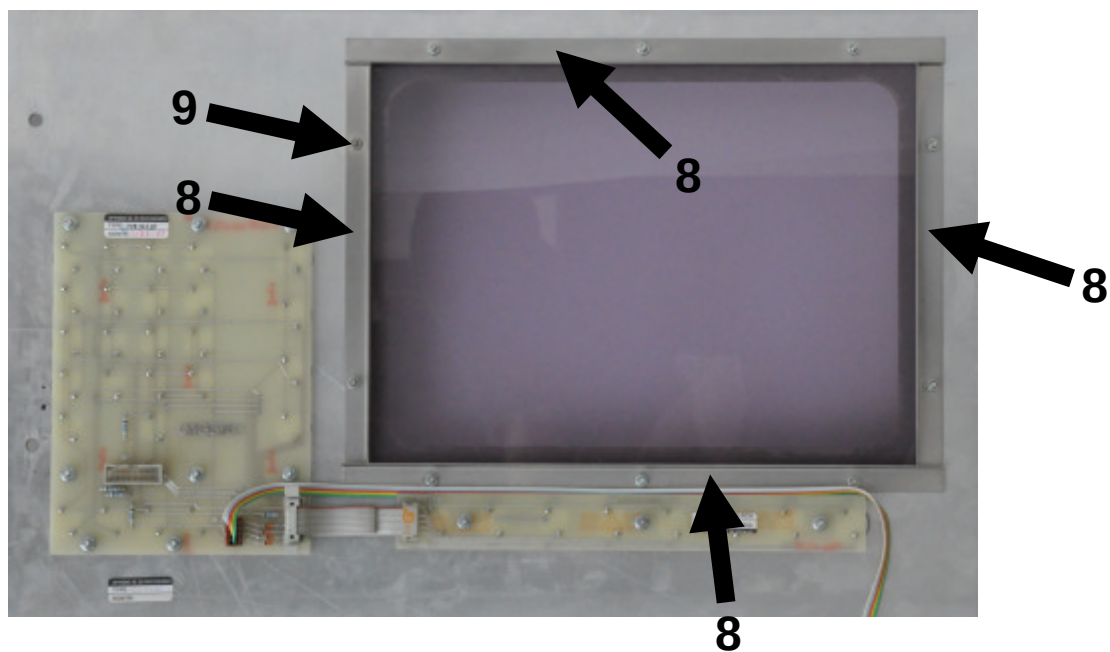


5. Remove the connection cable (11) that leads to the video card 729.332.02 (10). The connector (12) on the video card can be accessed when the video card is pulled out. The front plate couplings (13) must be loosen before the card can be pulled out. To remove the cable, open the two ribbon cable holders (14).
6. Disconnect the yellow wire from the 0V clamp (15).
7. Demount the front plate of the power supply. Therefore, unscrew the four screws (16) that can be accessed from the front. Thereafter, the front plate can be lifted.
8. Disconnect the blue and the brown wire (17) from the line filter clamps, and the green-yellow earthing cable (18) from the front plate clamp. Either demount the mains voltage pre-selector (19) (by unscrewing the two screws (20) on the front plate of the power supply), or disconnect the wires that lead to the pre-selector (21). The mains voltage pre-selector (19) and the fuses (22) are no more used, the auxiliary supply output (23) is no more supported.

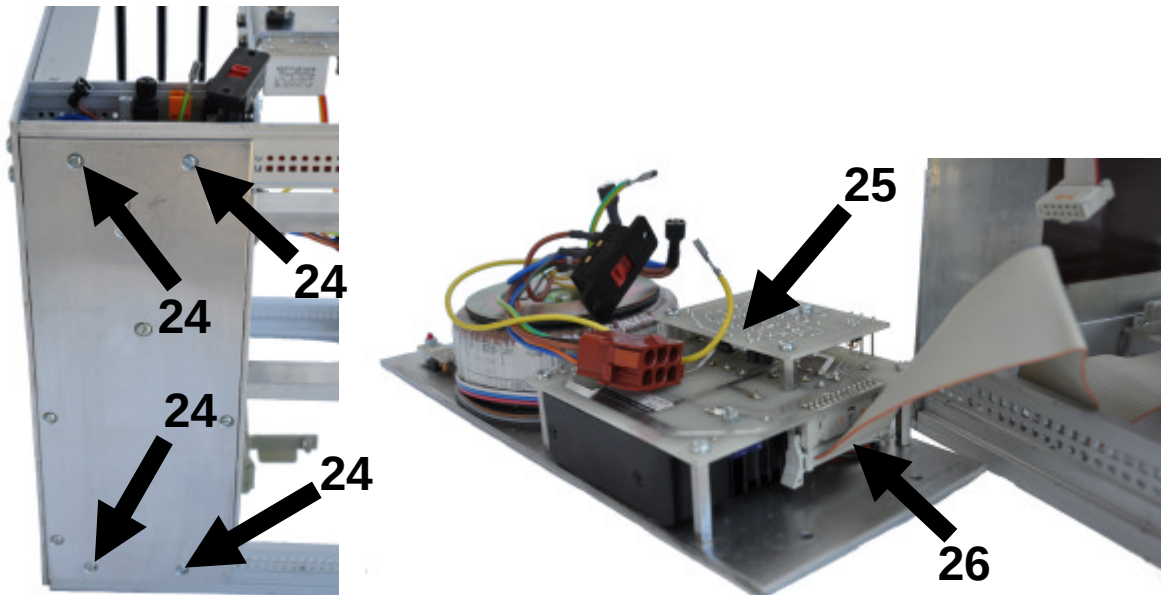


9. Demount the power supply from the chassis. Therefore, unscrew all six front plate couplings of the three cards and pull out the cards. Lift the chassis in order to get access to the chassis bottom. Unscrew the four screws (24), that fix the power supply base plate, and lift out the power supply (25). Disconnect the 26-pin ribbon cable (26). The components on the power supply base plate are no more used and therefore can be unscrewed and taken away. Alternatively, simply pinch off the cables. Thereafter, remount the power supply base plate on the chassis.
10. Put the chassis down again, insert the two left cards, and fix the cards by use of the front plate couplings. Partly insert the video card. Connect the supplied Y connection cable 731.426.041 (27) at the video card 729.332.02 and lead the other cable end through the upper round hole in the inner wall of the chassis (28). Put the ribbon cable into the two ribbon cable holders (29) and close them. Thereby, please take care that the cable is not tight until the video


card is pulled out a few centimeter. Fully insert the video card into the chassis and also fix it by use of the two front plate couplings.

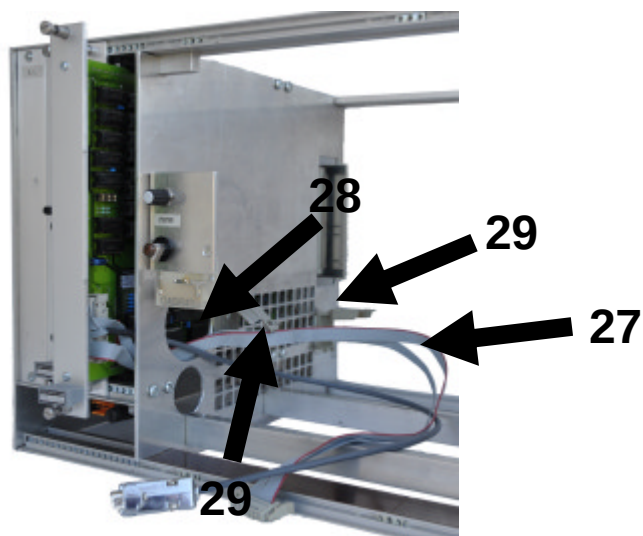

11. Install the Monitor Unit FSU211 and mount it with the four supplied screws at the chassis (30).

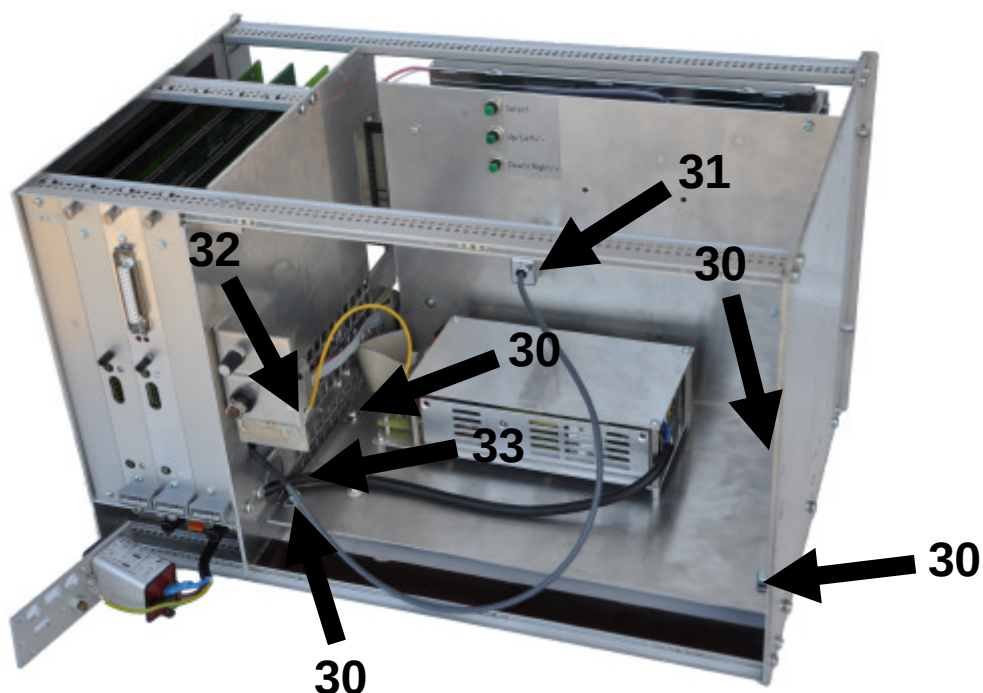

12. Connect the 9-pin D-sub connector of the connection cable 731.426.041 to the FSU211 (31) and screw it.
13. Connect the yellow wire to the 0V clamp (32).
14. Lead the FSU211 power supply cable through the lower round hole in the inner wall of the chassis (33).

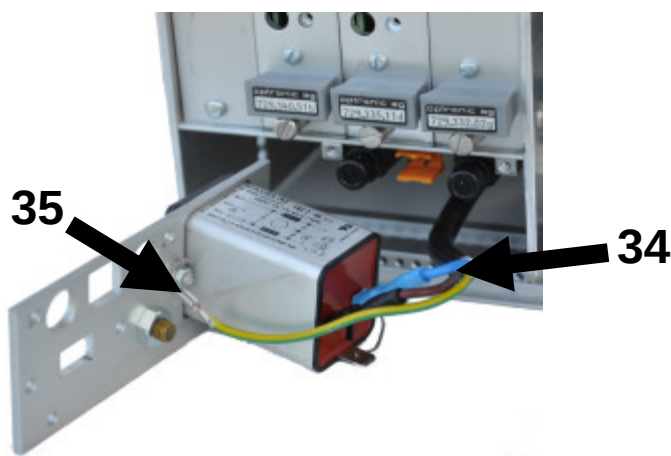

15. Connect the power supply cable to the clamps of the line filter at the power supply front plate. Therefore, connect the blue wire to the neutral conductor clamp (N), and the brown wire to the phase conductor clamp (P) (34). Connect the green-yellow wire (earthing) to the free clamp at the power supply front plate (35). Remount the power supply front plate to the chassis.
16. Remount the upper and the back cover of the operating station.
17. Connect the 14-pin ribbon cable connector of the connection cable 731.426.041 to the panel front. Remount the panel front to the chassis. Please take care that the connection cable doesn't get jammed.