
VEHICLE LOADING




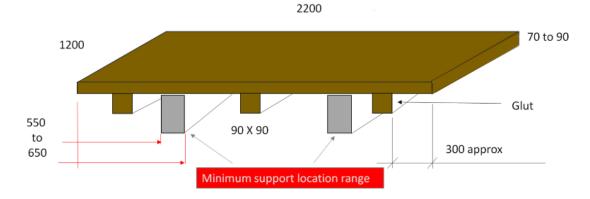

- The shower is robustly packaged in 30mm honeycomb cardboard sheets with solid cardboard edge boards.
- The package must be supported at a minimum of 2 points of its length, for full width.
- The package may be supported in more locations or fully, such as placing on a flat ute tray.
- If only 2 points are used, they must be between 550mm and 650mm from each end.
- Points of support must be of a sufficient width to prevent them from crushing into the cardboard to such a degree as to damage the glass. 90mm is suitable for 2 supports and 70mm is suitable for 3 supports.
- The package may be supported on all 3 gluts.

PACKAGE WEIGHT

- Fixed panel and over bath showers 60kgs to 80kgs.
- Corner, wall to wall, angled and next to bath showers 120kgs to 145kgs.
- Ensure your vehicle can support your loading method.

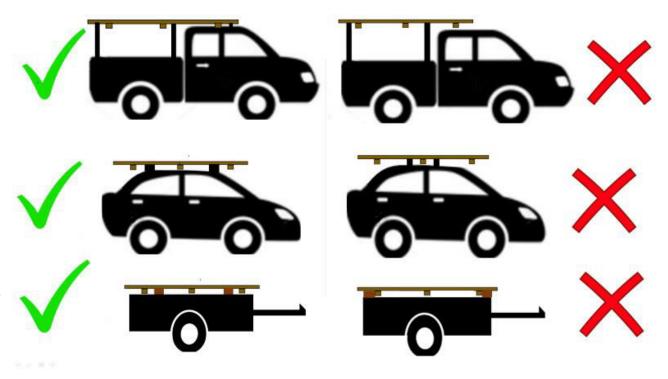

- Gluts can be removed if they obstruct loading.
- The load must be strapped down over the package in the location of the supports.
- If pick up, the purchaser must ensure that the product is properly loaded, supported and strapped down.
- The package must be kept flat at all times and stored on a flat surface, supported by the packaging gluts.
- The package will be forklift loaded onto your vehicle.

Note; it is the drivers responsible alone, to ensure that their load is complaint at all times with any current road rules. We do not warrant that conforming to this document reaches any such compliance with road rules. FSO recommends that you make your own further enquiries with the regulatory body in your State.