

UNPACKING PROCEDURE

This procedure is to be followed at the instant the shower package is picked up or delivered.

It is imperative that, If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding

Failure to follow this procedure may impact upon your ability to make a warranty claim.

- *Pick up.* * Upon first sighting the package, inspect the item externally for any signs of impact damage.
 - * If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding
 - * Properly load the package onto the vehicle. Information for *vehicle loading* is attached and can be found on the website.

* Upon first sighting the package, inspect the item externally for any signs of impact damage. * If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding Cut cardboard sheet using a retractable knife with depth set. Lift cardboard sheet away from **Unpacking 1** Locate your package inside, on a flat level surface such as a bench. Cut from opening to towards glass and pack on all sides to corners, being careful not to keep a sufficient gap between 2 Remove the top layer of 30mm cardboard. See Fig 1 scratch glass. Do not cut glass and the cardboard sheet. If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding cardboard sheet into more than 4 pieces. 4 Remove the hardware from the package and set aside.

NOTE: Do not dispose of the packaging.


A

Remove cardboard angle edging from all sides of package

Remove panel with FSO label



- 5 Inspect and remove each panel of glass, specifically in the following order;
- a) Inspect the first glass panel's edges, corners and faces, without removing from package.
- b) Remove the first glass panel from package, being mindful that glass to class contact must not occur.
- c) Place glass vertically with the long edge on a soft surface that will not chip the glass, such as carpet. See Fig 2
- d) Arrange glass, and insert cardboard packing (or similar) against glass, such that there is no contact between each panel and any hard surfaces. See Fig 2
- e) Inspect glass edges, corners and faces.
- f) If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding
- 6 Remove the remainder of any glass panels (number of panels is dependant on your specific order) from the packaging one by one, following the procedure (as detailed above) 5 a) through to 5 f) inclusive.

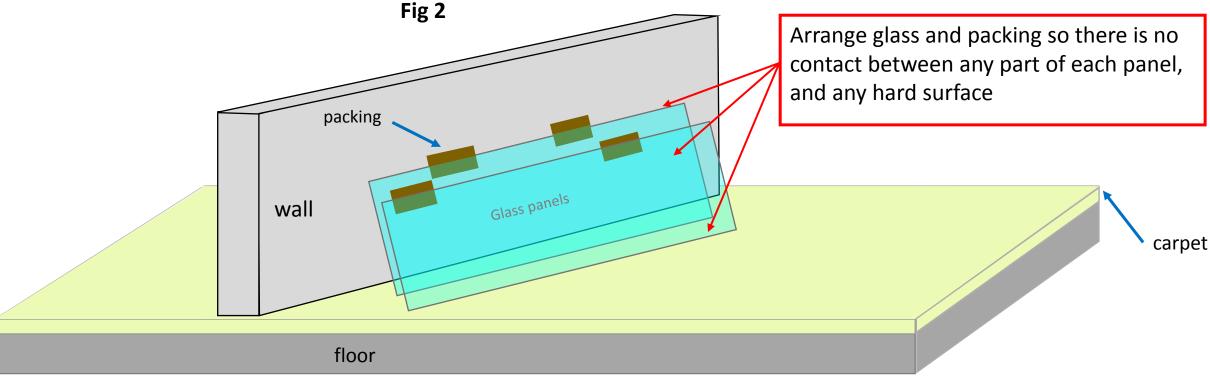

- **7** Locate the documentation contained with your *order confirmation*.
- 8 Check that all of the hardware listed is included.
- 9 If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding
- 10 Measure the glass panels to ensure they are as detailed in the *manufacturing drawing*.
- 11 If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding
- 13 If shower was ordered to include Enduroshield, confirm that each panel is labelled on the side that will be inside the shower cubicle.
- 12 If issue identified, stop and contact FSO on 1300 40 20 39 before proceeding
- 13 You are now ready to install the shower. Proceed to the installation procedure.

note; Do not dispose of packaging at this stage.