
MAIN-A / full-size fit template

F005 / evidence R005 / DRAFT - NOT FOR FABRICATION

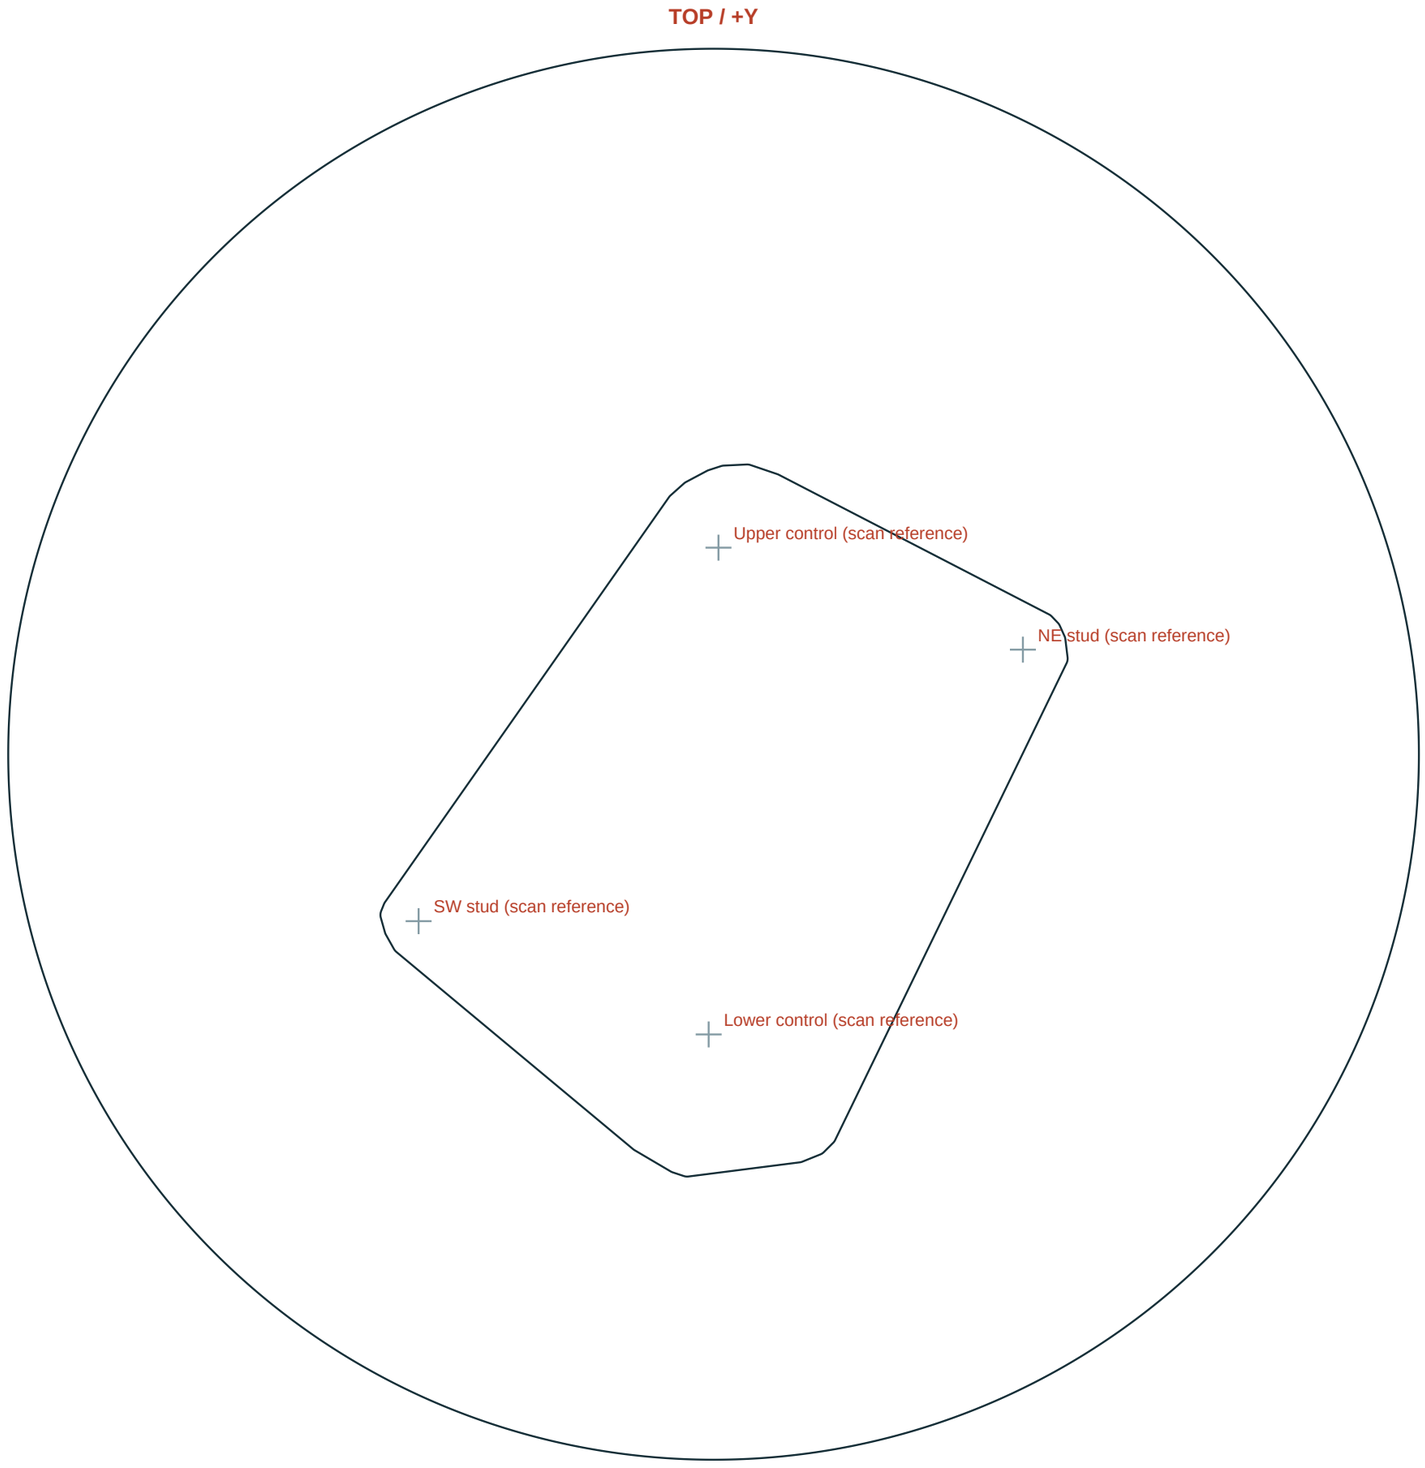


PRINT AT 100% / ACTUAL SIZE

A3 landscape. Disable fit-to-page. If using Letter/A4 paper, use the PDF viewer's poster/tile mode at 100%, then align and tape the sheets.

Measure both calibration bars below before using the profile. Paper confirms XY only. Use the matching plastic STL/DXF and known spacers for depth and insertion checks. Do not force the prototype over the hardware.


For a main plate, place the actual inner plate over this template and trace the complete back foam edges. Mark any overlap with the central cutout. This resolves the narrow foam-landing uncertainty directly.

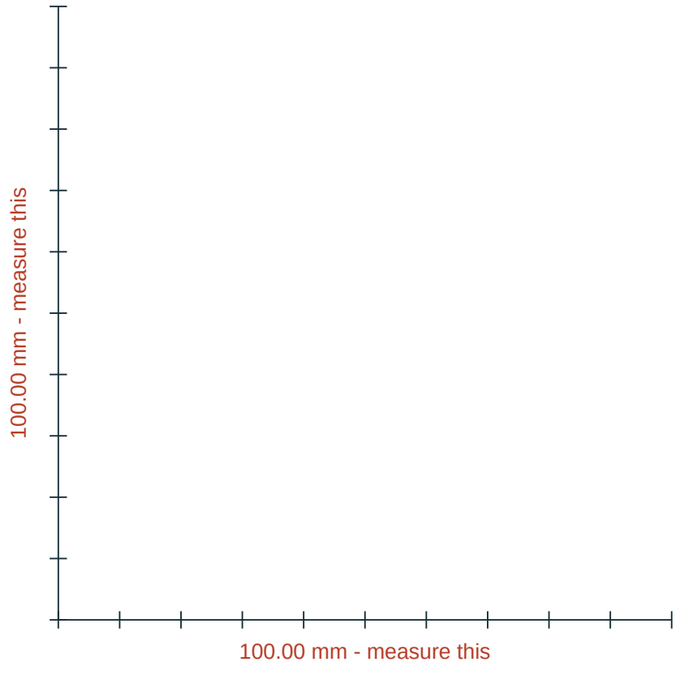

Quote / prototype review only. Physical fit, seal support and manufacturing release unresolved.

MAIN-B / full-size fit template

F005 / evidence R005 / DRAFT - NOT FOR FABRICATION

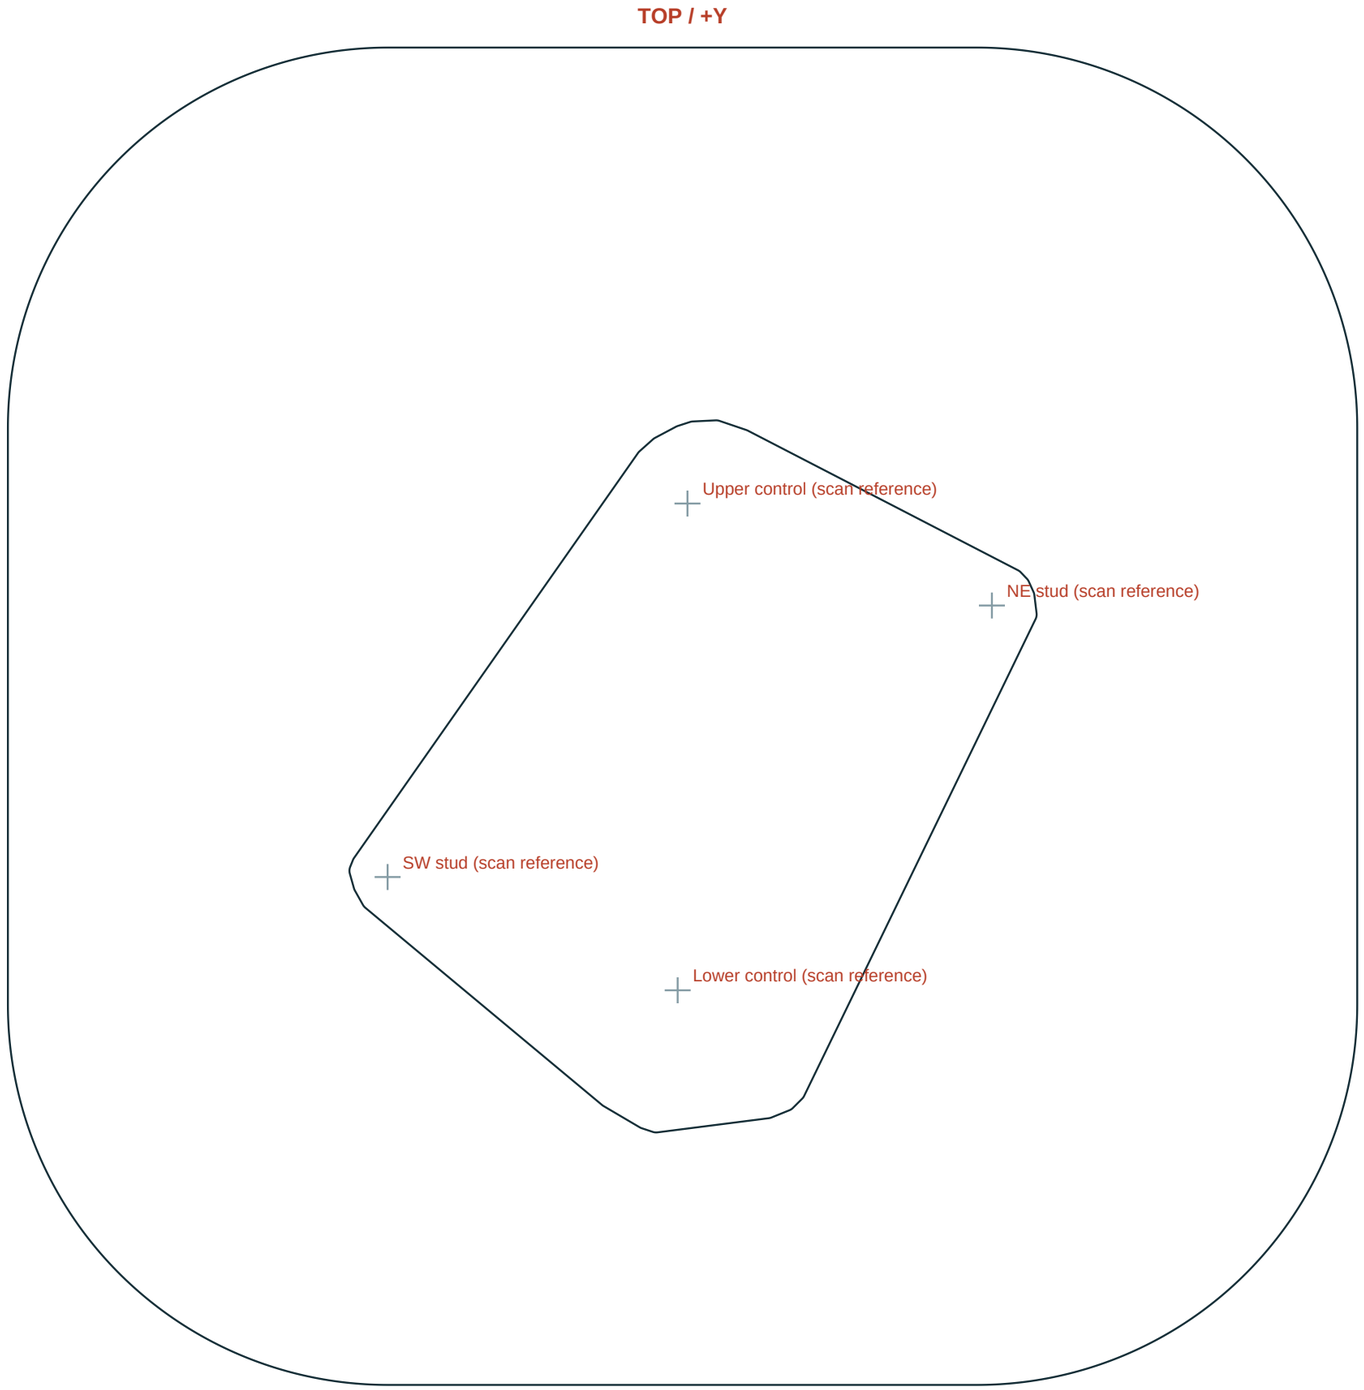


PRINT AT 100% / ACTUAL SIZE

A3 landscape. Disable fit-to-page. If using Letter/A4 paper, use the PDF viewer's poster/tile mode at 100%, then align and tape the sheets.


Measure both calibration bars below before using the profile. Paper confirms XY only. Use the matching plastic STL/DXF and known spacers for depth and insertion checks. Do not force the prototype over the hardware.

For a main plate, place the actual inner plate over this template and trace the complete back foam edges. Mark any overlap with the central cutout. This resolves the narrow foam-landing uncertainty directly.

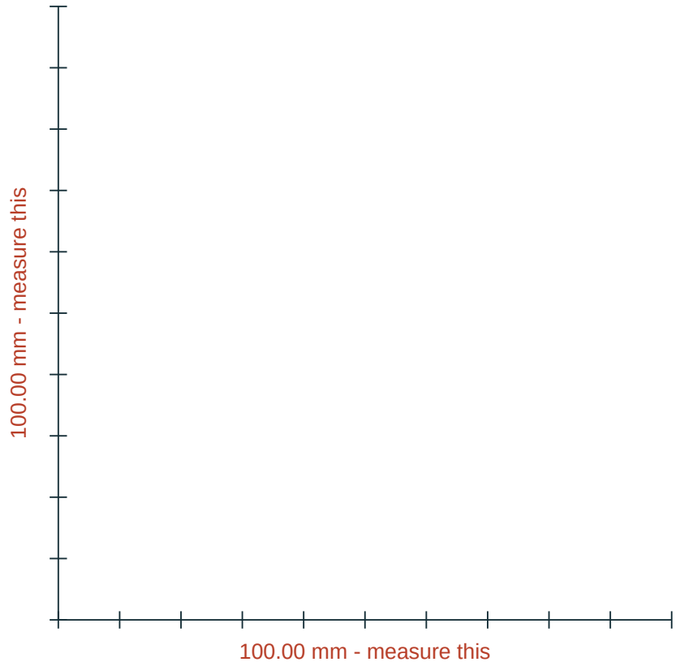

Quote / prototype review only. Physical fit, seal support and manufacturing release unresolved.

TOP / +Y

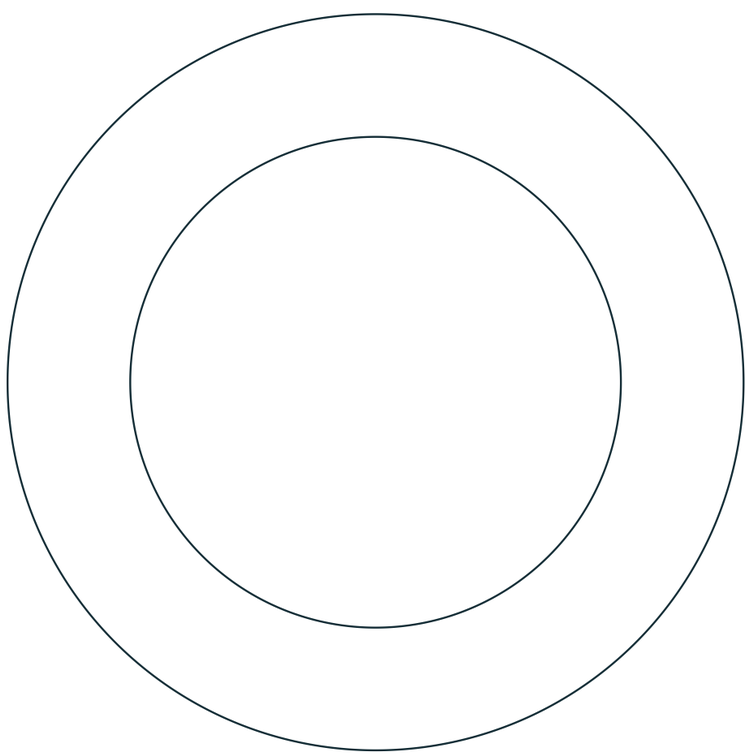


PRINT AT 100% / ACTUAL SIZE

A3 landscape. Disable fit-to-page. If using Letter/A4 paper, use the PDF viewer's poster/tile mode at 100%, then align and tape the sheets.


Measure both calibration bars below before using the profile. Paper confirms XY only. Use the matching plastic STL/DXF and known spacers for depth and insertion checks. Do not force the prototype over the hardware.

For a main plate, place the actual inner plate over this template and trace the complete back foam edges. Mark any overlap with the central cutout. This resolves the narrow foam-landing uncertainty directly.

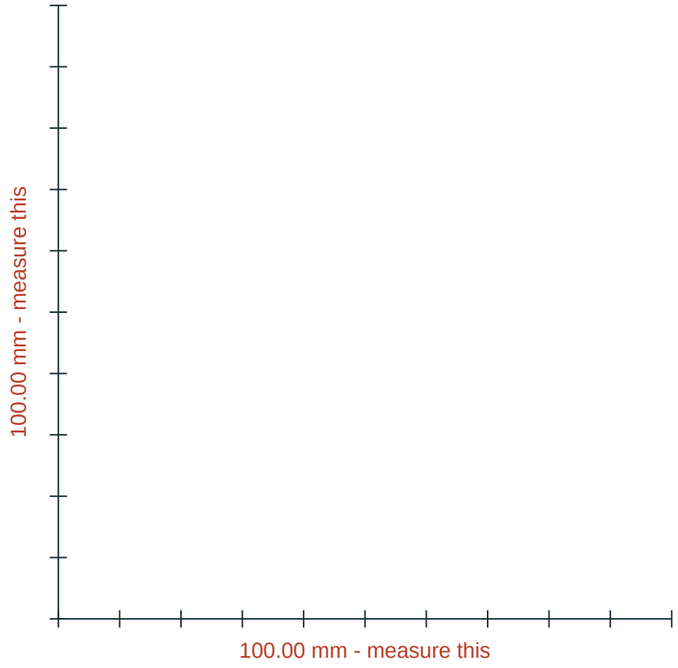

Quote / prototype review only. Physical fit, seal support and manufacturing release unresolved.

TOP / +Y

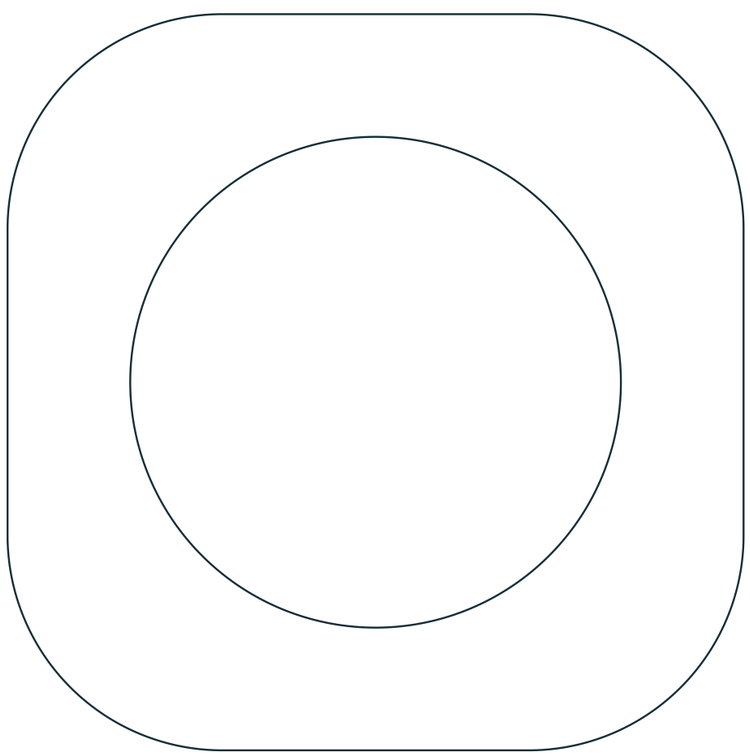


PRINT AT 100% / ACTUAL SIZE

A3 landscape. Disable fit-to-page. If using Letter/A4 paper, use the PDF viewer's poster/tile mode at 100%, then align and tape the sheets.

Measure both calibration bars below before using the profile. Paper confirms XY only. Use the matching plastic STL/DXF and known spacers for depth and insertion checks. Do not force the prototype over the hardware.

For a main plate, place the actual inner plate over this template and trace the complete back foam edges. Mark any overlap with the central cutout. This resolves the narrow foam-landing uncertainty directly.

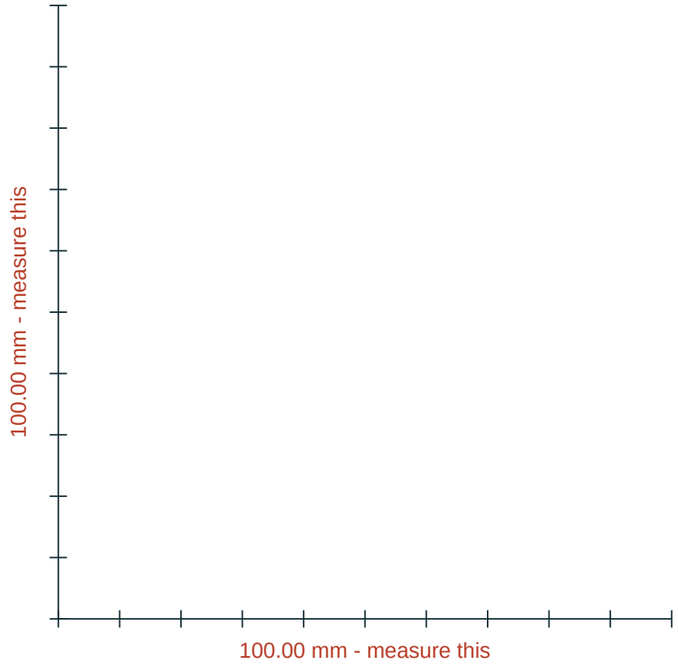

Quote / prototype review only. Physical fit, seal support and manufacturing release unresolved.