01 / Record the current installation

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL



Responsible: Homeowner + installer

Prerequisite: Existing access is safe; no pressure parts disturbed. User reported no changes since capture on 2026-10-14.

Tools / materials: Camera, ruler, labels; measurement worksheet.

Action

Take the requested dimensional readings and label the matching locations. Report any future plumbing, stud or wall change before using the model for fit.

Completion check


Readings reference the worksheet revision; any newly changed areas are identified.

Stop condition

If a valve moves or repairs hide a cut, the old scan cannot certify current fit.

02 / Check plumbing and factory adjustment

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

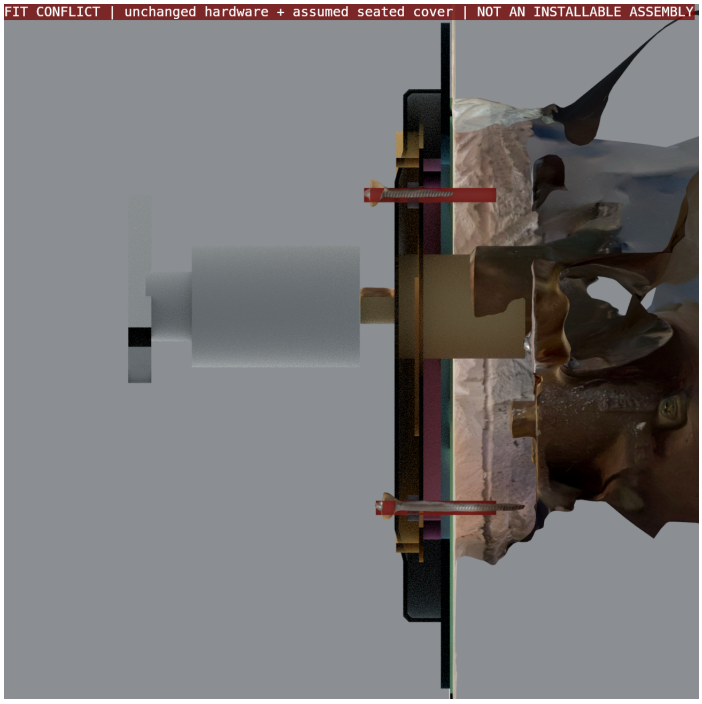

Responsible: Qualified plumber

Prerequisite: Exact Kohler models recorded; applicable revision checked.

Tools / materials: Applicable Kohler guides, straightedge, depth gauge and correct hand tools.

Action

Trace reported rear stud contact with wood; verify valve rough-in depth and identify the stem adapters separately. Check available adjustment, final seating and supply/valve leakage before selecting a repair.

Completion check


Stud rear travel and engagement, Check 10 tip identity/depths, plaster-guard or axis-datum check, and correct adapter/handle seating recorded.

Stop condition

Do not shorten studs, force trim, or loosen pressure-containing parts for a homeowner measurement. No valve relocation target is approved.

03 / Resolve the support and water barrier

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

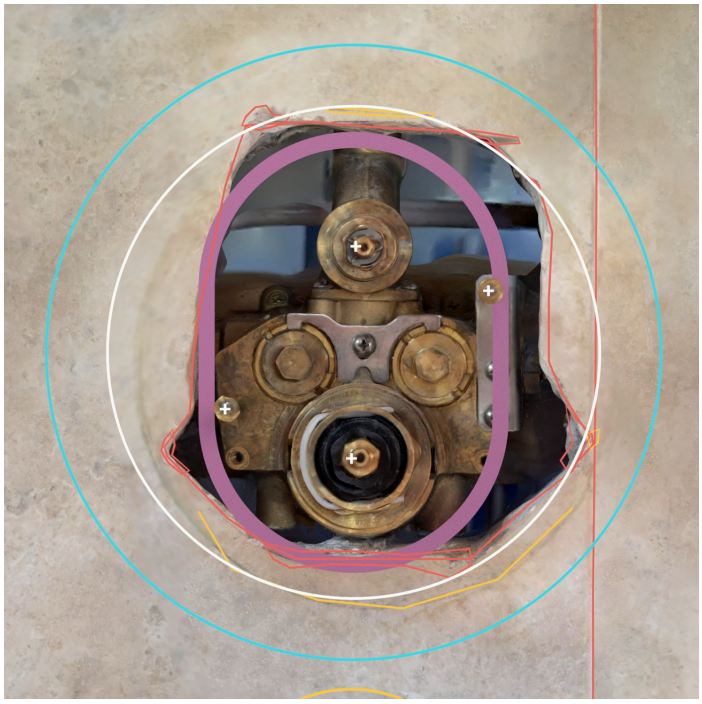

Responsible: Qualified tile/waterproofing installer

Prerequisite: Safe access through the existing opening; stone protected.

Tools / materials: Light, inspection mirror, straightedge; approved inspection method.

Action

Identify sound substrate, possible backing access and the existing waterproofing system. Design supported local rebuilding or a retained plate detail from this evidence.

Completion check

Complete gasket landing, backing/load path and compatible water-barrier connection are documented.

Stop condition

No filler bridging the unsupported opening. Surface sealant or grout cannot establish an unseen membrane connection. No tile cutting is authorized.

04 / Dry fit the reviewed revision

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL



Responsible: Installer with homeowner review

Prerequisite: Measurements accepted; repair option and trial geometry revised.

Tools / materials: Calibrated 1:1 paper template, thickness-accurate trial part or spacers, straightedge, original hardware.

Action

Check the planar template first, then trial the actual layer thickness with the original inner plate, gasket, trim and handles.

Completion check


Worst cuts concealed with sound overlap; no rocking; continuous foam support; trim seats; threads engage; drain down; full travel and tool/removal access.

Stop condition

Paper proves no depth clearance. Prototype materials are not approved permanent wet-area materials. Record failures; do not force the fit.

05 / Install only the released material detail

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

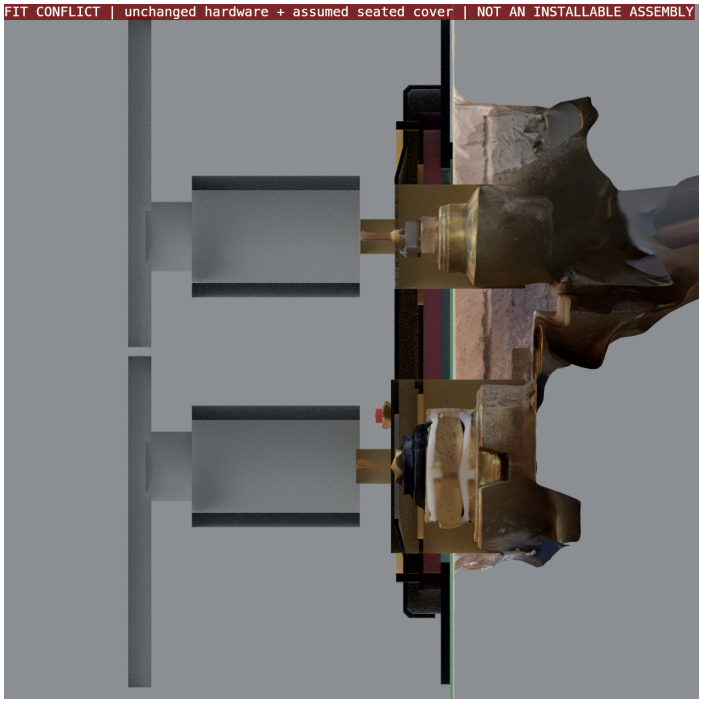

Responsible: Installer / fabricator as assigned

Prerequisite: Selected design, material data, physical fit and explicit fabrication approval complete.

Tools / materials: Approved drawing, inspected finished part and named materials from the released schedule.

Action

Protect service parts, prepare the verified substrates, place supported repairs and sealing layers in the approved order, and assemble the original Kohler components.

Completion check


Incoming dimensions, flatness, thickness, edges and finish accepted; sealing path continuous; service parts remain removable; drain unobstructed.

Stop condition

The current seated-cover trial has solid intersections and is rejected. No selected mortar, backing, sealant, finish or cure schedule exists. Do not install from this draft.

06 / Cure, test and preserve access

R003 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

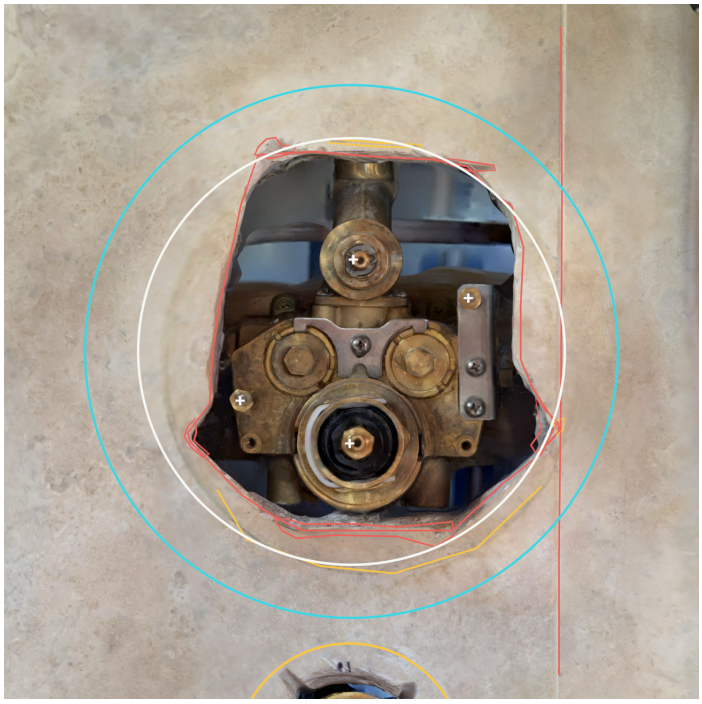

Responsible: Installer; homeowner observes results

Prerequisite: Selected product-specific cure and water-exposure requirements met.

Tools / materials: Approved test procedure, dry indicators and accessible inspection points.

Action

First check supply/valve behavior with surfaces kept dry; then test controlled water exposure around the assembled trim while observing available access.

Completion check


Record product cure conditions, test duration/conditions, observed locations and results. Retain a future removal procedure.

Stop condition

Stop if moisture appears. Investigate supply leakage separately from surface-water entry. A local pass does not certify the concealed shower system.

Depth and sealing / review correction

The earlier seated-cover image is not a feasible assembly. The unchanged stud envelopes intersect the assumed cover. No captured hardware has been shortened or moved.

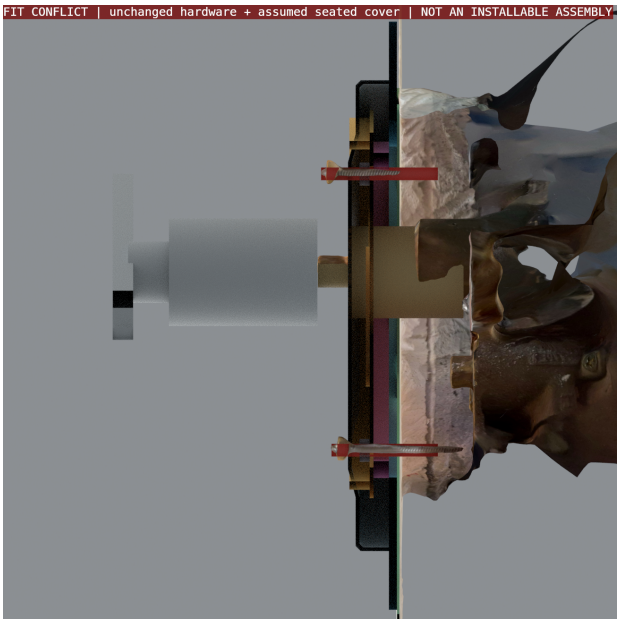

All Z values use the original intact-stone plane as zero, with positive Z toward the shower. Numbers below are conditional model values, not physical measurements.

Trial / stud	Tip Z, mm	Cover inside Z, mm	Signed gap, mm
Original-wall trial / STUD-SW	26.6	14.5	-12.1
Original-wall trial / STUD-NE	30.7	14.5	-16.2
Trial with added backing plate / STUD-SW	26.6	18.7	-7.9
Trial with added backing plate / STUD-NE	30.7	18.7	-12.0

Negative gap means interference. The assumed nut envelopes clear the cover, but real nut seats, formed metal, rear cavity and compressed foam remain unmeasured. A thicker backing plate also changes hub/adapter engagement and the cover landing.


Kohler 1041504-2-F, page 7: the inner plate lies flat at the wall; the studs project at most 7/16 inch from the finished wall; the foam covers the opening; nuts stay behind the outer cover; its drain faces down. Page 8 requires appropriate adapters for engagement and seating. Current guide 1216755-2-A, steps 8-12, shows the same assembly order. Check the actual revision.

Four separate questions remain: conceal all cuts; provide continuous supported foam landing; resolve surface-water seals and drainage; inspect concealed waterproofing through existing access. The current trial aperture conflicts with the assumed gasket path. Coverage alone is not a waterproof repair.

Measured loose-part envelope: 15.44 mm from uncompressed foam back to frontmost metal, with approximately 6 mm free foam thickness and 6 mm representative band width. This free-state plate intersects the assumed cover; actual compression and local cavity geometry must be checked before judging installed fit.

Control depth / diagnostic follow-up

The user confirms excessive stud projection and reports rear bolt contact with wood. Trim studs thread into the valve; they do not need wood anchorage. Identify the same rear fasteners, framing/blocking and usable travel before selecting a remedy.

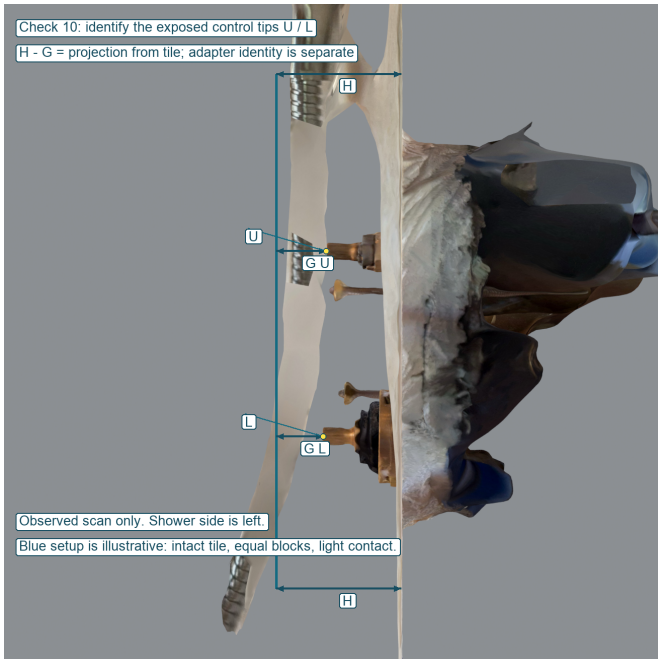

K-2973-KS specification p3: the labeled upper bare-tip and finished-wall dimensions imply a nominal upper-tip interval -6.3 to 27.0 mm from tile. Current comparison: 32.0 mm (conditional scan tip; identity and physical scale unverified). This is outside nominal interval if same bare tip. It is not a valve-relocation target.

Check 10 identifies the as-found tips/adapters and records block height H and both underside-to-tip gaps. H - G gives signed projection. The installer separately checks the plaster guard or documented axis datum. The 7/16-inch trim-stud limit does not apply to control stems.

Correct adapter and screw lengths must permit handle engagement and full cover/bonnet seating. An added backing plate changes that relationship again. Internal valve seals contain supply water; improper trim seating concerns external shower-water entry. Test these separately after the complete assembly is resolved.

Sources: K-2973-KS specification p3; Kohler 1205551-2-D pp10-13 and25; 1041504-2-F pp3,7-8. No stud cutting, wood drilling, control-stem modification or valve relocation is selected.