01 / Record the current installation

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL



Responsible: Homeowner + installer

Prerequisite: Existing access is safe; no pressure parts disturbed. User reported no changes since capture on 2026-10-14.

Tools / materials: Camera, ruler, labels; measurement worksheet.

Action

Take the requested dimensional readings and label the matching locations. Report any future plumbing, stud or wall change before using the model for fit.

Completion check


Readings reference the worksheet revision; any newly changed areas are identified.

Stop condition

If a valve moves or repairs hide a cut, the old scan cannot certify current fit.

02 / Check plumbing and factory adjustment

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

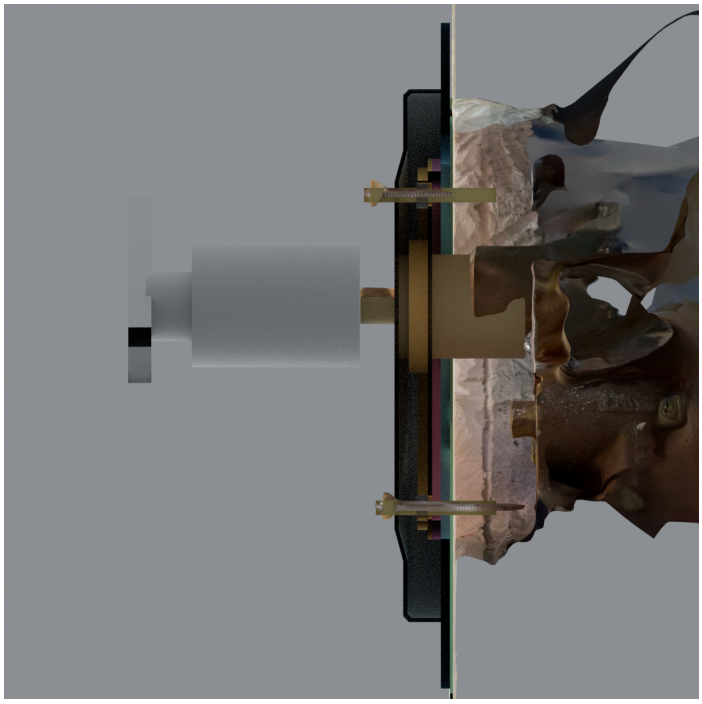

Responsible: Qualified plumber

Prerequisite: Exact Kohler models recorded; applicable revision checked.

Tools / materials: Applicable Kohler guides, straightedge, depth gauge and correct hand tools.

Action

Inspect stud/adapter adjustment and engagement and test any plumbing changes before establishing final hardware position.

Completion check


Both actual stud projections, usable engagement and adapter selection recorded; supply/valve leakage checked separately.

Stop condition

Do not shorten studs, force trim, or loosen pressure-containing parts for a homeowner measurement. No valve relocation target is approved.

03 / Resolve the support and water barrier

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

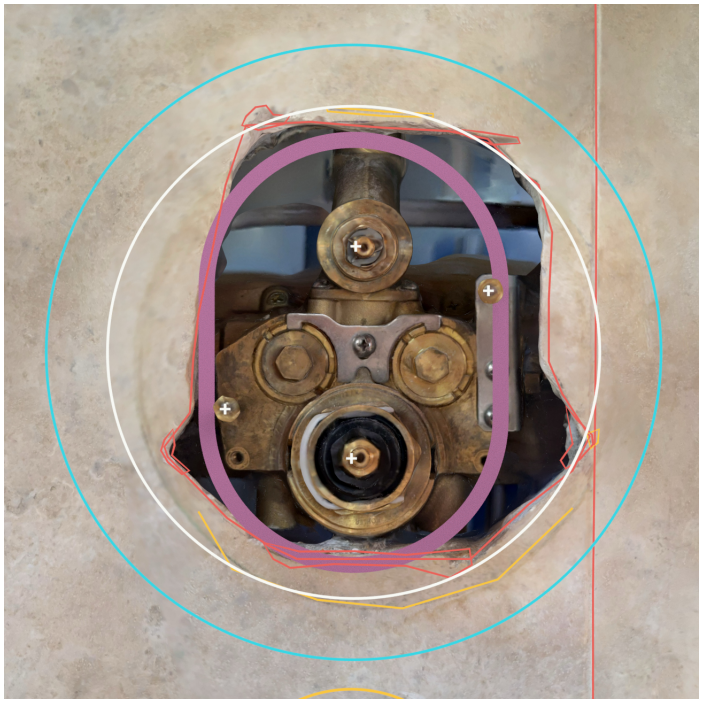

Responsible: Qualified tile/waterproofing installer

Prerequisite: Safe access through the existing opening; stone protected.

Tools / materials: Light, inspection mirror, straightedge; approved inspection method.

Action

Identify sound substrate, possible backing access and the existing waterproofing system. Design supported local rebuilding or a retained plate detail from this evidence.

Completion check

Complete gasket landing, backing/load path and compatible water-barrier connection are documented.

Stop condition

No filler bridging the unsupported opening. Surface sealant or grout cannot establish an unseen membrane connection. No tile cutting is authorized.

04 / Dry fit the reviewed revision

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL



Responsible: Installer with homeowner review

Prerequisite: Measurements accepted; repair option and trial geometry revised.

Tools / materials: Calibrated 1:1 paper template, thickness-accurate trial part or spacers, straightedge, original hardware.

Action

Check the planar template first, then trial the actual layer thickness with the original inner plate, gasket, trim and handles.

Completion check

Worst cuts concealed with sound overlap; no rocking; continuous foam support; trim seats; threads engage; drain down; full travel and tool/removal access.

Stop condition

Paper proves no depth clearance. Prototype materials are not approved permanent wet-area materials. Record failures; do not force the fit.

05 / Install only the released material detail

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL



Responsible: Installer / fabricator as assigned

Prerequisite: Selected design, material data, physical fit and explicit fabrication approval complete.

Tools / materials: Approved drawing, inspected finished part and named materials from the released schedule.

Action

Protect service parts, prepare the verified substrates, place supported repairs and sealing layers in the approved order, and assemble the original Kohler components.

Completion check


Incoming dimensions, flatness, thickness, edges and finish accepted; sealing path continuous; service parts remain removable; drain unobstructed.

Stop condition

This draft has no selected mortar, backing, sealant, finish or cure schedule. Do not permanently install from it.

06 / Cure, test and preserve access

R001 - DRAFT SEQUENCE - NOT INSTALLATION APPROVAL

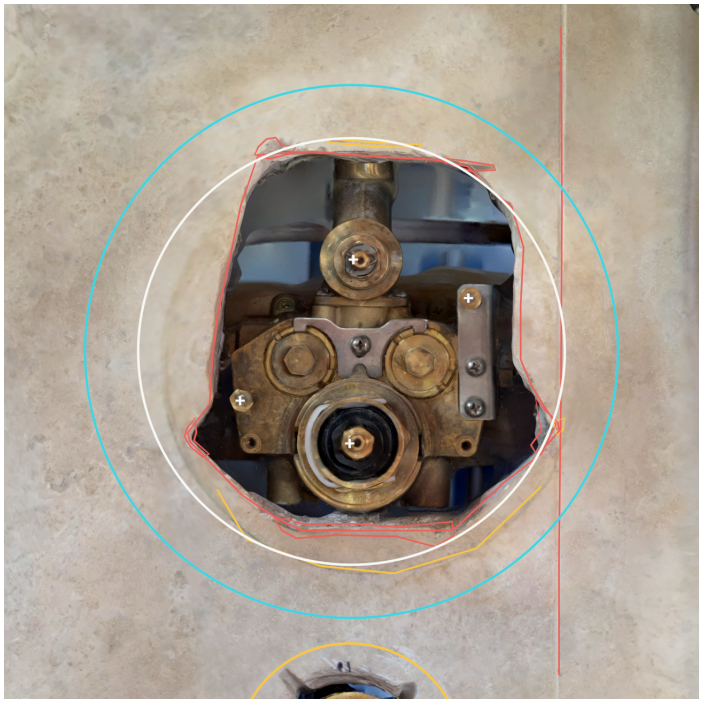

Responsible: Installer; homeowner observes results

Prerequisite: Selected product-specific cure and water-exposure requirements met.

Tools / materials: Approved test procedure, dry indicators and accessible inspection points.

Action

First check supply/valve behavior with surfaces kept dry; then test controlled water exposure around the assembled trim while observing available access.

Completion check

Record product cure conditions, test duration/conditions, observed locations and results. Retain a future removal procedure.

Stop condition

Stop if moisture appears. Investigate supply leakage separately from surface-water entry. A local pass does not certify the concealed shower system.