MAIN - full-size paper trial

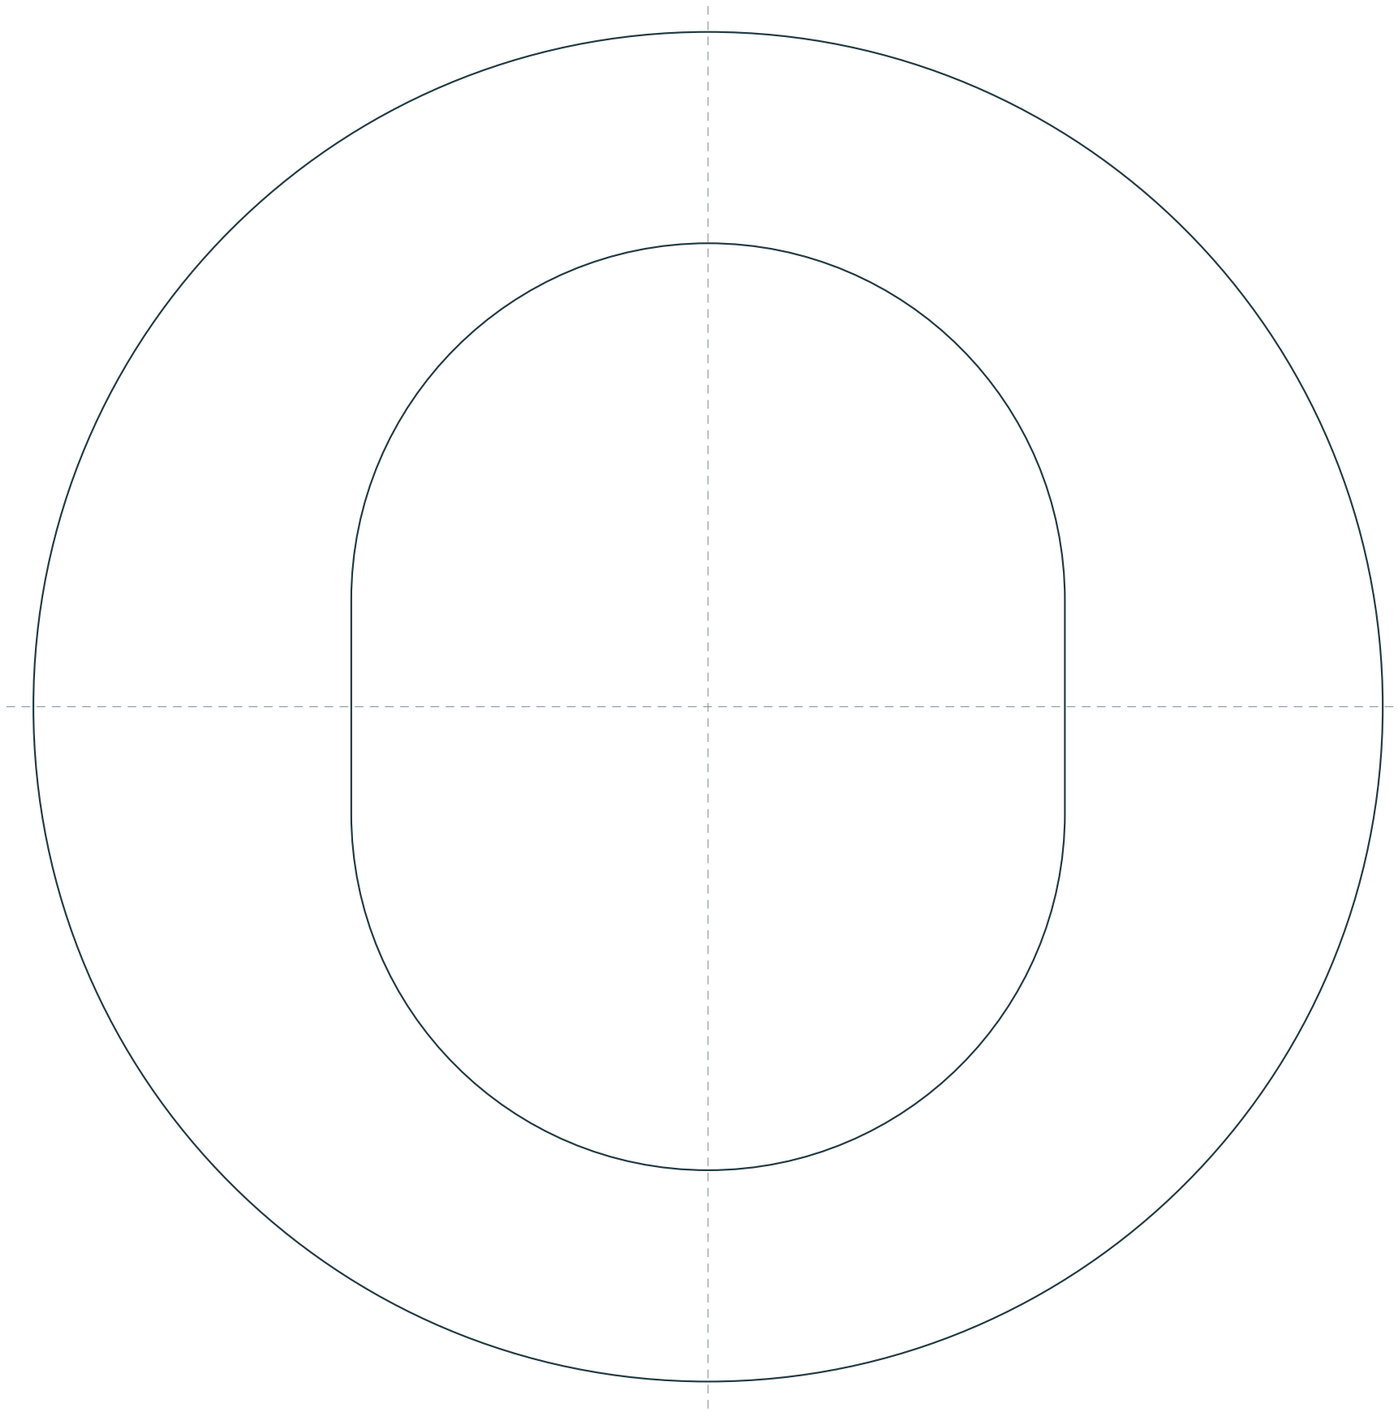

Print A3 landscape at 100% / actual size. Disable fit, shrink and printer scaling. Verify both 100 mm bars with a ruler before using this template.

Cut black contours only. The crosshairs are alignment marks, not cuts. Paper checks planar coverage; it cannot establish stiffness, added depth, gasket compression or water performance.

Place the real factory cover concentrically. Check equal visible border at top, bottom, left and right. Trace the actual rear gasket/contact footprint separately before accepting the aperture.

MAIN 220: border to measured 184.15 cover is 17.925 mm. DIV 124: border to nominal 98.425 cover is 12.7875 mm. Actual diverter cover size must be checked on site.

Use both templates together. The recommended pair has only about 3-5 mm predicted separation across earlier placement scenarios. Prefer 3 mm actual gap; use the 120 mm diverter fallback if needed.

100 mm horizontal check

DIV - full-size paper trial

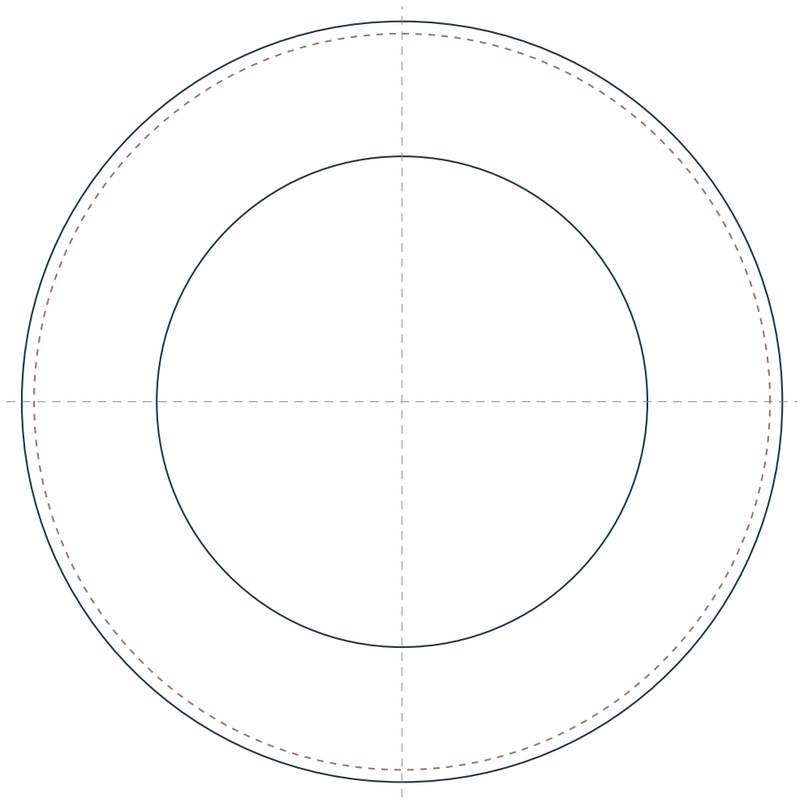

Dashed 120 mm circle = fallback reference only

Print A3 landscape at 100% / actual size. Disable fit, shrink and printer scaling. Verify both 100 mm bars with a ruler before using this template.

Cut black contours only. The crosshairs are alignment marks, not cuts. Paper checks planar coverage; it cannot establish stiffness, added depth, gasket compression or water performance.

Place the real factory cover concentrically. Check equal visible border at top, bottom, left and right. Trace the actual rear gasket/contact footprint separately before accepting the aperture.

MAIN 220: border to measured 184.15 cover is 17.925 mm. DIV 124: border to nominal 98.425 cover is 12.7875 mm. Actual diverter cover size must be checked on site.

Use both templates together. The recommended pair has only about 3-5 mm predicted separation across earlier placement scenarios. Prefer 3 mm actual gap; use the 120 mm diverter fallback if needed.

100 mm horizontal check