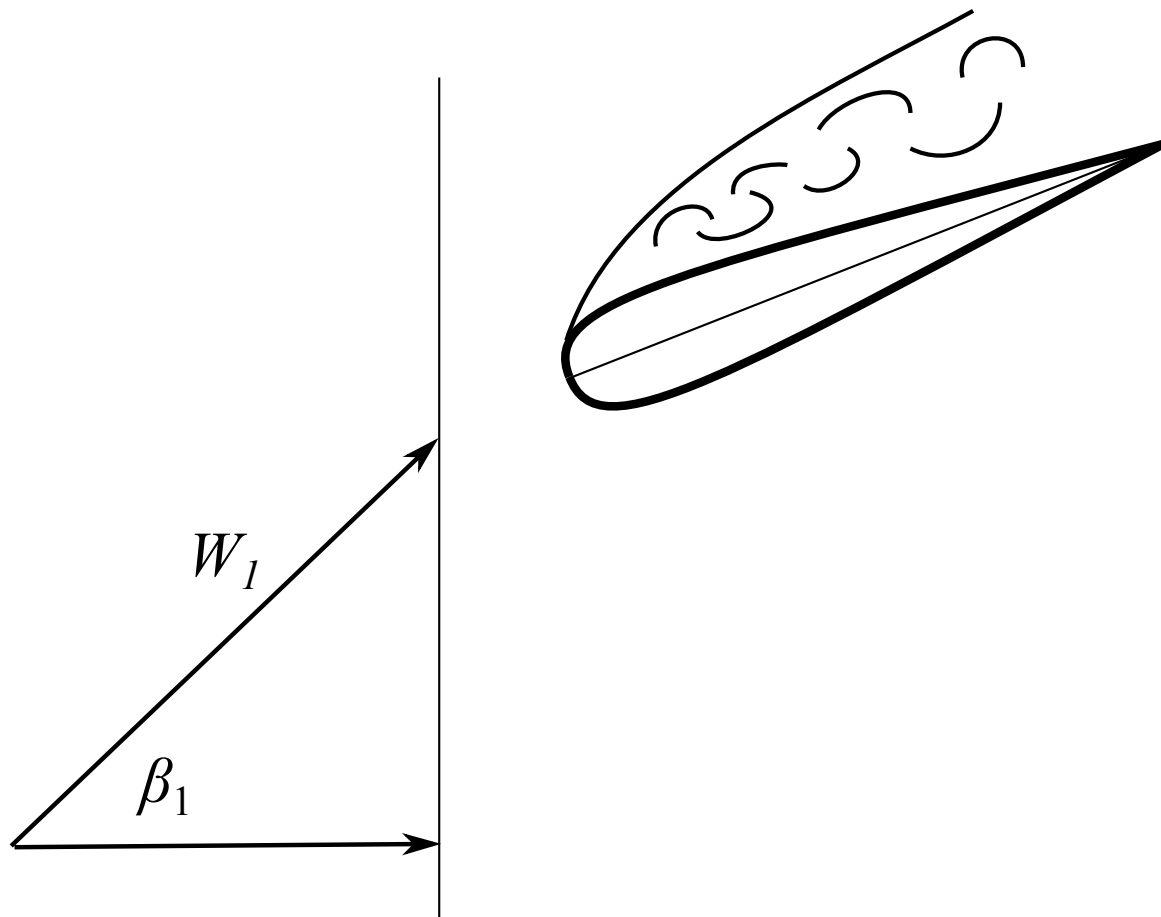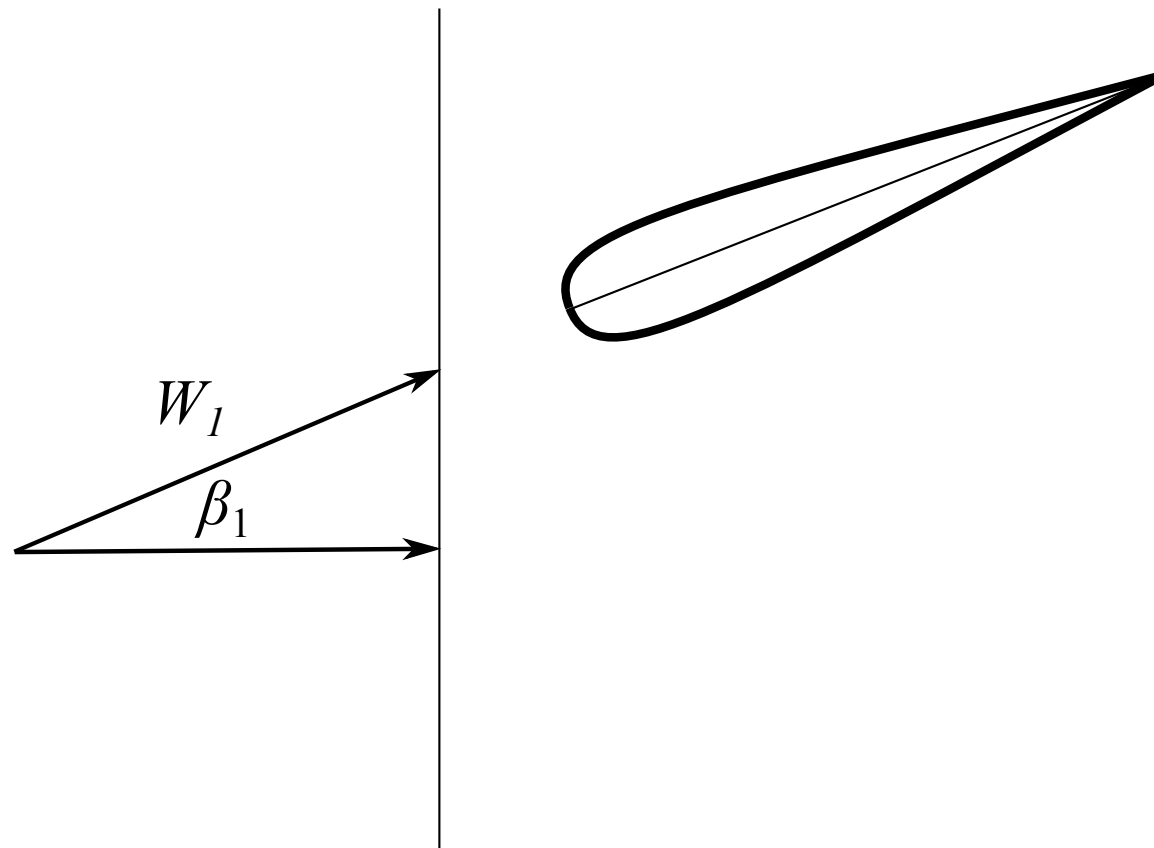Positive incident flow separation

No flow separation (design point)

Negative incident flow separation