
POWER: +−15 V in, reverse protection, rails





INPUT: jack, INPUT pot (panel), U2B buffer, U1A DRIVE stage, U1B + U3B followers, share resistors −> D (TP4)





ALL−PASS LEG: Q resistors −> SW2 −> P; tuning caps −> SW1b −> X; SW1a −> coil taps; R51 sense

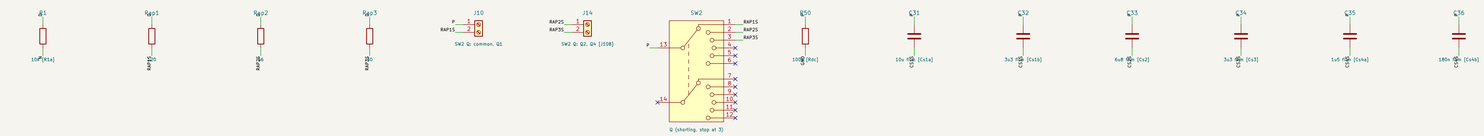

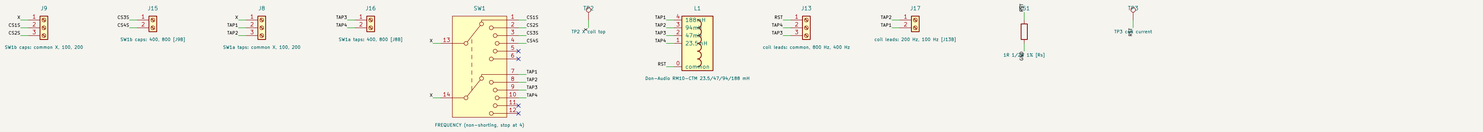

QUAD−EIGHT AMPLIFIER Q1−Q5: OUT = 2P − D; output network −> OUTJ (TP1)

OUTPUT: SW3 bypass, OUTPUT pot (panel), U3A buffer, U2A make−up (DRIVE gang b), OUT jack



BIAS (Iron) current source Q6 −> SW4 −> X; test points





ProtoBuild1 − Rev K iron block (NOTES 98). Renamed for KiCad: R1 = R1a, R50 = Rdc, R51 = Rs, C31/C32 = Cs1a/b, C33 = Cs2, C34 = Cs3, C35/C36 = Cs4a/b, J14−J18 = the second halves of J10, J9, J8, J13, J7. Net−label schematic generated by gen_sch.py from circuit.py on 7 Nov 2026; every pin carries its net name. Panel parts (pots, switches) are drawn but excluded from the board; they connect through the screw−terminal blocks J4−J13.

Quad Eight project
Sheets: /
File: ProtoBuild1.kicad_sch
Title: ProtoBuild1 iron block, Rev K
Size: A1 | Date: 2026−11−07 | Rev: K
KiCad E.D.A. 10.0.8 | Id: 1/1