LOCAL TRAFFIC REGULATIONS
1. GA PRKG on grassed areas ADJ to eastern sealed APN is preferred.
2. ACFT on RWY may not be visible to each other. Make radio call before rolling.
3. Grass RWY strip available for TKOF and landing, East RWY 18 and North RWY 04 preferred.

CTAF - AFRU 132.05

ADDITIONAL INFORMATION
Intensive parachute OPS GND to FL150. If unfamiliar CTC jump pilot via CTAF.

CHARTS RELATED TO THE AERODROME
1. WAC 3456, 3470.
2. Also refer to AIP Departure and Approach Procedures.

MOUNT BEAUTY

ELEV 1100

FULL NOTAM SERVICE NOT AVBL

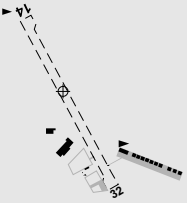

VIC		UTC +10	YMBT
364343S	1471001E	VAR 12 DEG E	UNCR

AD OPR Mt Beauty Airport Management Association Inc, PO Box 72, Mt Beauty, VIC, 3699. Email: mail@ymbt.org.au. PH 0417 565 514 or 0412 990 622. Website: www.ymbt.org.au.

HANDLING SERVICES AND FACILITIES
Fuel supplied by IOR Aviation, AVGAS and JET A1 AVBL H24 self-serve. PH 1300 457 467.Payment via IOR Aviation tag for account holders or via the Fuelcharge APP.

PASSENGER FACILITIES
WC.

APRONS AND TAXIWAYS
Main APN: Unrated asphalt.

AERODROME OBSTACLES
Power lines and sensitive area 1NM SW of airstrip.

PHYSICAL CHARACTERISTICS

14/32	49a	Unrated. Asphalt. RWY 32 DTHR 310M. Turn pads each end 23M WID. RWS begins ADJ to RWY end. RWY LEN 1,500M.	WID 18	RWS 60

ATS AND AERODROME COMMUNICATION FACILITIES

FIA	MELBOURNE CENTRE	125.2 Circuit Area

LOCAL TRAFFIC REGULATIONS
1. TKOF RWY 14 not recommended due steep terrain, RWY upslope and possible down drafts.
2. Model ACFT may operate when no TFC on AD or circuit. Avoid TAX over model ACFT strip on RWS in front of terminal building.
3. PRKG AVBL on grass N or S of terminal building, cable tie-downs. No PRKG on hangar APN.
4. Overflying the AD should be avoided due to glider cable launching.

FLIGHT PROCEDURES
1. Right hand CCT when OPR RWY 32.
2. Preferred landing direction RWY 14.

CTAF 126.0

ADDITIONAL INFORMATION

1. Additional INFO AVBL FM website: Fly Neighbourly Policy, Weather, RWY camera.
2. High ground 1NM SE of airstrip.
3. Gliding OPS HJ DLY at AD. Cable launching to 3,500FT AMSL. Winch located 120M NW of RWY14 THR. Winch flashing beacon indicates launch in progress. Gliding OPS phone: 0417 565 514 or 0409 277 328.
4. Hang gliders and paragliders operate around and on AD.
5. RWS and grass areas can be soft after rain.
6. Animal hazards (kangaroos and birds) exist.

CHARTS RELATED TO THE AERODROME

WAC 3470.

MOUNT BUNDEY

ELEV 150

FULL NOTAM SERVICE NOT AVBL

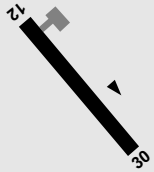

NT		UTC +9:30	YMDY
125324S	1315426E	VAR 2 DEG E	UNCR

AD OPR Range Control Headquarters, CSIC - NT/K, Robertson Barracks, Palmerston, NT, 0830. PH Mount Bundey Range Control 0427 166 790.

REMARKS

1. PPR from Range control.
2. Caution: This aerodrome is not subject to routine serviceability inspection or NOTAM advice of unserviceabilities. Additional aerodrome data is available from the contact telephone numbers above.
3. CIV ACFT (excluding EMERG ACFT) shall not plan to use YMDY.
4. EMERG ACFT are to contact Mt Bundey Range control for both planned and short notice/ EMERG use.
5. Aircraft required to be in possession of Mount Bundey Special map to allow clearance onto the range. Clearances will be issued with respect to military grid reference system eastings and northings or with respect to named sectors/roads.

HANDLING SERVICES AND FACILITIES

No Fuel AVBL.

PASSENGER FACILITIES

Composting toilet and rain water tanks between parking apron and runway.

APRONS AND TAXIWAYS

TWY 95M x 15M, Parking area 50M x 115M.

ATS AND AERODROME COMMUNICATION FACILITIES

FIA	BRISBANE CENTRE	124.1

LOCAL TRAFFIC REGULATIONS

1. Contact Mt Bundey Range Control prior to DEP to CFM FREQ RQMNTS. Range Safety radios only manned when restricted areas are active.
2. C130 to conduct MAX RAD turns at turning areas.
3. Parking area NE of THR RWY 12.
4. Helicopter forward arming and refuelling point may be located on TWY, within parking APN or on RWY.
5. HEL pad suitable for UH/LOH day or night operations at GR067764. Surface bitumen. Lit water tower near HEL pad.

Information may be continued on the next page: PTO