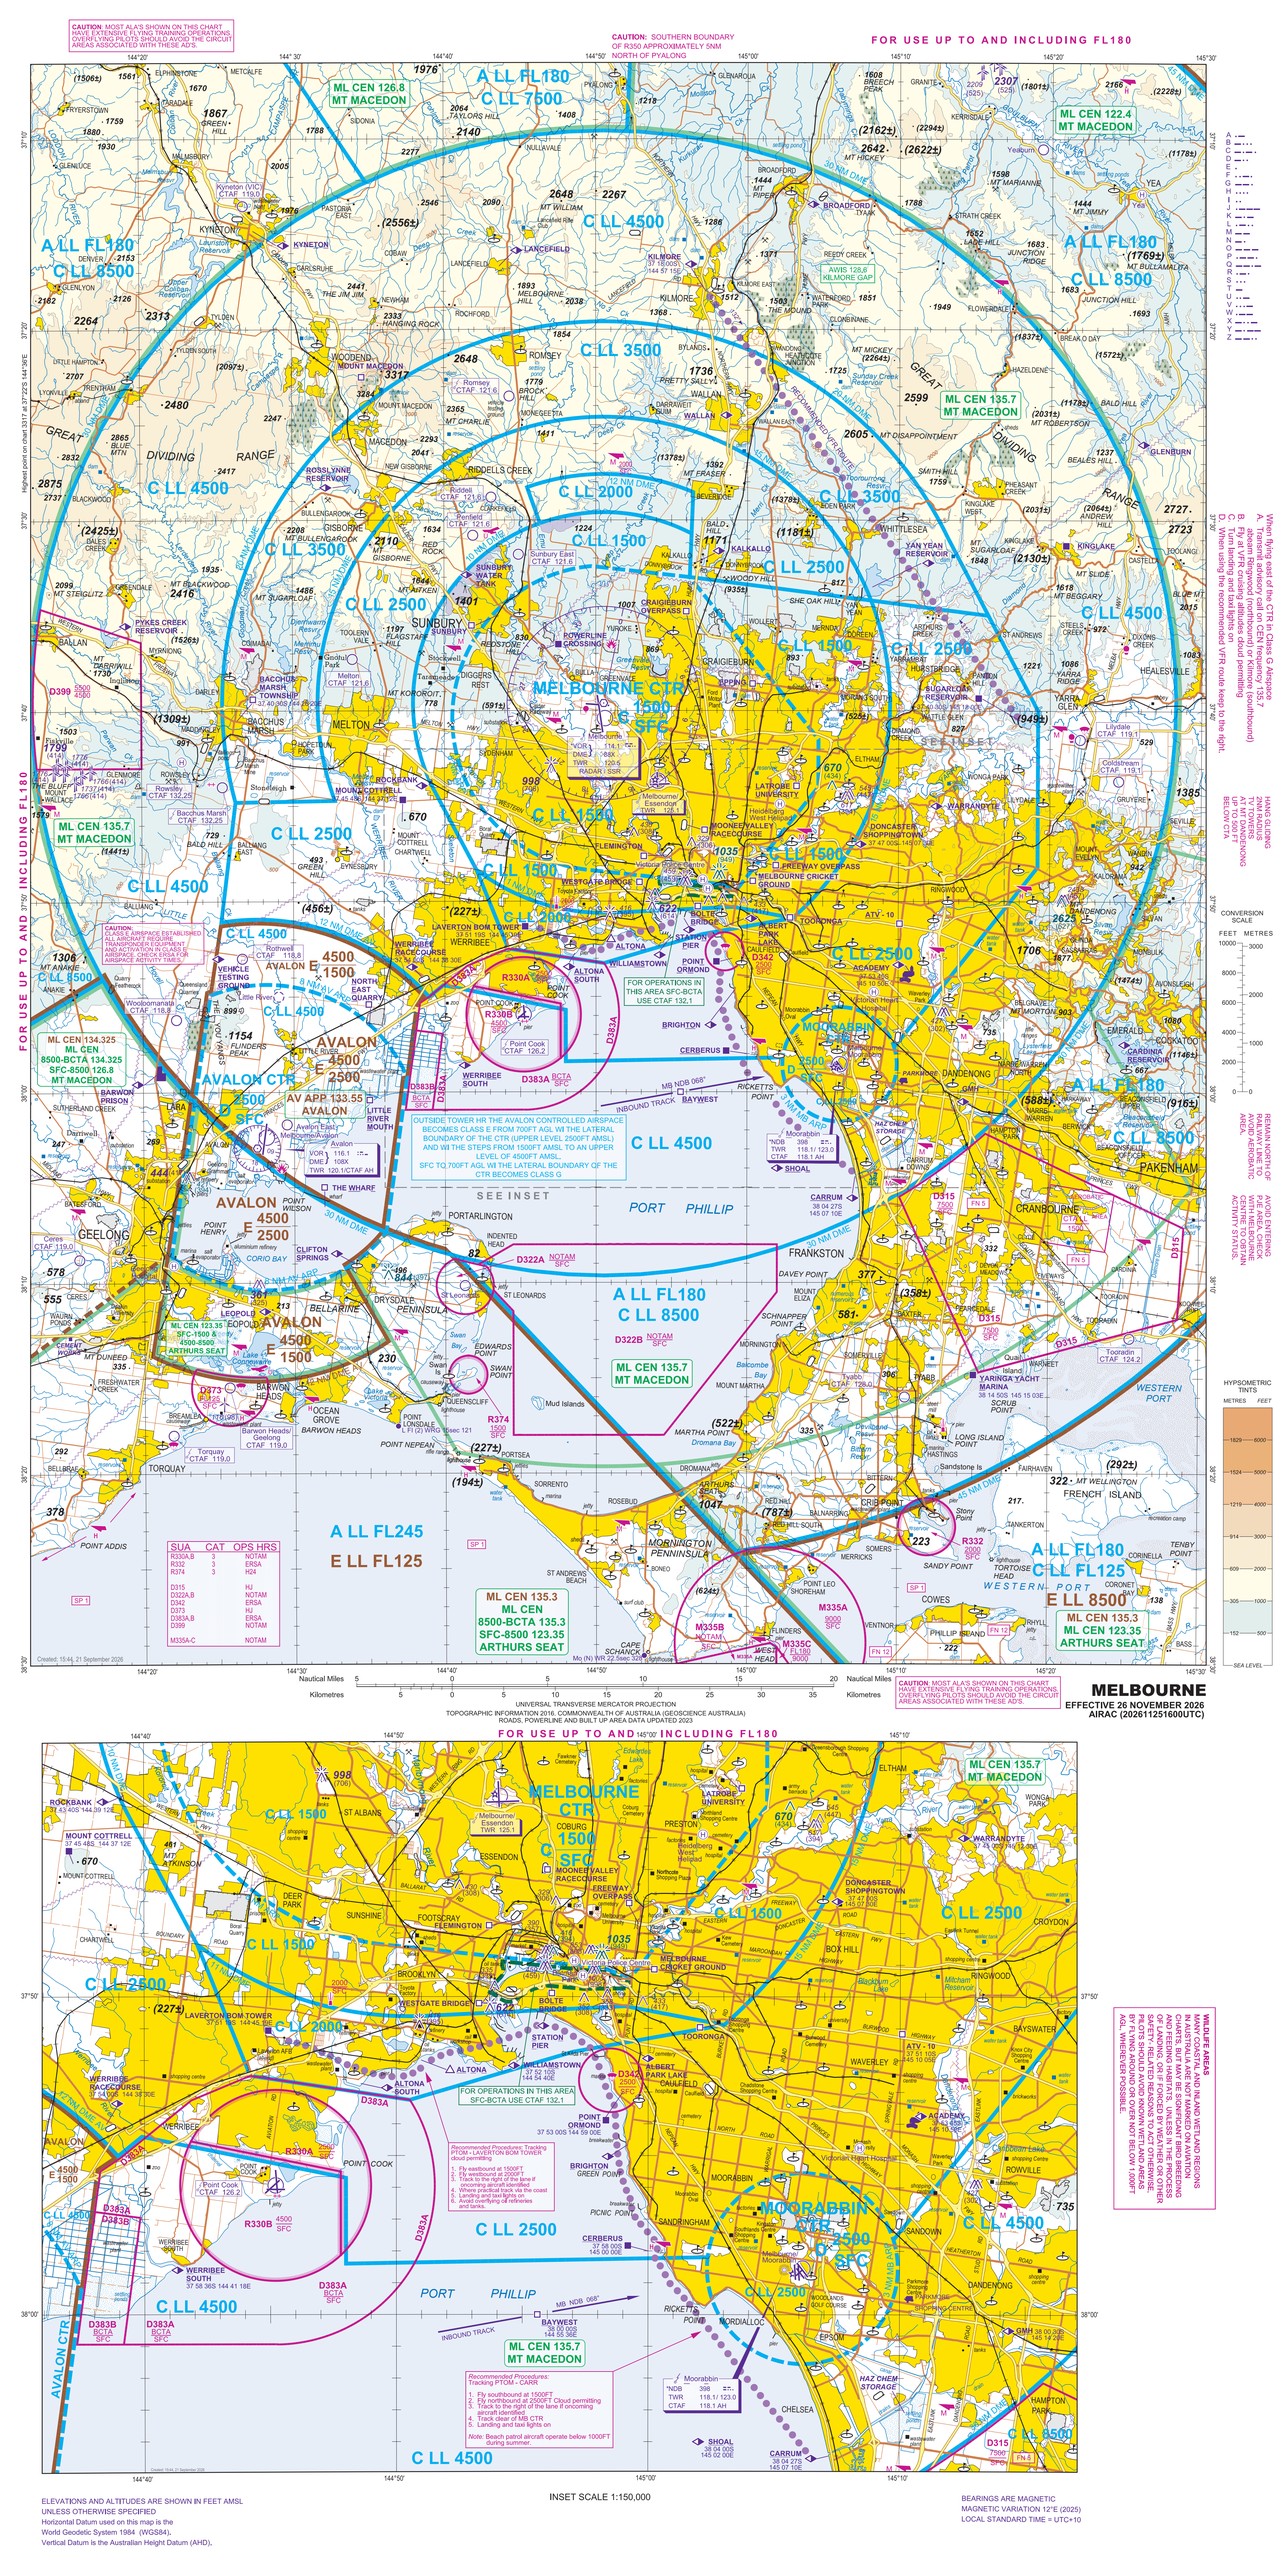
CAUTION: MOST ALA'S SHOWN ON THIS CHART HAVE EXTENSIVE FLYING TRAINING OPERATIONS. OVERFLYING PILOTS SHOULD AVOID THE CIRCUIT AREAS ASSOCIATED WITH THESE AD'S.
CAUTION: SOUTHERN BOUNDARY OF R350 APPROXIMATELY 5NM NORTH OF PYALONG
FOR USE UP TO AND INCLUDING FL180
ML CEN 126.8 MT MACEDON
A LL FL180 C LL 7500
C LL 4500
A LL FL180 C LL 8500
C LL 3500
C LL 2000
C LL 1500
C LL 2500
C LL 4500
ML CEN 122.4 MT MACEDON
ML CEN 135.7 MT MACEDON
MELBOURNE CTR 1500 SFC
C LL 1500
C LL 2500
C LL 4500
C LL 2500
C LL 4500
ML CEN 135.7 MT MACEDON
C LL 4500
C LL 1500
C LL 2000
C LL 1500
C LL 2500
C LL 4500
C LL 4500
C LL 2500
C LL 4500
ML CEN 134.325 SFC-8500 126.8 MT MACEDON
AVALON CTR 2500 SFC
AV APP 133.55 AVALON
AVALON 4500 E 2500
AVALON 4500 E 1500
AVALON 4500 E 1500
ML CEN 123.35 SFC-1500 & 8500-8500 ARTHURS SEAT
A LL FL180 C LL 8500
D322B NOTAM SFC
ML CEN 135.7 MT MACEDON
A LL FL245 E LL FL125
ML CEN 135.3 ML CEN 8500-BCTA 135.3 SFC-8500 123.35 ARTHURS SEAT
A LL FL180 C LL FL125 E LL 8500
ML CEN 135.3 ML CEN 123.35 ARTHURS SEAT
SUA CAT OPS HRS
R330A,B 3 NOTAM
R332 3 ERSA
R374 3 H24
D315 HJ
D322A,B NOTAM
D342 ERSA
D373 HJ
D383A,B ERSA
D399 NOTAM
M335A-C NOTAM
CAUTION: MOST ALA'S SHOWN ON THIS CHART HAVE EXTENSIVE FLYING TRAINING OPERATIONS. OVERFLYING PILOTS SHOULD AVOID THE CIRCUIT AREAS ASSOCIATED WITH THESE AD'S.
MELBOURNE
EFFECTIVE 26 NOVEMBER 2026
AIRAC (202611251600UTC)
UNIVERSAL TRANSVERSE MERCATOR PROJECTION
TOPOGRAPHIC INFORMATION 2016, COMMONWEALTH OF AUSTRALIA (GEOSCIENCE AUSTRALIA)
ROAD, POWERLINE AND BUILT UP AREA DATA UPDATED 2023
FOR USE UP TO AND INCLUDING FL180
MELBOURNE CTR 1500 SFC
ML CEN 135.7 MT MACEDON
Recommended Procedures: Tracking PTOM - LAVERTON BOM TOWER
1. Fly eastbound at 1500FT
2. Fly westbound at 2000FT Cloud permitting
3. Track to the right of the lane if oncoming aircraft identified
4. Track clear of MB CTR & the coast
5. Landing and taxi lights on
6. Avoid overflying oil refineries and tanks.
Recommended Procedures: Tracking PTOM - CARR
1. Fly southbound at 1500FT
2. Fly northbound at 2500FT Cloud permitting
3. Track to the right of the lane if oncoming aircraft identified
4. Track clear of MB CTR
5. Landing and taxi lights on
Note: Beach patrol aircraft operate below 1000FT during summer.
WILDLIFE AREAS
MANY COASTAL AND INLAND WETLAND REGIONS ARE PROTECTED AS WILDLIFE AREAS. MANY COASTAL AND INLAND WETLAND REGIONS ARE NOT SHOWN ON AERONAUTICAL CHARTS, BUT MAY BE SIGNIFICANT BIRD BREEDING AND FEEDING HABITATS. UNLESS IN THE PROCESS OF LANDING OR TAKING OFF, PILOTS SHOULD AVOID FLYING AT LESS THAN 1000FT AGL FOR SAFETY- RELATED REASONS TO ACT OTHERWISE WHERE PRACTICABLE. PILOTS SHOULD AVOID KNOWN WETLAND AREAS AGL WHERE/WHEN POSSIBLE. PILOTS SHOULD ALSO AVOID KNOWN WETLAND AREAS AGL WHERE/WHEN POSSIBLE. PILOTS SHOULD NOT BELOW 1,000FT
INSET SCALE 1:150,000
ELEVATIONS AND ALTITUDES ARE SHOWN IN FEET AMSL
UNLESS OTHERWISE SPECIFIED
Horizontal Datum used on this map is the World Geodetic System 1984 (WGS84).
Vertical Datum is the Australian Height Datum (AHD).
BEARINGS ARE MAGNETIC
MAGNETIC VARIATION 12°E (2025)
LOCAL STANDARD TIME = UTC+10