www.GardenMark.com

Augusta Putting Green Installation Guidelines



Preparing the Base

- Prepare the area by removing natural grass or sod. Depending on the size of the existing lawn, a sod cutter is a great tool for this task. Remove all debris and cap off sprinkler heads, if present.

- Level and smooth out the area. You may want to compact the area as well.

- Add 3–4" of ¾" crushed stone (#57). Top off with 1–2" of stone dust or concrete sand. (A non-woven fabric may be installed between the 3/4" stone base and the concrete sand/stone dust layer to prevent migration of the upper layer.)

- It is important to note that any undulation on the surface will be visible once the turf has been installed. It is also important to note that while the stone base will aid in the drainage properties of the system, a slight slope is recommended to ensure proper drainage.

- Smooth out the aggregate using a screen or rake.

- Compact the base using a compactor or cement roller. Spray water on the aggregate and compact again.


GardenMark®
Artificial Grass

www.GardenMark.com





Installing GardenMark Turf

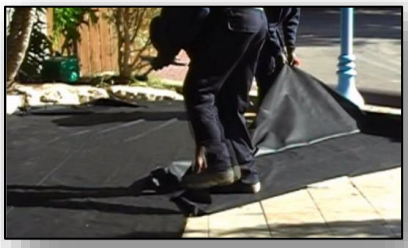

- Before rolling out **GardenMark** turf, we strongly recommend covering the entire compacted base with **WeedMark** or another weed fabric barrier. This will help to prevent weeds from growing.
- Lay the **Augusta** turf out in direct sunlight prior to installation to allow the fibers to relax and become more flexible.

Putting Cup Placement

- Determine the placement of putting cups and install them during the base preparation phase.

Laying the **Augusta**

- Carefully lay the **Augusta** turf over the prepared base.
- Pull the turf tightly to remove wrinkles or folds. A carpet kicker may be used to properly stretch the turf.

Fastening Guidelines

- **Do not nail directly into the Augusta turf**, as this can create surface dimpling, which may adversely affect ball roll performance and consistency.

www.GardenMark.com

Installing the Fringe

Option A — Nail-Down Method

- Lay the fringe over the **Augusta** turf with a 2" overlap, shaping as needed using a carpet cutter.
- Nail through the fringe and **Augusta** into the base around the inside perimeter, spacing nails every 6" (approximately 1" in from the edge)
- Nail the outside perimeter of the fringe every 6", also 1" in from the edge.

Option B — Seam Method (**BondMark** & **TapeMark**)

- Shape the **Augusta** putting green to the desired final layout.
- Cut and shape the fringe to match the perimeter of the putting green.
- Seam the **Augusta** and fringe together using **TapeMark** seaming tape and **BondMark** adhesive, following manufacturer instructions.
- Be careful not to use too much **BondMark** when seaming, and allow it to cure under dry conditions for 24 hours.
- Nail the perimeter of the putting green every 6" to secure it to the base.
- Ensure seams are tight, properly aligned, and fully bonded before proceeding.

Final Touches

- **Fluff and stand up the fringe fibers using a GardenMark** Sweeper**.**

Additional Notes

- Infill: **Optional, based on performance preference.**