Electric semi acoustic nylon Mandolline

Assembly instruction

Parts needed

• Printed:

Tunig peg X 8 peg X 8 jack hole cover hole cover

Neck part 1 Neck part 2 Neck part 3

Body part 1 Body part 2 Body part 3

Body part 4 Body part 5 Body part 6

• Non printed:

Strings nylon X 8 (2pack of classical guitar string does the trick)


Jack X 1 Piezo X 1 6mm aluminium rod


Step list


• Body: 10 steps


• Neck : 5 steps


• Full assembly : 3 steps

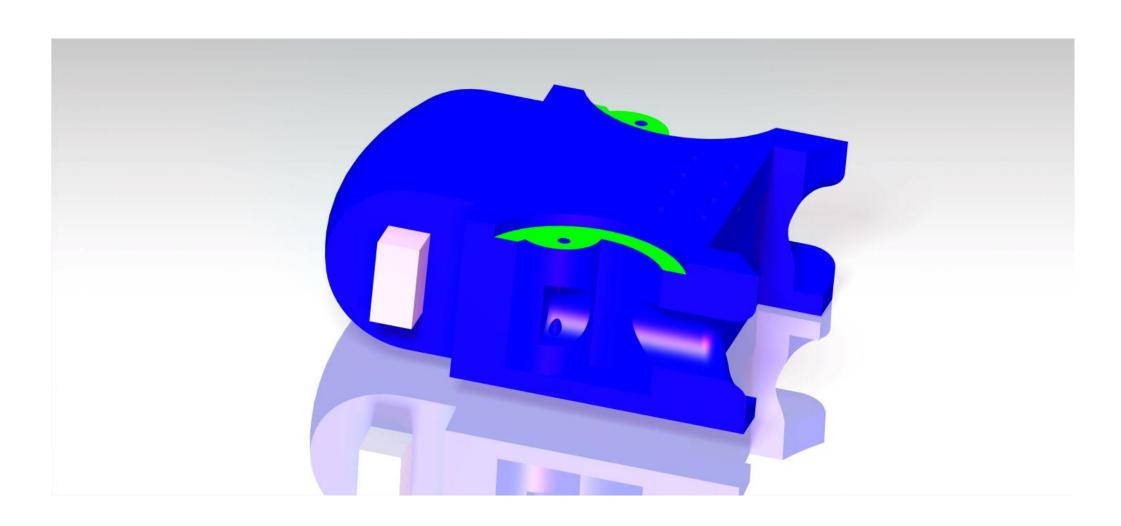


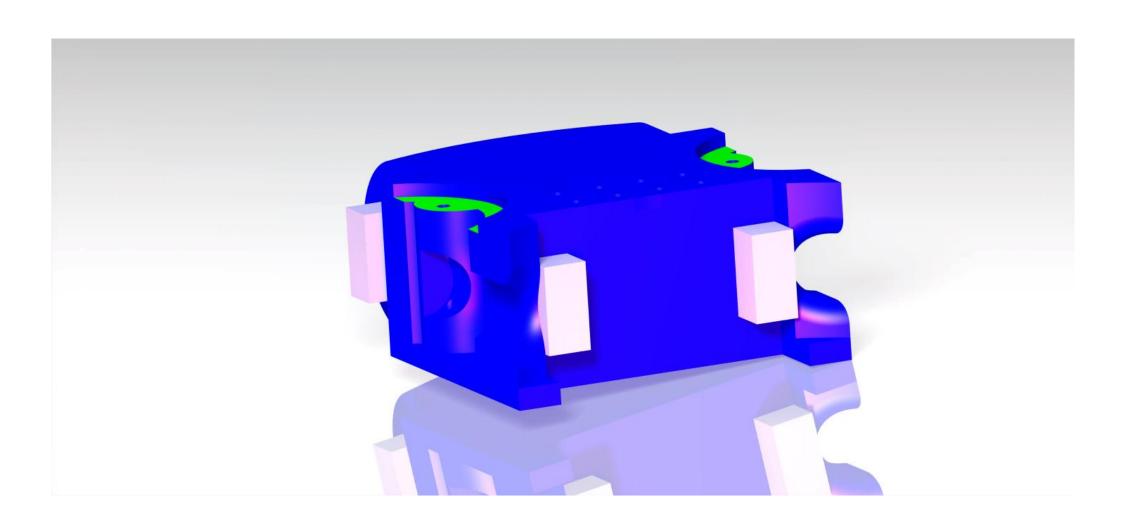


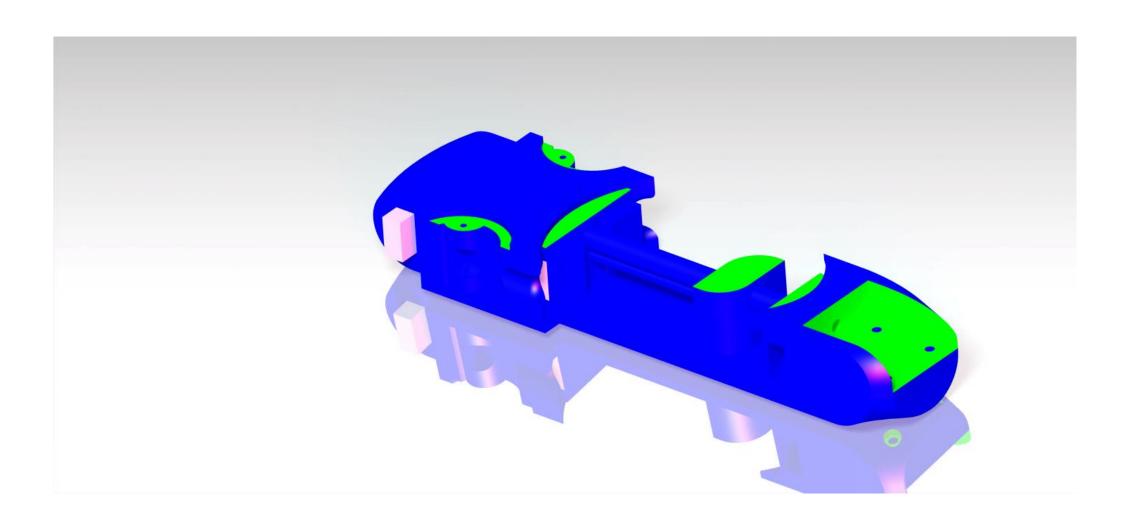


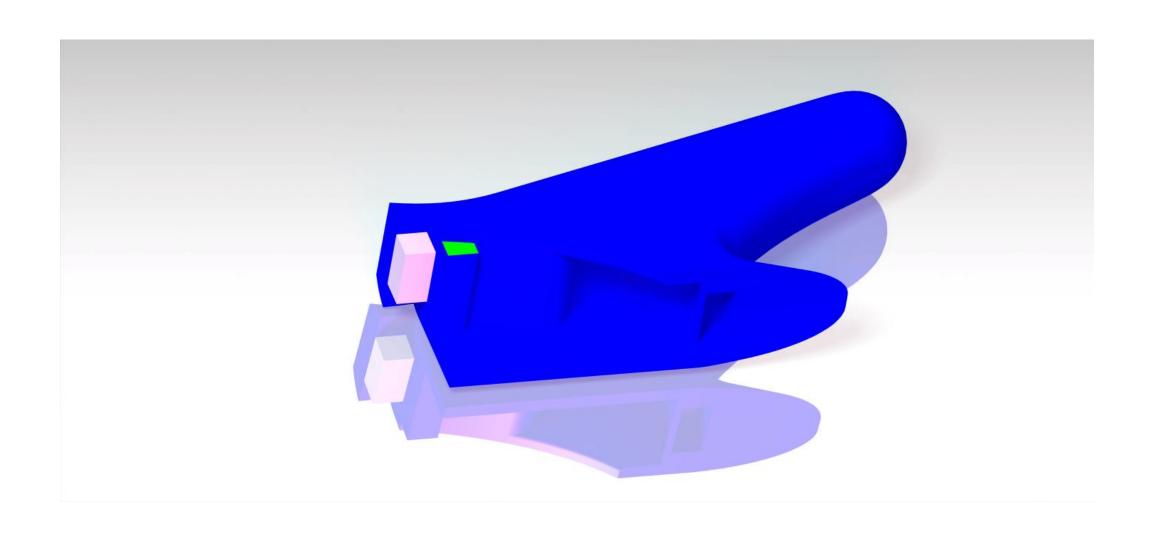


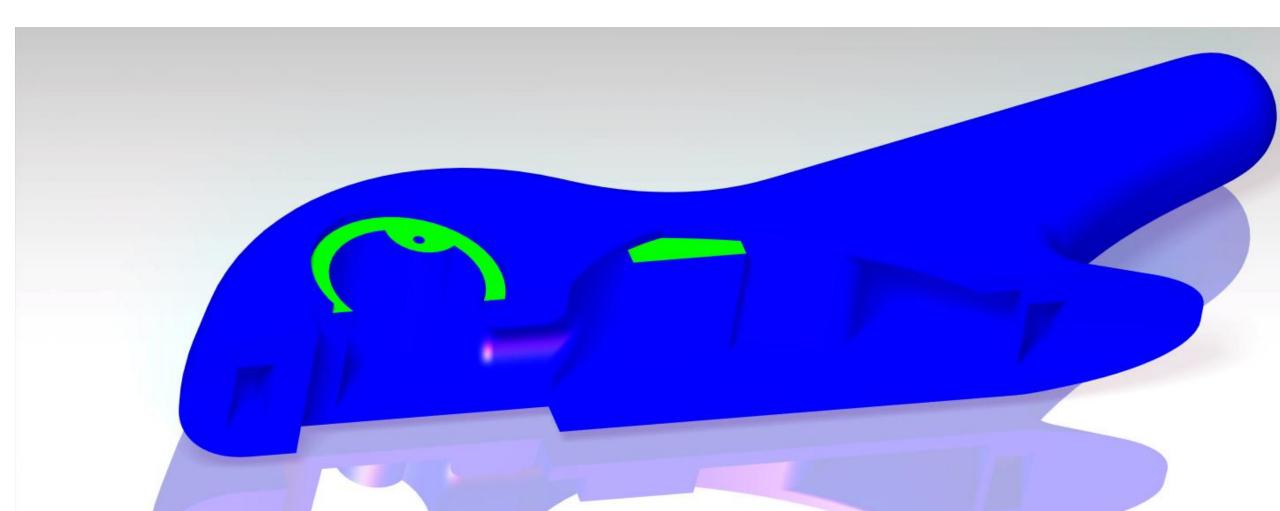


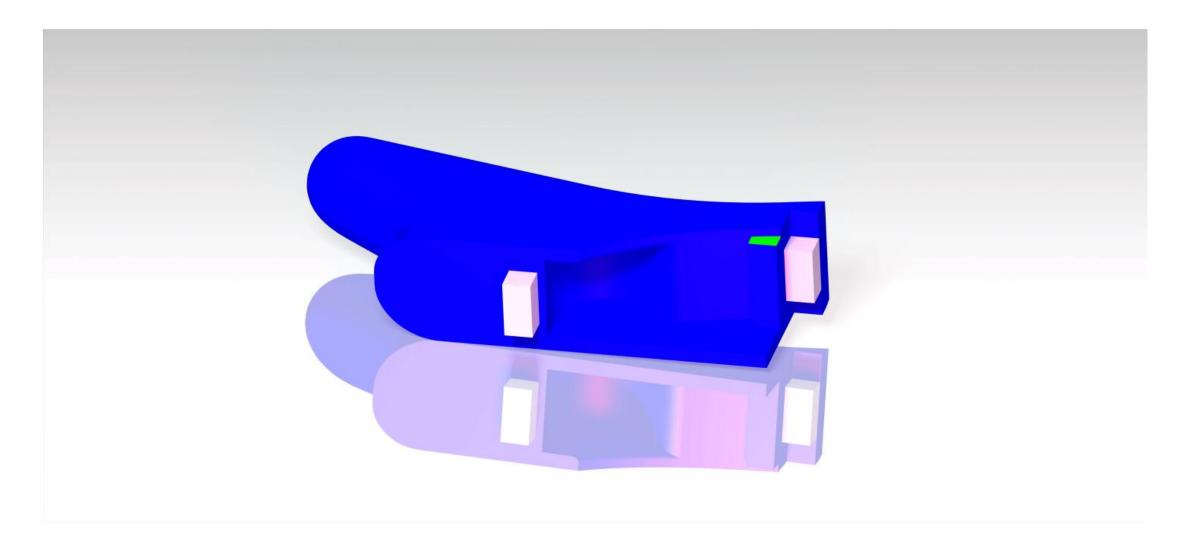

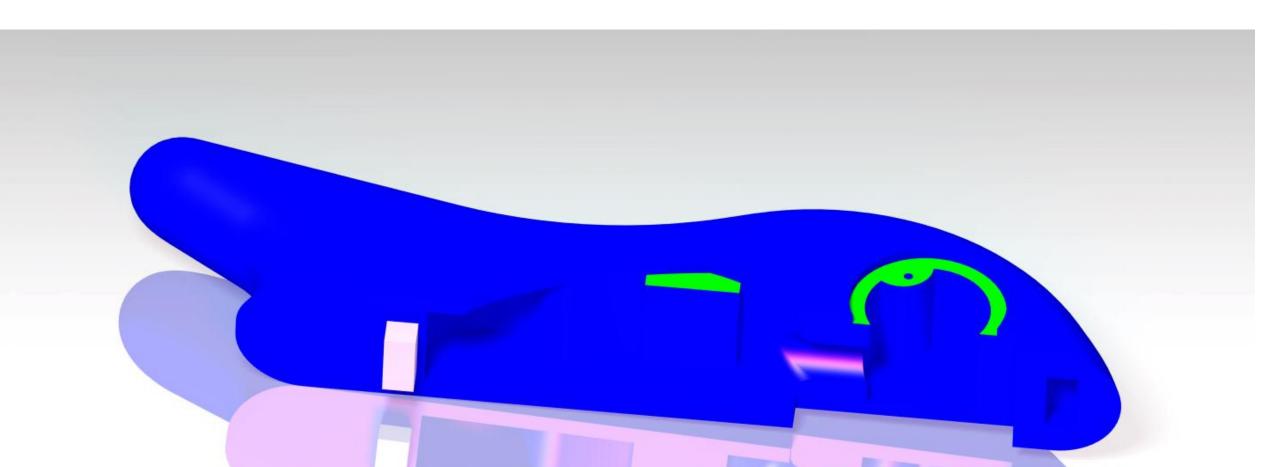


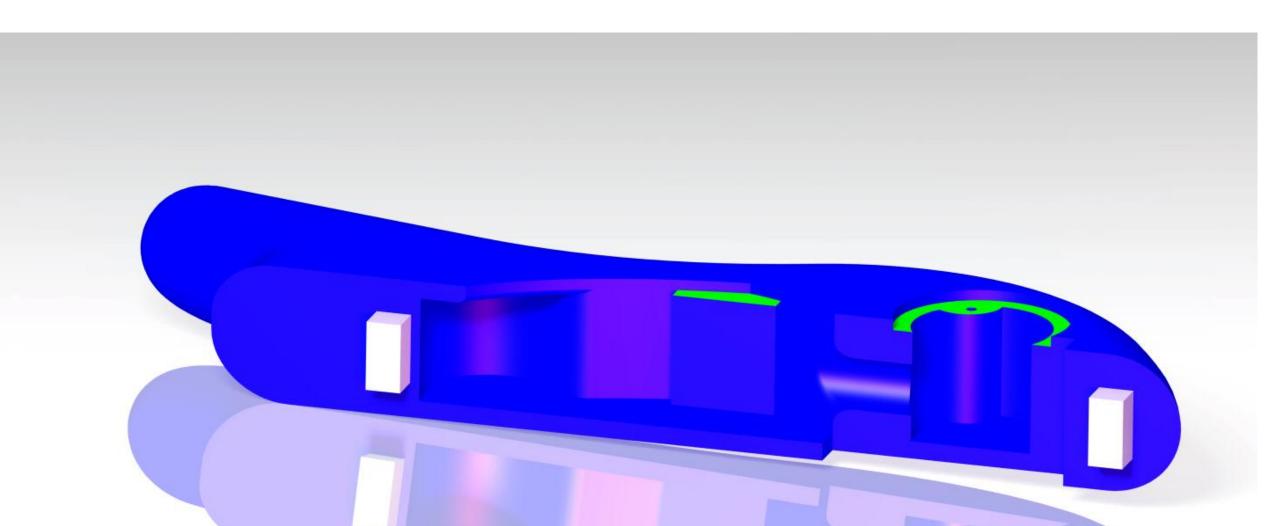


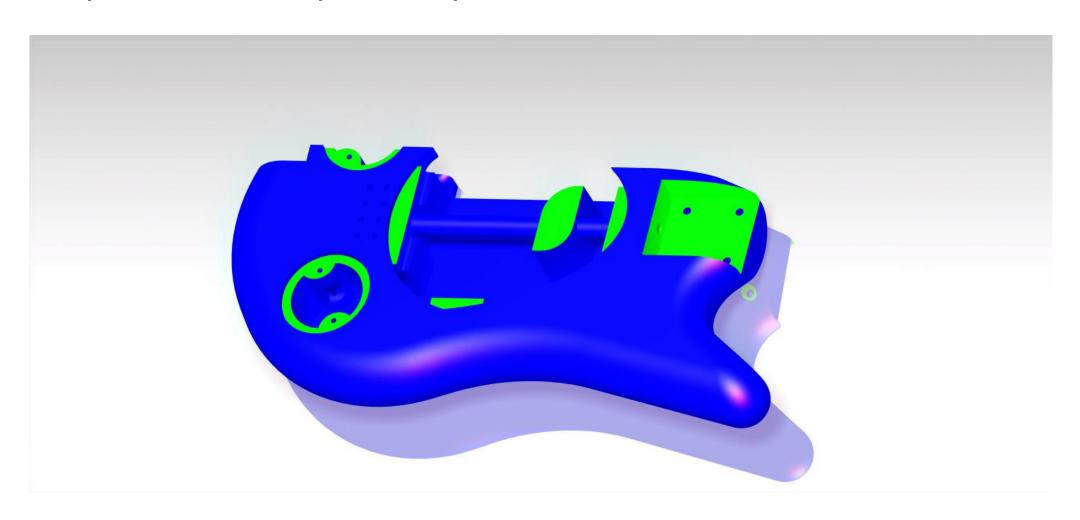


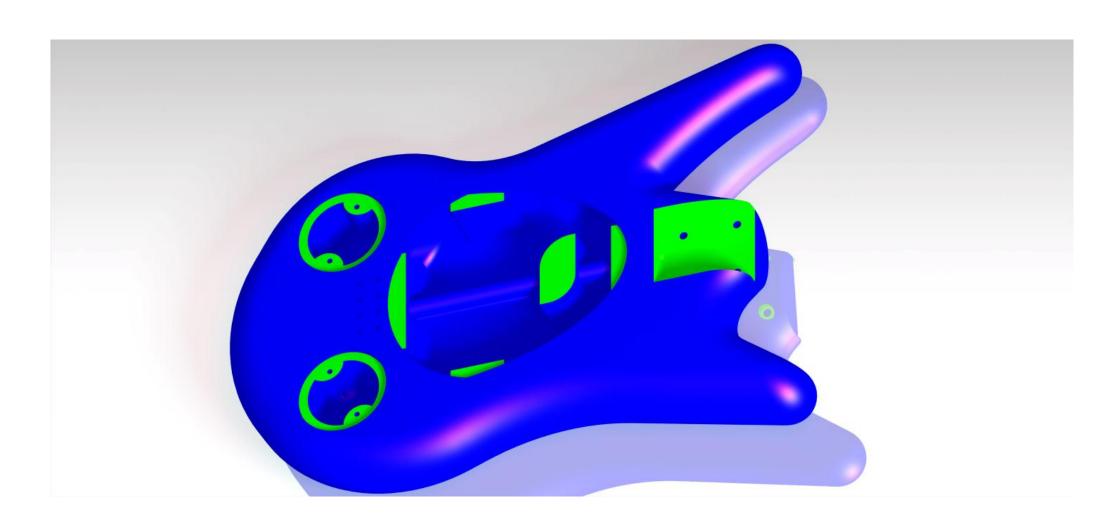



Neck assembly

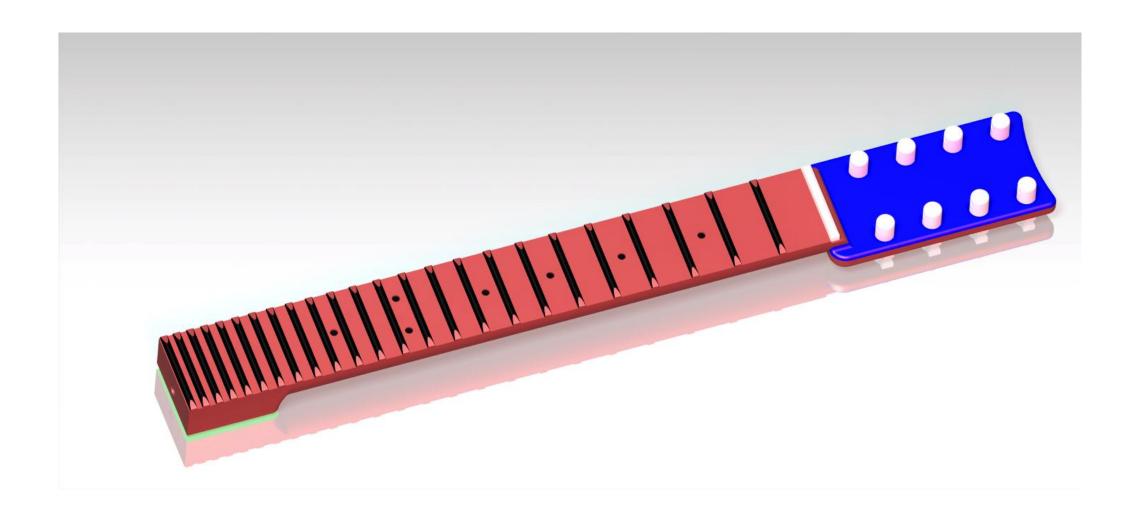


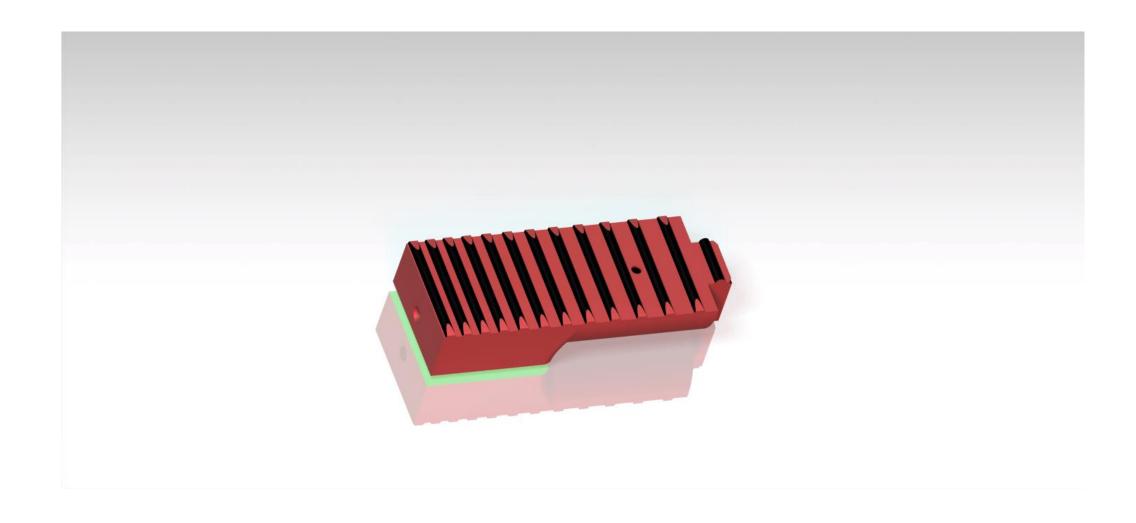

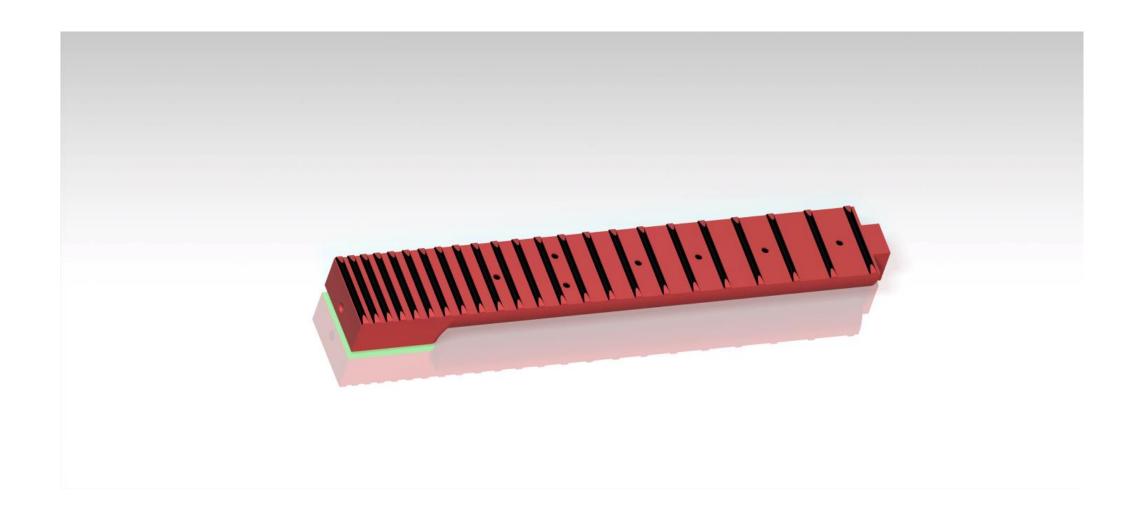


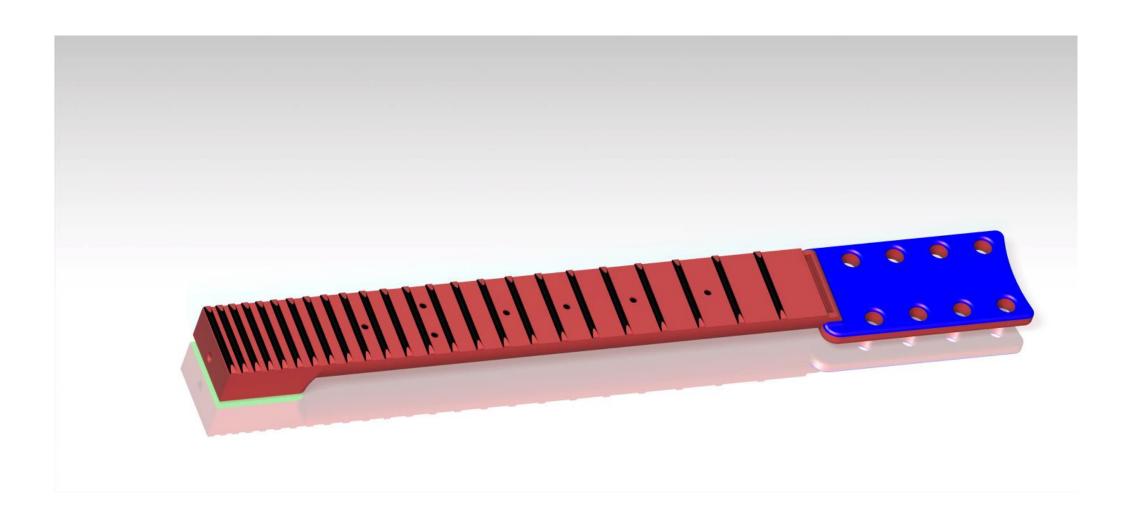

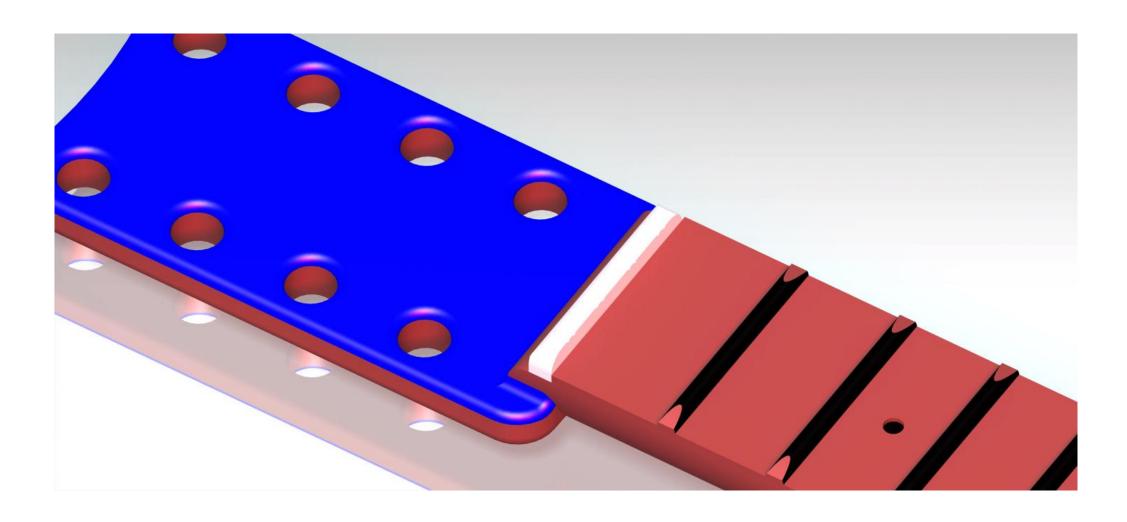


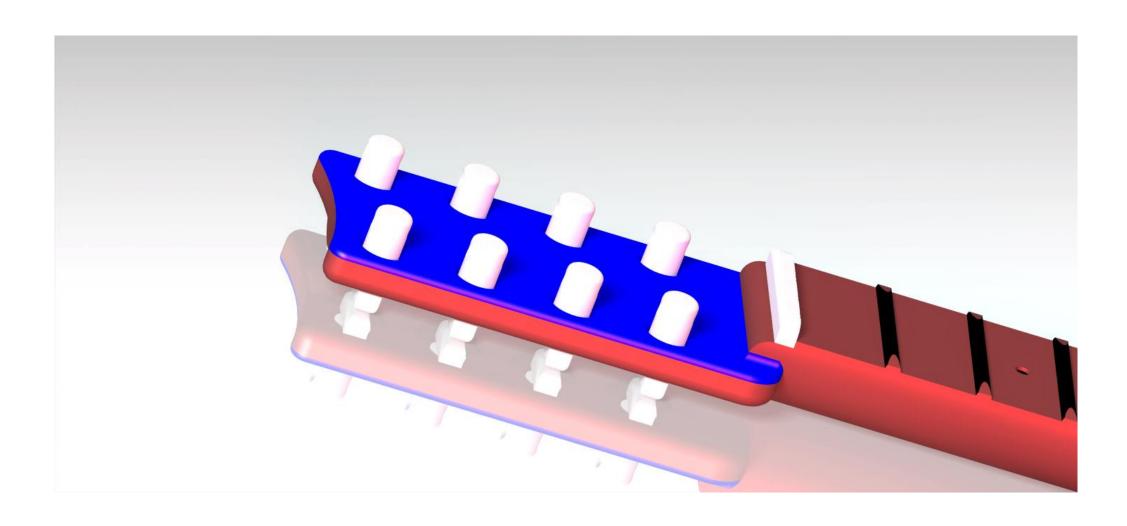

Full assembly: step 1

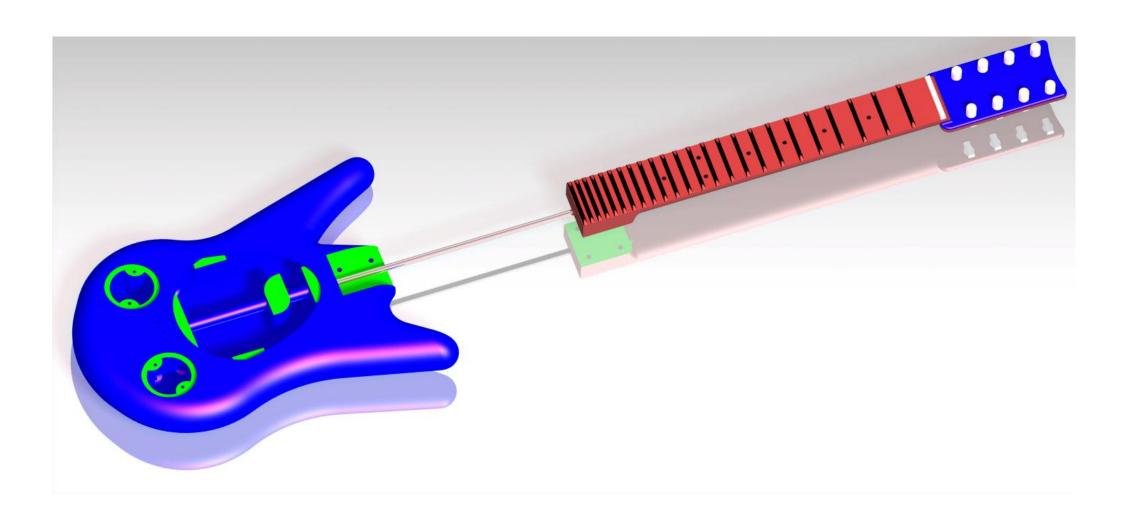

Full assembly: step 2

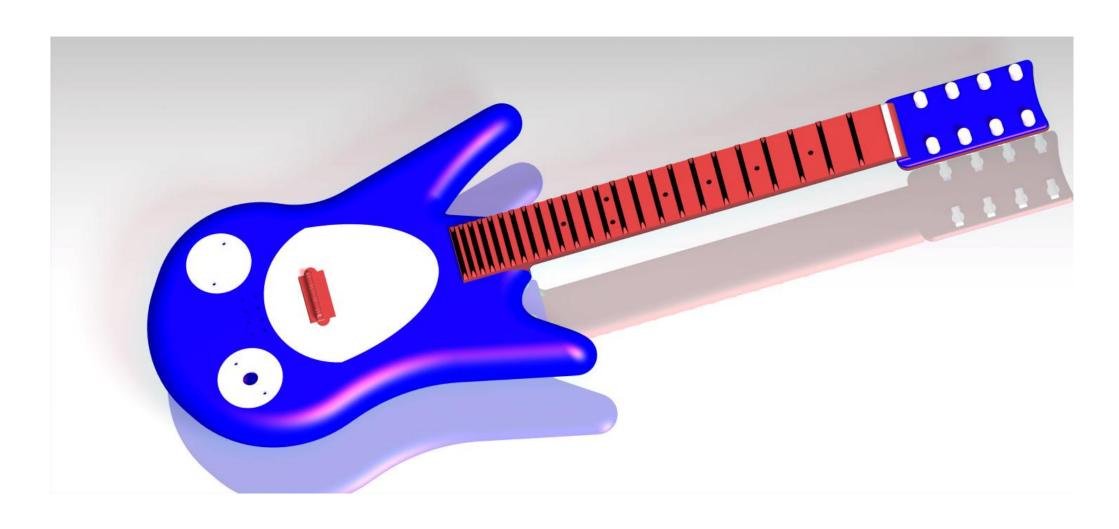

Full assembly: step 3

