source ..... qu-bit electronix
rev 2026.10

data bender

_travelers guide
_for managing corrupt timestreams

60 s+	5	2
stereo buffer	corrupt types	modes

› then noon = 12 o'clock tags = the panel drawing

stereo circuit-bent audio buffer · over a minute at 96 kHz · tape bends, cd breaks, five ways to corrupt

01 what it is

db_01

a buffer	stereo, always recording · over a minute at 96 kHz / 24-bit
the loop	time sets the slice you hear · repeats chops it into repeating parts
the damage	bend = tape tricks · break = cd glitches · corrupt = degradation at the end


02 the core

db_02 · fig.01

time	internal: 16 s (left) to 80 Hz (right) · external: /16 /8 /4 /2 ×1 ×2 ×3 ×4 ×8
repeats	min = the whole slice once · up = more, shorter parts, each played that many times
mix	dry ↔ wet · freeze at full dry jumps to full wet
[freeze]	stops recording · shrink time to dig up older audio · nothing is erased

__fig.04 : freeze


the buffer

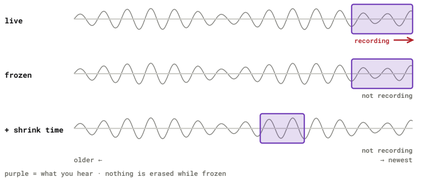

purple = what you hear · nothing is erased while frozen

__fig.01 : time × repeats

what you hear

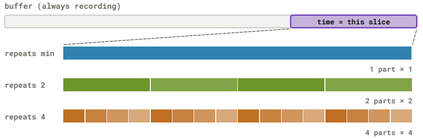

10 first flight

db_10 · first glitch

1. audio into left · left right out
2. mix to noon · time around noon
3. raise repeats to stutter
4. [mode] to macro (blue) · [bend] + [break] on
5. turn bend and break up slowly
6. [freeze] to hold what you like


03 macro or micro

db_03 · the big idea

[mode]	flips how bend and break behave · each mode remembers its own settings
› macro	blue · automated: the knobs set how wild, changes land on the clock
› micro	green · hands-on: you set speed and which part plays

__fig.02 : macro zones

mode LED blue



knob → · changes land on the clock


04 bend

db_04 · tape

macro	low → high: reverses · octave jumps · tape stops · slewed speed · all of it
micro	speed –3 … +3 octaves · tracks 1 V/oct · [bend] = reverse
micro LED	blue forward (cyan on octaves) · green reverse (gold on octaves)
[bend] / gate	macro: bend on or off

__fig.05 : bend · micro

speed

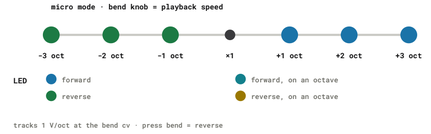

tracks 1 V/oct at the bend cv · press bend = reverse


05 break

db_05 · cd

macro	low → high: 2 parts · jumps · more parts · audio-rate repeats · silence · all of it
› traverse	micro, LED off · the knob picks which part plays (needs repeats above 1)
› silence	micro, LED blue · knob = silence duty, 0 – 90 %
[break] / gate	macro: on or off · micro: traverse ↔ silence

__fig.06 : break · micro

traverse · silence

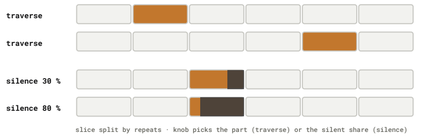

slice split by repeats · knob picks the part (traverse) or the silent share (silence)


06 corrupt

db_06 · button cycles · knob min = off

decimate	bit crush + downsample in random steps · hiss to heavy distortion	blue
dropout	random gaps · left = few long · right = many short	green
destroy	soft saturation, then hard clipping past noon · loud	gold
dj filter	low-pass ← noon (off) → high-pass	purple
vinyl sim	dust, pops and colour · full = old turntable	orange

__fig.07 : corrupt

LED colour = effect

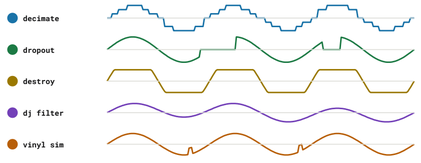

button cycles · knob min = off · shift + mode: all five or the original three

07 clock

db_07

[clock]	internal (LED blinks blue) ↔ external (white, at the time rate)
clock stops	after 4 beats the LED goes dim white · keeps the last rate
gold flash	a new divide / multiply step
resync	set the corrupt gate to reset + [shift] + [corrupt]

__fig.08 : clocked time

divide · multiply

external clock · time knob ccw → cw

/16	/8	/4	/2	×1	×2	×3	×4	×8

gold flash = a new step · after 4 missed beats the LED dims but keeps the rate
internal: time runs 16 s (ccw) to 80 Hz (cw)


08 shift layer

db_08 · hold shift

time	windowing: hard clicks ↔ smooth grains (default 2 %)
repeats mix	LED brightness · stereo width
bend break corrupt	attenuate their cv inputs
[bend]	macro bends unique per side ↔ shared
[corrupt]	gate advances the effect (blue) ↔ resets the clock (green)
[freeze] [clock]	freeze button latch ↔ momentary · gates latch ↔ momentary
[mode]	all five corrupts (blue) ↔ the original three (green)
[break]	restore default settings (LED pulses, then blinks blue)

__fig.09 : windowing

shift + time



shift + time sets the window on each repeat

12 reset · calibrate · update

db_12

[shift] + [break]	defaults: macro, bend/break/freeze off, unique stereo, latching, 2 % window
calibrate	hold [mode] at power on · 1 V to bend cv › [bend] · 3 V › [bend] · [shift] saves
undo cal	in calibration: [break] then [shift] = factory calibration
firmware	usb on the daisy seed · chrome web programmer · top 3 LEDs show the version at boot

11 three patches

db_11 · manual ideas


lo-fi tape — micro
bend and corrupt moderate · modulate bend and time

cd skip — micro · traverse
modulate repeats to sweep through the parts

ghost in the machine — macro · dropout
modulate time and repeats · feed it a busy voice

__fig.03 : the panel

numbers match the legend

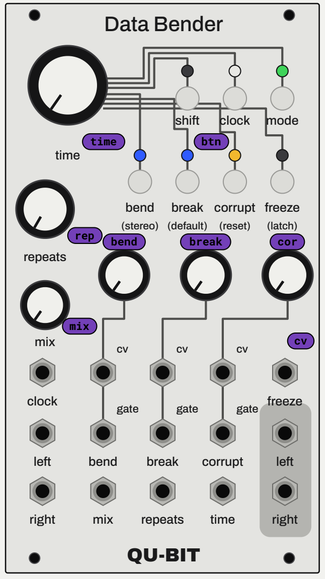

time	time · slice length · clock divide
rep	repeats · how many parts
mix	mix · dry ↔ wet
bend	bend · tape · button = on / reverse
break	break · cd · button = on / mode
cor	corrupt · amount · button = type
btn	buttons · mode · clock · freeze · shift
cv	jacks · cv ±5 V · gates 0.4 V · stereo in / out

09 specs

db_09

audio	10 Vpp in and out · left in feeds both sides
cv · gates	cv ±5 V · gates and clock trigger at 0.4 V
size	14 hp · 28 mm deep
power	58 mA +12 V · 60 mA –12 V

design homage to the house of x / powers of x data pages — designed by tom muller with jonathan hickman · panel drawing after the qu-bit panel
not affiliated with qu-bit electronix or marvel

conceived by mellotom · databender-navigator ... 00.10_01
created with claude