data bender

_travelers guide
_for managing corrupt timestreams

60 s+	5	2
stereo buffer	corrupt types	modes

› then noon = 12 o'clock tags = the panel drawing

stereo circuit-bent audio buffer · over a minute at 96 kHz · tape bends, cd breaks, five ways to corrupt

01 what it is

db_01

a buffer	stereo, always recording · over a minute at 96 kHz / 24-bit
the loop	`time` sets the slice you hear · `repeats` chops it into repeating parts
the damage	`bend` = tape tricks · `break` = cd glitches · `corrupt` = degradation at the end


02 the core

db_02 · fig.01

`time`	internal: 16 s (left) to 80 Hz (right) · external: /16 /8 /4 /2 ×1 ×2 ×3 ×4 ×8
`repeats`	min = the whole slice once · up = more, shorter parts, each played that many times
`mix`	dry ↔ wet · freeze at full dry jumps to full wet
`[ freeze ]`	stops recording · shrink `time` to dig up older audio · nothing is erased

__fig.01 : time × repeats

what you hear

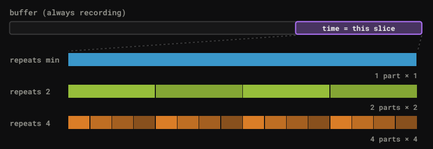

10 first flight

db_10 · first glitch

1. audio into `left` · `left` `right` out
2. `mix` to noon · `time` around noon
3. raise `repeats` to stutter
4. `[ mode ]` to macro (blue) · `[ bend ]` + `[ break ]` on
5. turn `bend` and `break` up slowly
6. `[ freeze ]` to hold what you like

03 macro or micro

db_03 · the big idea

`[ mode ]`	flips how `bend` and `break` behave · each mode remembers its own settings
› macro	blue · automated: the knobs set how wild, changes land on the clock
› micro	green · hands-on: you set speed and which part plays

__fig.02 : macro zones

mode LED blue



04 bend

db_04 · tape

macro	low → high: reverses · octave jumps · tape stops · slewed speed · all of it
micro	speed –3 … +3 octaves · tracks 1 V/oct · `[ bend ]` = reverse
micro LED	blue forward (cyan on octaves) · green reverse (gold on octaves)
`[ bend ]` / gate	macro: bend on or off

05 break

db_05 · cd

macro	low → high: 2 parts · jumps · more parts · audio-rate repeats · silence · all of it
› traverse	micro, LED off · the knob picks which part plays (needs repeats above 1)
› silence	micro, LED blue · knob = silence duty, 0 – 90 %
`[ break ]` / gate	macro: on or off · micro: traverse ↔ silence

06 corrupt

db_06 · button cycles · knob min = off

decimate — blue
bit crush + downsample in random steps · hiss to heavy distortion

dropout — green
random gaps · left = few long · right = many short

destroy — gold
soft saturation, then hard clipping past noon · loud

dj filter — purple
low-pass ← noon (off) → high-pass

vinyl sim — orange
dust, pops and colour · full = old turntable

07 clock

db_07

`[ clock ]`	internal (LED blinks blue) ↔ external (white, at the `time` rate)
clock stops	after 4 beats the LED goes dim white · keeps the last rate
gold flash	a new divide / multiply step
resync	set the corrupt gate to reset + `[ shift ]` + `[ corrupt ]`

11 three patches

db_11 · manual ideas

lo-fi tape — micro
bend and corrupt moderate · modulate bend and time

cd skip — micro · traverse
modulate repeats to sweep through the parts

ghost in the machine — macro · dropout
modulate time and repeats · feed it a busy voice

08 shift layer

db_08 · hold shift

`time`	windowing: hard clicks ↔ smooth grains (default 2 %)
`repeats` `mix`	LED brightness · stereo width
`bend` `break` `corrupt`	attenuate their cv inputs
`[ bend ]`	macro bends unique per side ↔ shared
`[ corrupt ]`	gate advances the effect (blue) ↔ resets the clock (green)
`[ freeze ]` `[ clock ]`	freeze button latch ↔ momentary · gates latch ↔ momentary
`[ mode ]`	all five corrupts (blue) ↔ the original three (green)
`[ break ]`	restore default settings (LED pulses, then blinks blue)


12 reset · calibrate · update

db_12

`[ shift ]` + `[ break ]`	defaults: macro, bend/break/freeze off, unique stereo, latching, 2 % window
calibrate	hold `[ mode ]` at power on · 1 V to bend cv › `[ bend ]` · 3 V › `[ bend ]` · `[ shift ]` saves
undo cal	in calibration: `[ break ]` then `[ shift ]` = factory calibration
firmware	usb on the daisy seed · chrome web programmer · top 3 LEDs show the version at boot

__fig.03 : the panel

numbers match the legend

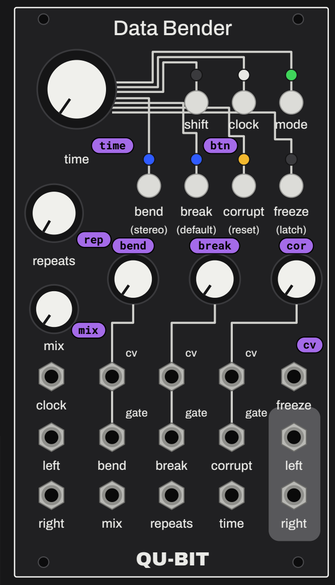

- `time` **time** · slice length · clock divide
- `rep` **repeats** · how many parts
- `mix` **mix** · dry ↔ wet
- `bend` **bend** · tape · button = on / reverse
- `break` **break** · cd · button = on / mode
- `cor` **corrupt** · amount · button = type
- `btn` **buttons** · mode · clock · freeze · shift
- `cv` **jacks** · cv ±5 V · gates 0.4 V · stereo in / out

09 specs

db_09

audio	10 Vpp in and out · left in feeds both sides
cv · gates	cv ±5 V · gates and clock trigger at 0.4 V
size	14 hp · 28 mm deep
power	58 mA +12 V · 60 mA –12 V