# hermod+

## _travelers guide
## _for talking to machines

**16** tracks · 8 cv + 8 midi | **16** sequences / project | **8+4** fx · mod lanes / track

`[ step ]` press `[ step ]` hold turn / push `[ encoder ]` `[ pad ]` 1 of 16
`[ tr 1 ]`–`[ tr 8 ]` track switches › then

modes: `[ step ]` · `[ effects ]` · `[ track ]` · `[ seq ]` · on air

red = hold

## 01 anywhere — hrm_01

| | |
|---|---|
| `[ tr 1–8 ]` | select track |
| `[ play ]` | start / stop (stop returns to top) |
| `[ seq ]` + `[ pad ]` | launch that sequence |
| `[ seq ]` + `[ play ]` | restart every pattern player |
| `[ step ]` + `[ rec ]` | **on air**: pads become a keyboard |
| `[ play ]` | **bpm menu**: turn `[ encoder ]` for tempo, tap `[ rec ]` to tap tempo, sync input inside |
| `[ rec ]` | **record settings** |
| `[ step ]` `[ effects ]` … | hold any mode button to peek, release to return |

## 02 recording — hrm_02

| | |
|---|---|
| `[ rec ]` | arm overdub (default) on the selected track; starts with `[ play ]` or live while playing |
| `[ x ]` + `[ rec ]` | hard rec: overwrites old notes * |
| `[ y ]` + `[ rec ]` | looper rec: length set when you stop * |
| `[ x ]` `[ y ]` + `[ rec ]` | multitrack rec: all routed tracks * |

* factory defaults. reassign: record settings › shortcut x / y / x+y – hard rec, multitrack, looper, punch-in or nothing.

## 03 power-on — hrm_03

| | |
|---|---|
| `[ step ]` at boot | skip autoload, start a fresh project |
| `[ x ]` at boot | calibrate `[ cv 1–8 ]` outputs (voltmeter; `[ tr ]` picks voice, `[ x ]` saves) |
| `[ y ]` at boot | auto-calibrate `[ cv a–d ]` inputs from `[ cv 1 ]` (do outputs first) |

## __fig.01 : pad matrix

indexed 01–16

| | | | |
|---|---|---|---|
| 01 | 02 | 03 | 04 |
| 05 | 06 | 07 | 08 |
| 09 | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 |

■ red = modmatrix attenuverter pads ([ effects ] › [ y ]) · [ pad ] n = sequence n (seq) or step n (step)

## 04 step · length / view — hrm_04

| | |
|---|---|
| `[ y ]` / `[ x ]` | page left / right (pauses follow-playhead until you leave step) |
| `[ y ]` + turn `[ encoder ]` | pattern length, 16–256 steps |
| `[ y ]` + push+turn `[ encoder ]` | length in single 1/16 steps (polymeter) |
| `[ x ]` + turn `[ encoder ]` | zoom: /4, /2, 2/3, ×1, 3/2, ×2, ×4, ×8 |
| `[ x ]` `[ y ]` + turn `[ encoder ]` | double / halve length |
| hold + turn `[ encoder ]` | rotate all events left / right |

## 05 step · notes — hrm_05

| | |
|---|---|
| `[ pad ]` | add / delete a note |
| turn `[ encoder ]` | set pitch for the next note |
| `[ pad ]` + turn `[ encoder ]` | edit note; push `[ encoder ]` cycles pitch › length › velocity |
| `[ pad ]` + push+turn `[ encoder ]` | fast scroll (pitch jumps octaves) |
| `[ pad ]` `[ pad ]` | hold several to edit a range together |
| `[ pad ]` + `[ pad ]` | copy a step, paste onto another |
| `[ pad ]` + `[ tr 1–8 ]` | quick note length |
| `[ step ]` + turn `[ encoder ]` | **row edit** on (one pitch per row); turn ← exits |
| `[ step ]` in row edit | cycle through pitches used in the pattern |
| `[ midi ]` / on air chord | play it, then `[ pad ]` drops the whole chord in (note learn) |

## 06 step · mod / gate — hrm_06

| | |
|---|---|
| `[ step ]` | toggle mod / gate tab |
| `[ step ]` + turn `[ encoder ]` | switch mod value ← → interpolation (off, lin, s, log, exp) |
| `[ pad ]` + turn `[ encoder ]` | offset that mod value / gate length |
| `[ tr ]` again | multi-voice layout: opens that voice's gate view |

## 07 step · analyzer — hrm_07

hold `[ step ]` and press a track switch to show and edit that event lane:

| `[ tr 1 ]` | `[ tr 2 ]` | `[ tr 3 ]` | `[ tr 4 ]` |
|---|---|---|---|
| **notes** | **pitchbend** | **aftertouch** | **sustain** |
| `[ tr 5 ]` | `[ tr 6 ]` | `[ tr 7 ]` | `[ tr 8 ]` |
| **mod** | **mod 2** | **mod 3** | **mod 4** |


| | |
|---|---|
| `[ step ]` + `[ x ]` | erase the shown lane in this pattern (row only, in row edit) |
| `[ step ]` + `[ y ]` | randomize the shown lane |

## 08 track — hrm_08

| | |
|---|---|
| `[ track ]` or turn `[ encoder ]` | flip cv tracks 1–8 ← → midi tracks 1–8 |
| `[ pad ]` | mute track in this pattern |
| `[ track ]` + `[ pad ]` | mute track in all patterns |
| `[ x ]` | layout configurator (voices › layout) |
| `[ y ]` | global settings |
| push `[ encoder ]` | copy, paste, clear, rename track |
| `[ tr 1–8 ]` | per-track config (see hrm_12) |

## __fig.02 : the bridge

mm_01

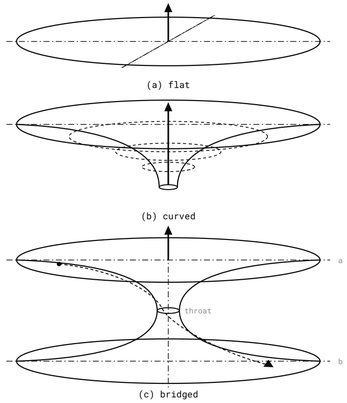


## 09 effects — hrm_09

| | |
|---|---|
| empty `[ pad ]` | jump into "add effect" |
| filled `[ pad ]` | jump into "edit effect" (any pad exits) |
| `[ pad ]` | mute effect in this pattern |
| `[ effects ]` + `[ pad ]` | mute effect in all patterns |
| `[ effects ]` again | toggle parameter view ← → fx rack |
| `[ encoder ]` on slot | context menu: edit, copy, paste, delete (paste works track to track) |
| `[ encoder ]` on param | global value ← → **pattern-only value** |
| `[ y ]` | **modmatrix**, 4 lanes; `[ pad ]` picks a lane |
| `[ pad 2 · 6 · 10 · 14 ]` | lane's attenuverter / polarity / offset (fig. 01) |

## 10 seq — hrm_10

| | |
|---|---|
| `[ pad ]` | launch sequence (waits for sync) |
| `[ x ]` + `[ pad ]` | append to song chain |
| `[ x ]` tap | clear the chain |
| `[ x ]` + turn `[ encoder ]` | sync: modulo, bars, shortest / longest, same as tr; push+turn = step precise |
| `[ y ]` + turn `[ encoder ]` | run: sync / instant, restart / free |
| live `[ pad ]` + empty `[ pad ]` | duplicate the playing sequence |
| turn › push `[ encoder ]` | chain stopped: jump to any chain step |
| `[ seq ]` `[ seq ]` | straight to project save / load |

## 11 on air — hrm_11


| | |
|---|---|
| turn `[ encoder ]` | lowest note on the pads |
| `[ x ]` / `[ y ]` | octave shift |
| `[ rec ]` | record what you play |
| mod track | pads become 16 fixed mod values |
| exit | `[ step ]` or any mode button |

## __fig.03 : front panel

01–11 = sections · 13–18 = hardware

`[ 01 ]` **__play :** hold = bpm
`[ 02 ]` **__rec :** hold = rec settings
`[ 03 ]` **__x :** zoom, rack, voices, song
`[ 04 ]` **__encoder :** turn / push
`[ 05 ]` **__pad :** matrix, 16 pads
`[ 06 ]` **__cv 1–8 __gate 1–8**
`[ 07 ]` **__tr 1–8 :** track switches
`[ 08 ]` **__track**
`[ 09 ]` **__effects**
`[ 10 ]` **__seq**
`[ 11 ]` **__step**

`[ 13 ]` **__cv a–d :** ins · a/b, c/d
`[ 14 ]` **__usb device :** usb in
`[ 15 ]` **__usb host :** out
`[ 16 ]` **__midi :** in · out
`[ 17 ]` **__reset __clock :** outs
`[ 18 ]` **__y :** length, matrix, settings, run

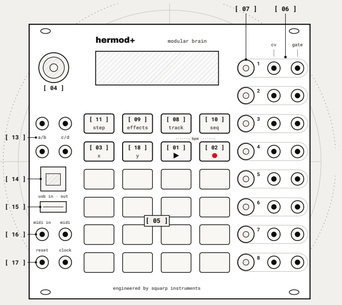


## _where things hide

12 · hrm_12

### global settings `[ track ]` › `[ y ]`

- sync in clock source, `[ cv a–d ]` reset / play / rec, clock div
- sync out clock + transport per port, `[ reset ]` mode, `[ clock ]` rate
- midi in active-track port / channel, filters, pc › seq
- midi thru port-to-port copies
- cv/gate in `[ cv a–d ]` routing, range, pitch offset
- misc autoload, leds, hold time, smart overdub, follow playhead
- rec same as hold `[ rec ]`
- tuner turn `[ encoder ]` to pick `[ cv a–d ]`
- monitor cv in › turn right: midi in › jitter
- custom scales 16 user scales for the scale effect
- save nothing above sticks until you save
- info os version, cpu / ram

### quick routes

- rec options hold `[ rec ]`
- tempo + sync hold `[ play ]`
- modmatrix `[ effects ]` › `[ y ]`
- voice layouts `[ track ]` › `[ x ]`
- hold threshold `[ track ]` › `[ y ]` › misc
- seq copy `[ seq ]` › push `[ encoder ]` (across projects)

### per-track config hold

`[ tr 1–8 ]`

- player quantize, apply sustain, transpose, mute affects input
- inputs midi port + channel, mod cc, `[ cv a–d ]` note / mod in, generator trigs
- outputs midi port + channel, mod 1–4 / pitchbend / aftertouch destinations
- cv `[ gate ]` retrig, poly allocator, v/oct · 1.2 v · hz/v, finetune, bend range, `[ cv ]` min / max

transpose leader = tr8 midi, always. enable player › transpose on it, then on followers.

### pattern edit `[ step ]` › push `[ encoder ]`

- copy / paste whole track, or per lane (with page variants)
- delete per event lane
- generator randomize all, or just pitch / length / velocity
- gen settings grid, density, pitch / length / velocity ranges

### projects `[ seq ]` › push `[ encoder ]`

- save load save, save as, new
- load delete lives in here. shortcut: `[ seq ]` `[ seq ]`
- after load `[ y ]` take its bpm · `[ x ]` keep current. swaps in sync, no stop.