hermod+

_travelers guide
_for talking to machines

16	16	8+4
tracks · 8 cv + 8 midi	sequences / project	fx · mod lanes / track

[step] press [step] hold turn / push [encoder] [pad] 1 of 16
[tr 1]–[tr 8] track switches › then

modes: [step] · [effects] · [track] · [seq] · on air

red = hold

01 anywhere — hrm_01

[tr 1–8]	select track
[play]	start / stop (stop returns to top)
[seq] + [pad]	launch that sequence
[seq] + [play]	restart every pattern player
[step] + [rec]	**on air**: pads become a keyboard
[play]	**bpm menu**: turn [encoder] for tempo, tap [rec] to tap tempo, sync input inside
[rec]	**record settings**
[step] [effects] ...	hold any mode button to peek, release to return

02 recording — hrm_02

[rec]	arm overdub (default) on the selected track; starts with [play] or live while playing
[x] + [rec]	hard rec: overwrites old notes *
[y] + [rec]	looper rec: length set when you stop *
[x] [y] + [rec]	multitrack rec: all routed tracks *

* factory defaults. reassign: record settings › shortcut x / y / x+y – hard rec, multitrack, looper, punch-in or nothing.

03 power-on — hrm_03

[step] at boot	skip autoload, start a fresh project
[x] at boot	calibrate [cv 1–8] outputs (voltmeter; [tr] picks voice, [x] saves)
[y] at boot	auto-calibrate [cv a–d] inputs from [cv 1] (do outputs first)

__fig.01 : pad matrix

indexed 01–16

01	02	03	04
05	06	07	08
09	10	11	12
13	14	15	16

■ red = modmatrix attenuverter pads ([effects] › [y]) · [pad] n = sequence n (seq) or step n (step)

04 step · length / view — hrm_04

[y] / [x]	page left / right (pauses follow-playhead until you leave step)
[y] + turn [encoder]	pattern length, 16–256 steps
[y] + push+turn [encoder]	length in single 1/16 steps (polymeter)
[x] + turn [encoder]	zoom: /4, /2, 2/3, ×1, 3/2, ×2, ×4, ×8
[x] [y] + turn [encoder]	double / halve length
hold + turn [encoder]	rotate all events left / right

05 step · notes — hrm_05

[pad]	add / delete a note
turn [encoder]	set pitch for the next note
[pad] + turn [encoder]	edit note; push [encoder] cycles pitch › length › velocity
[pad] + push+turn [encoder]	fast scroll (pitch jumps octaves)
[pad] [pad]	hold several to edit a range together
[pad] + [pad]	copy a step, paste onto another
[pad] + [tr 1–8]	quick note length
[step] + turn → [encoder]	**row edit** on (one pitch per row); turn ← exits
[step] in row edit	cycle through pitches used in the pattern
[midi] / on air chord	play it, then [pad] drops the whole chord in (note learn)

06 step · mod / gate — hrm_06

[step]	toggle mod / gate tab
[step] + turn [encoder]	switch mod value ← → interpolation (off, lin, s, log, exp)
[pad] + turn [encoder]	offset that mod value / gate length
[tr] again	multi-voice layout: opens that voice's gate view

07 step · analyzer — hrm_07

hold [step] and press a track switch to show and edit that event lane:


[tr 1]	[tr 2]	[tr 3]	[tr 4]
notes	pitchbend	aftertouch	sustain
[tr 5]	[tr 6]	[tr 7]	[tr 8]
mod	mod 2	mod 3	mod 4

[step] + [x]	erase the shown lane in this pattern (row only, in row edit)
[step] + [y]	randomize the shown lane

08 track — hrm_08

[track] or turn [encoder]	flip cv tracks 1–8 ← → midi tracks 1–8
[pad]	mute track in this pattern
[track] + [pad]	mute track in all patterns
[x]	layout configurator (voices › layout)
[y]	global settings
push [encoder]	copy, paste, clear, rename track
[tr 1–8]	per-track config (see hrm_12)

__fig.02 : the bridge — mm_01

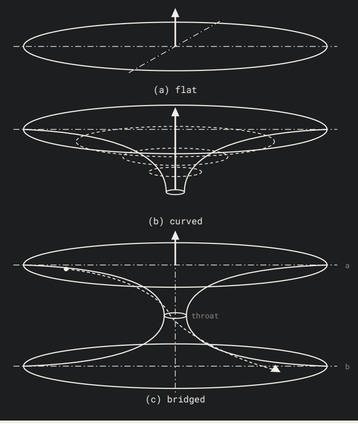

09 effects — hrm_09

empty [pad]	jump into "add effect"
filled [pad]	jump into "edit effect" (any pad exits)
[pad]	mute effect in this pattern
[effects] + [pad]	mute effect in all patterns
[effects] again	toggle parameter view ← → fx rack
[encoder] on slot	context menu: edit, copy, paste, delete (paste works track to track)
[encoder] on param	global value ← → **pattern-only value**
[y]	**modmatrix**, 4 lanes; [pad] picks a lane
[pad 2 · 6 · 10 · 14]	lane's attenuverter / polarity / offset (fig. 01)

10 seq — hrm_10

[pad]	launch sequence (waits for sync)
[x] + [pad]	append to song chain
[x] tap	clear the chain
[x] + turn [encoder]	sync: modulo, bars, shortest / longest, same as tr; push+turn = step precise
[y] + turn [encoder]	run: sync / instant, restart / free
live [pad] + empty [pad]	duplicate the playing sequence
turn › push [encoder]	chain stopped: jump to any chain step
[seq] [seq]	straight to project save / load

11 on air — hrm_11

turn [encoder]	lowest note on the pads
[x] / [y]	octave shift
[rec]	record what you play
mod track	pads become 16 fixed mod values
exit	[step] or any mode button

__fig.03 : front panel

01–11 = sections · 13–18 = hardware

- [01] __play : hold = bpm
- [02] __rec : hold = rec settings
- [03] __x : zoom, rack, voices, song
- [04] __encoder : turn / push
- [05] __pad : matrix, 16 pads
- [06] __cv 1–8 __gate 1–8
- [07] __tr 1–8 : track switches
- [08] __track
- [09] __effects
- [10] __seq
- [11] __step

- [13] __cv a–d : ins · a/b, c/d
- [14] __usb device : usb in
- [15] __usb host : out
- [16] __midi : in · out
- [17] __reset __clock : outs
- [18] __y : length, matrix, settings, run



_where things hide — 12 · hrm_12

global settings [track] › [y]

- sync in clock source, [cv a–d] reset / play / rec, clock div
- sync out clock + transport per port, [reset] mode, [clock] rate
- midi in active-track port / channel, filters, pc › seq
- midi thru port-to-port copies
- cv/gate in [cv a–d] routing, range, pitch offset
- misc autoload, leds, hold time, smart overdub, follow playhead
- rec same as hold [rec]
- tuner turn [encoder] to pick [cv a–d]
- monitor cv in › turn right: midi in › jitter
- custom scales 16 user scales for the scale effect
- save nothing above sticks until you save
- info os version, cpu / ram

quick routes

- rec options hold [rec]
- tempo + sync hold [play]
- modmatrix [effects] › [y]
- voice layouts [track] › [x]
- hold threshold [track] › [y] › misc
- seq copy [seq] › push [encoder] (across projects)

per-track config hold [tr 1–8]

- player quantize, apply sustain, transpose, mute affects input
- inputs midi port + channel, mod cc, [cv a–d] note / mod in, generator trigs
- outputs midi port + channel, mod 1–4 / pitchbend / aftertouch destinations
- cv [gate] retrig, poly allocator, v/oct · 1.2 v · hz/v, finetune, bend range, [cv] min / max

transpose leader = tr8 midi, always. enable player › transpose on it, then on followers.

pattern edit [step] › push [encoder]

- copy / paste whole track, or per lane (with page variants)
- delete per event lane
- generator randomize all, or just pitch / length / velocity
- gen settings grid, density, pitch / length / velocity ranges

projects [seq] › push [encoder]

- save load save, save as, new
- load delete lives in here. shortcut: [seq] [seq]
- after load [y] take its bpm · [x] keep current. swaps in sync, no stop.