source ..... squarp.net/hermodplus/manual
rev 2026.10

hermod+

_button combos
_buried menus

16 tracks · 8 cv + 8 midi | **16** sequences / project | **8+4** fx · mod lanes / track

`[ step ]` press `[ step ]` hold turn / push `[ encoder ]` `[ pad ]` 1 of 16
`[ tr 1 ]`–`[ tr 8 ]` track switches › then

modes: `[ step ]` · `[ effects ]` · `[ track ]` · `[ seq ]` · on air

red = hold

01 anywhere — hrm_01

`[ tr 1–8 ]`	select track
`[ play ]`	start / stop (stop returns to top)
`[ seq ]` + `[ pad ]`	launch that sequence
`[ seq ]` + `[ play ]`	restart every pattern player
`[ step ]` + `[ rec ]`	**on air**: pads become a keyboard
`[ play ]`	**bpm menu**: turn `[ encoder ]` for tempo, tap `[ rec ]` to tap tempo, sync input inside
`[ rec ]`	**record settings**
`[ step ]` `[ effects ]` …	hold any mode button to peek, release to return

02 recording — hrm_02

`[ rec ]`	arm overdub (default) on the selected track; starts with `[ play ]` or live while playing
`[ x ]` + `[ rec ]`	hard rec: overwrites old notes *
`[ y ]` + `[ rec ]`	looper rec: length set when you stop *
`[ x ]` `[ y ]` + `[ rec ]`	multitrack rec: all routed tracks *

* factory defaults. reassign: record settings › shortcut x / y / x+y — hard rec, multitrack, looper, punch-in or nothing.

03 power-on — hrm_03

`[ step ]` at boot	skip autoload, start a fresh project
`[ x ]` at boot	calibrate `[ cv 1–8 ]` outputs (voltmeter; `[ tr ]` picks voice, `[ x ]` saves)
`[ y ]` at boot	auto-calibrate `[ cv a–d ]` inputs from `[ cv 1 ]` (do outputs first)

_fig.01 : pad matrix

indexed 01–16

01	02	03	04
05	06	07	08
09	10	11	12
13	14	15	16

■ red = modmatrix attenuverter pads (`[ effects ]` › `[ y ]`) · `[ pad ]` n = sequence n (seq) or step n (step)

04 step · length / view — hrm_04

`[ y ]` / `[ x ]`	page left / right (pauses follow-playhead until you leave step)
`[ y ]` + turn `[ encoder ]`	pattern length, 16–256 steps
`[ y ]` + push+turn `[ encoder ]`	length in single 1/16 steps (polymeter)
`[ x ]` + turn `[ encoder ]`	zoom: /4, /2, 2/3, ×1, 3/2, ×2, ×4, ×8
`[ x ]` `[ y ]` + turn `[ encoder ]`	double / halve length
hold + turn `[ encoder ]`	rotate all events left / right

05 step · notes — hrm_05

`[ pad ]`	add / delete a note
turn `[ encoder ]`	set pitch for the next note
`[ pad ]` + turn `[ encoder ]`	edit note; push `[ encoder ]` cycles pitch › length › velocity
`[ pad ]` + push+turn `[ encoder ]`	fast scroll (pitch jumps octaves)
`[ pad ]` `[ pad ]`	hold several to edit a range together
`[ pad ]` + `[ pad ]`	copy a step, paste onto another
`[ pad ]` + `[ tr 1–8 ]`	quick note length
`[ step ]` + turn → `[ encoder ]`	**row edit** on (one pitch per row); turn ← exits
`[ step ]` in row edit	cycle through pitches used in the pattern
`[ midi ]` / on air chord	play it, then `[ pad ]` drops the whole chord in (note learn)

06 step · mod / gate — hrm_06

`[ step ]`	toggle mod / gate tab
`[ step ]` + turn `[ encoder ]`	switch mod value ← → interpolation (off, lin, s, log, exp)
`[ pad ]` + turn `[ encoder ]`	offset that mod value / gate length
`[ tr ]` again	multi-voice layout: opens that voice's gate view

07 step · analyzer — hrm_07

hold `[ step ]` and press a track switch to show and edit that event lane:

`[ tr 1 ]`	`[ tr 2 ]`	`[ tr 3 ]`	`[ tr 4 ]`
notes	pitchbend	aftertouch	sustain
`[ tr 5 ]`	`[ tr 6 ]`	`[ tr 7 ]`	`[ tr 8 ]`
mod	mod 2	mod 3	mod 4


`[ step ]` + `[ x ]`	erase the shown lane in this pattern (row only, in row edit)
`[ step ]` + `[ y ]`	randomize the shown lane

08 track — hrm_08

`[ track ]` or turn `[ encoder ]`	flip cv tracks 1–8 ← → midi tracks 1–8
`[ pad ]`	mute track in this pattern
`[ track ]` + `[ pad ]`	mute track in all patterns
`[ x ]`	layout configurator (voices › layout)
`[ y ]`	global settings
push `[ encoder ]`	copy, paste, clear, rename track
`[ tr 1–8 ]`	per-track config (see hrm_12)

_fig.02 : the bridge

mm_01

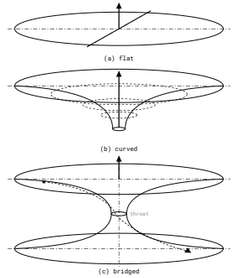

09 effects — hrm_09

empty `[ pad ]`	jump into "add effect"
filled `[ pad ]`	jump into "edit effect" (any pad exits)
`[ pad ]`	mute effect in this pattern
`[ effects ]` + `[ pad ]`	mute effect in all patterns
`[ effects ]` again	toggle parameter view ← → fx rack
`[ encoder ]` on slot	context menu: edit, copy, paste, delete (paste works track to track)
`[ encoder ]` on param	global value ← → **pattern-only value**
`[ y ]`	**modmatrix**, 4 lanes; `[ pad ]` picks a lane
`[ pad 2 · 6 · 10 · 14 ]`	lane's attenuverter / polarity / offset (fig. 01)

10 seq — hrm_10

`[ pad ]`	launch sequence (waits for sync)
`[ x ]` + `[ pad ]`	append to song chain
`[ x ]` tap	clear the chain
`[ x ]` + turn `[ encoder ]`	sync: modulo, bars, shortest / longest, same as tr; push+turn = step precise
`[ y ]` + turn `[ encoder ]`	run: sync / instant, restart / free
live `[ pad ]` + empty `[ pad ]`	duplicate the playing sequence
turn › push `[ encoder ]`	chain stopped: jump to any chain step
`[ seq ]` `[ seq ]`	straight to project save / load

11 on air — hrm_11


turn `[ encoder ]`	lowest note on the pads
`[ x ]` / `[ y ]`	octave shift
`[ rec ]`	record what you play
mod track	pads become 16 fixed mod values
exit	`[ step ]` or any mode button

_fig.03 : front panel

01–11 = sections · 13–18 = hardware

`[ 01 ]` **_play :** hold = bpm
`[ 02 ]` **_rec :** hold = rec settings
`[ 03 ]` **_x :** zoom, rack, voices, song
`[ 04 ]` **_encoder :** turn / push
`[ 05 ]` **_pad :** matrix, 16 pads
`[ 06 ]` **_cv 1–8 _gate 1–8**
`[ 07 ]` **_tr 1–8 :** track switches
`[ 08 ]` **_track**
`[ 09 ]` **_effects**
`[ 10 ]` **_seq**
`[ 11 ]` **_step**

`[ 13 ]` **_cv a–d :** ins · a/b, c/d
`[ 14 ]` **_usb device :** usb in
`[ 15 ]` **_usb host :** out
`[ 16 ]` **_midi :** in · out
`[ 17 ]` **_reset _clock :** outs
`[ 18 ]` **_y :** length, matrix, settings, run

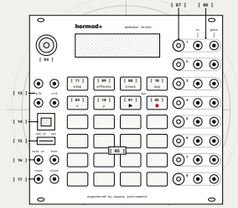

_where things hide

12 · hrm_12

global settings `[ track ]` › `[ y ]`

- `sync in` clock source, `[ cv a–d ]` reset / play / rec, clock div
- `sync out` clock + transport per port, `[ reset ]` mode, `[ clock ]` rate
- `midi in` active-track port / channel, filters, pc › seq
- `midi thru` port-to-port copies
- `cv/gate in` `[ cv a–d ]` routing, range, pitch offset
- `misc` autoload, leds, hold time, smart overdub, follow playhead
- `rec` same as hold `[ rec ]`
- `tuner` turn `[ encoder ]` to pick `[ cv a–d ]`
- `monitor` cv in › turn right: midi in › jitter
- `custom scales` 16 user scales for the scale effect
- `save` nothing above sticks until you save
- `info` os version, cpu / ram

quick routes

- `rec options` hold `[ rec ]`
- `tempo + sync` hold `[ play ]`
- `modmatrix` `[ effects ]` › `[ y ]`
- `voice layouts` `[ track ]` › `[ x ]`
- `hold threshold` `[ track ]` › `[ y ]` › misc
- `seq copy` `[ seq ]` › push `[ encoder ]` (across projects)

per-track config hold

`[ tr 1–8 ]`

- `player` quantize, apply sustain, transpose, mute affects input
- `inputs` midi port + channel, mod cc, `[ cv a–d ]` note / mod in, generator trigs
- `outputs` midi port + channel, mod 1–4 / pitchbend / aftertouch destinations
- `cv` `[ gate ]` retrig, poly allocator, vloct · 1.2 v · hz/v, finetune, bend range, `[ cv ]` min / max

transpose leader = tr8 midi, always. enable player › transpose on it, then on followers.

pattern edit `[ step ]` › push `[ encoder ]`

- `copy / paste` whole track, or per lane (with page variants)
- `delete` per event lane
- `generator` randomize all, or just pitch / length / velocity
- `gen settings` grid, density, pitch / length / velocity ranges

projects `[ seq ]` › push `[ encoder ]`

- `save load` save, save as, new
- `load` delete lives in here. shortcut: `[ seq ]` `[ seq ]`
- `after load` `[ y ]` take its bpm · `[ x ]` keep current. swaps in sync, no stop.