metropolix

_travelers guide
_for mapping the metropolis

8 stages	2 + 8 tracks + mod lanes	64 presets

› then noon = 12 o'clock tags = the panel drawing

two note tracks read one set of sliders and switches · eight mod lanes · per-stage edits · 64 presets

01 what it is

mx_01

one sequence	eight stages: a pitch slider, a pulse count switch and a gate type switch each
two tracks	`trk 1` + `trk 2` play those stages their own way: order, length, clock, gates
8 mod lanes	eight more 8-stage voltage lanes, sent to an out or inside
memory	64 presets (8 banks × 8) · live settings survive power off

02 the three rows

mx_02 · fig.01

pitch	the stage's note, quantized to the scale + `[ scale ]`
pulse count	how many clock pulses the stage lasts · 1 – 8
gate type	hold = one long tied gate · multi = a gate per pulse · single = one gate · rest = none
not matching?	a pitch override, accum, aux or a loaded preset is winning · `[ exit ]` 1 s = sync to panel

10 first flight

mx_10 · first sequence

1. `[ setup ]` › clock › internal
2. `[ bpm ]` + stage 6 = 120 bpm
3. pulse count 1, gate type single on every stage
4. `trk 1` pitch + gate to a voice · `[ run ]`
5. move sliders · `[ scale ]` to pick the key
6. then `[ order ]` and pulse counts for rhythm


03 the edit pattern

mx_03 · the big idea · fig.02

1	`[ trk 1 ]` or `[ trk 2 ]` · pick the track
2	`[ edit ]` then a function: slide · skip · pitch · gate · ratch · prob · accum · cv
3	press a stage button · turn the encoder (slide + skip just toggle)
`[ alt ]` + turn	change every stage at once
undo	long-press the encoder = clear this stage · `[ alt ]` + long-press = all

__fig.02 : the edit pattern

edit › function › stage

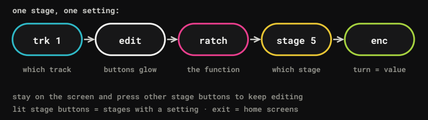

04 per-stage edits

mx_04 · edit + …

`[ slide ]` `[ skip ]`	glide into the stage (red) · drop the stage and its pulses (orange)
`[ pitch ]` `[ gate ]`	a fixed note C0 – C5 (yellow) · gate rest, 1 – 99 % or 100 % hold (green)
`[ ratch ]` `[ prob ]`	1 – 8 repeats (cyan) · 0 – 100 % chance, per stage or per pulse (blue)
`[ accum ]`	adds scale degrees each stage, pulse or ratchet (magenta) · range on `[ lim ]`
`[ cv ]`	±5 V per stage · silent until an out is set to cv + `[ a ]` `[ b ]`

05 track settings

mx_05 · the bottom-left row

`[ order ]`	21 play orders (pendulum, hopscotch, pedal point, brownian, shuffle, random …) · push = reverse
`[ len ]`	stages 1 – 8 · `[ alt ]` + turn = offset · pulses 1 – 64 or auto
`[ div ]` `[ swing ]`	track clock divide · pulse count div · swing 50 – 78 %
`[ slide ]` `[ gate ]`	slide time + type (analog · tempo · acid) · gate length + gate scale
tip	give the two tracks different lengths or orders · instant counterpoint

__fig.01 : gate types

pulse count 3 · gate length 50 %



06 alt functions

mx_06 · alt, then a stage button

`[ load ]` `[ save ]`	turn = bank (by colour) · stage button = slot · save can also clear
`[ a ]` `[ b ]`	what out A / B sends: cv lane, a mod lane, first/last pulse, new stage, root, run, ctrl
`[ clk ]` `[ mx ]`	clock out /1 – /256 + offset · gates for a gx or qx expander
`[ lim ]` `[ type ]`	accum limits, polarity, reset · cv lane = voltage or gate toggle
`[ alt ]` + `[ trk ]`	track menu: transpose ±60, slider octaves 1 – 4, invert, gate stretching

07 run · reset · loopy

mx_07 · transport

`[ run ]`	start / stop · setup sets run/stop or run/pause
`[ reset ]`	back to the start stage · hold `[ trk 1 ]` and press = that track only
`[ ∞ ]` + hold 1	loop from that stage for the loop pulses set on screen
`[ ∞ ]` + hold 2	loop between the two stages · press `[ ∞ ]` again to latch
stopped	the stage buttons play their notes like a keyboard
`[ ∞ ]` + `[ trk ]`	mute that track · or a stage button = mute that mod lane

08 mod · ctrl · aux

mx_08 · modulation

mod lanes — `[ mod ]` › `[ edit ]` + stage 1 – 8
that lane opens · stage buttons + encoder set ±5 V, push = step or ramp · press mod = its destination + track

ctrl 1 · 2 — its black button
pick a parameter and track · the knob sets the value directly

aux x y z — its button
±5 V in, attenuverter scales · offsets the value · on a gate target the knob alone flips it

randomize — alt › x · y · z
on any edit screen: x = random · y = nudge · z = back to before

__fig.03 : the panel

numbers match the legend



`pitch` **pitch sliders** · a note per stage
`pulse` **pulse count** · 1 – 8 clock pulses
`gate` **gate type** · hold · multi · single · rest
`stage` **stage buttons** · edit functions below · alt functions above
`edit` **edit** · then a function, then a stage
`alt` **alt** · then a stage button or trk button
`trk` **trk 1** · **trk 2** · **mod** · what you are editing
`ctrl` **ctrl 1** · **2** · button = assign · knob = value
`aux` **x** · **y** · **z** · cv in · attenuverter · assign button
`outs` **a** · **b** · **clk** · assignable outs + clock out

09 specs

mx_09

outs	pitch 1 V/oct · gates 0 / +5 V · A, B assignable
ins	clk · reset (or run) · aux x y z ±5 V
clock	internal 0.1 – 400 bpm · tap `[ bpm ]` · clk in or midi
midi	notes, cv + mod lanes as cc, clock · rear usb, backpack or solo kit
size	34 hp · 25 mm deep
power	95 mA +12 V · 10 mA –12 V