mimeophon

_travelers guide
_for copying time

8 zones	41.8 s longest repeat	1.3 ms shortest

› then noon = 12 o'clock tags = the panel drawing

stereo multi-zone colour audio repeater · karplus to flange to echo to 41 s loops · by tom erbe

01 what it is

mp_01

a repeater	stereo · from karplus and flange to chorus, echo and 41 s loops · no modes
always writing	input goes into every zone at once · bigger zones dig up older sound
everything talks	repeats, color and halo share one feedback network

02 zones

mp_02 · fig.01 · the window shows the zone by colour

0 – 1	microsound: stutter, flange, karplus-strong, distortion · 1.3 – 82 ms
2 – 4	delay and echo · 82 ms – 1.3 s
5 – 7	phrases and loops · up to 41.8 s in zone 7
switching	no pitch swoop · neighbours overlap 50 % and stay in time

__fig.01 : zones

zone knob



every zone records at once · smaller zones nest inside bigger ones

03 rate · skew

mp_03

rate	repeat size inside the zone · smooth, with doppler when repeats are up
[skew]	lit: rate pushes L and R apart · press again: locks the spread
clear skew	turn skew on then off with rate unmodulated
[skew]	not skewed = ping pong (inputs summed) · skewed = swap L/R feedback · window flashes
µ	doppler only · same small range in every zone · 1 V/oct in zone 0

04 repeats · color · halo

mp_04

repeats	1 to beyond ∞ · with hold on it picks the start point
color	oil can → bbd → tape → clean → early digital · ~3:00 = most neutral
halo	smears repeats in stereo · high settings feed back into the repeats
mix	live ↔ repeats · with mix cv patched it becomes the cv attenuator

09 first flight

mp_09 · first echo

1. audio into L[M] · both outs to the mixer
2. zone to 3 · mix 11:00
3. repeats noon · color 3:00
4. turn rate to hear the doppler
5. clock into tempo for clean ratios
6. press [skew] and turn rate

05 tempo

mp_05 · fig.02

tempo	clock in (0.25 – 50 Hz) · rate snaps to ratios, no doppler
1/1	rate ~12:30 · ccw up to ×2 · cw down to /2 · zones ×/÷ by 2
tap	two pulses set it · holds until you move rate
rate out	pulses at the current rate · both sides when skewed

__fig.02 : tempo ratios

clock in tempo



change zone to ×/÷ these by powers of 2 · skew = two ratios at once

06 hold · flip

mp_06 · buttons + gates

[hold]	nothing in or out · everything else still moves it · non-destructive
[flip]	repeats backwards · zones 0 – 1 = "total protonic reversal"
gates	hold and flip jacks toggle on 2.5 V

07 hidden moves

mp_07

[flip] + [hold]	input gain, mix full dry: blue –3 · green 0 · orange +3 · red +6 dB
clear zones	mix and repeats fully ccw (fw mp70 +)
firmware	power-on window colours · mp86 = teal / red

10 patch ideas

mp_10 · manual

karplus string — zone 0
short envelope into L · pitch cv to µ · repeats ~1:00 sets decay


dub echo — zone 3 – 5
repeats noon, halo up, color full · ride repeats to max and back

back and forth — rate out › flip
repeats travel forward and backward on their own

filter-verb — zone 0
mix full cw, repeats + rate ccw · color = filter, halo = air

__fig.03 : the panel

numbers match the legend

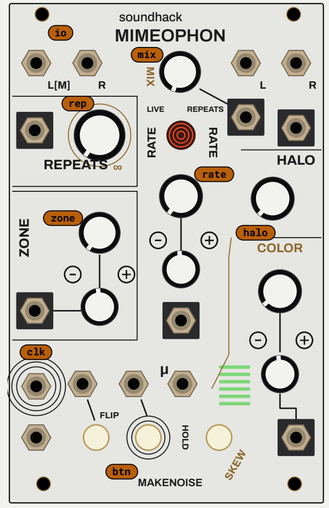

- io **in** · **out** · stereo · L[M] feeds both
- mix **mix** · live ↔ repeats + cv
- rep **repeats** · 1 → ∞ · start point when held
- zone **zone** · 0 – 7 · window colour
- rate **rate** · **µ** · size in zone · doppler in
- halo **halo** · **color** · stereo smear · tone
- btn **flip** · **hold** · **skew** · reverse · freeze · …
- clk **tempo** · **rate out** · clock in · pulses out

08 specs

mp_08

size	16 hp
power	100 mA +12 V · 10 mA –12 V
cv	0 – 8 V · µ ±3 V · gates 2.5 V